

Fujitsu KD03234-C520

Fujitsu F53/F56 Cash Cassette User Manual

Model: KD03234-C520 | Brand: Fujitsu

1. PRODUCT OVERVIEW

This manual provides essential information for the proper use, installation, and maintenance of the Fujitsu KD03234-C520 Cash Cassette. This cash cassette is specifically designed for compatibility with Fujitsu F53 and F56 cash dispensers, ensuring seamless integration and reliable performance in cash handling operations.



Figure 1: The Fujitsu KD03234-C520 Cash Cassette. This image shows the black rectangular cassette with a green lever visible on the top surface and a label on the left side indicating the model number.

2. KEY FEATURES

- **Compatibility:** Specifically engineered for use with Fujitsu F53 and F56 cash dispensers.
- **Durable Construction:** Built with robust materials to withstand frequent use in demanding environments.
- **Secure Design:** Features mechanisms to securely hold and dispense cash, minimizing risk of tampering.

- **Easy Integration:** Designed for quick and straightforward installation and removal from compatible dispensers.

3. SETUP INSTRUCTIONS

3.1 Unpacking

1. Carefully remove the cash cassette from its packaging.
2. Inspect the cassette for any signs of damage during transit. If damage is found, contact your supplier immediately.
3. Retain the original packaging for future storage or transport.

3.2 Installation into Cash Dispenser

1. Ensure the cash dispenser is powered off and disconnected from the main power supply before installation.
2. Locate the cash cassette bay within your Fujitsu F53 or F56 dispenser. Refer to your dispenser's manual for exact location.
3. Align the cash cassette with the guides in the bay.
4. Gently slide the cassette into the bay until it clicks securely into place. Do not force the cassette.
5. Verify that the cassette is fully seated and locked.
6. Reconnect the dispenser to power and turn it on. The dispenser should recognize the newly installed cassette.

4. OPERATING PROCEDURES

4.1 Loading Cash

1. Remove the cash cassette from the dispenser (if installed).
2. Open the loading mechanism of the cassette according to its design (e.g., by pressing a release button or lever).
3. Carefully stack the currency notes into the designated compartment, ensuring they are neatly aligned and not creased or damaged.
4. Do not overfill the cassette beyond its maximum capacity. Refer to the dispenser's specifications for note limits.
5. Close the loading mechanism securely.
6. Reinstall the loaded cassette into the dispenser as described in Section 3.2.

4.2 Dispensing Cash

Cash dispensing operations are controlled by the Fujitsu F53/F56 cash dispenser itself. The cassette acts as the storage and feeding mechanism. Ensure the cassette is properly loaded and installed for the dispenser to function correctly.

- Ensure the dispenser is powered on and operational.
- Follow the instructions on the dispenser's interface to initiate a cash withdrawal or dispensing operation.
- The cassette will automatically feed notes as requested by the dispenser.

5. MAINTENANCE

5.1 Cleaning

- Regularly inspect the cassette for dust, lint, or debris, especially around the note feeding mechanisms.
- Use a soft, lint-free cloth slightly dampened with water or a mild, non-abrasive cleaning solution to wipe down the exterior surfaces.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the cassette's finish or internal components.
- Ensure the cassette is completely dry before reinstallation or storage.

5.2 Storage

- When not in use, store the cash cassette in a clean, dry, and temperature-controlled environment.
- Keep the cassette away from direct sunlight, extreme temperatures, and high humidity.
- If possible, store the cassette in its original packaging to protect it from dust and physical damage.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with the cash cassette. For more complex issues related to the cash dispenser itself, refer to the Fujitsu F53/F56 dispenser's user manual.

Problem	Possible Cause	Solution
Cassette not recognized by dispenser	Not fully inserted; dirty contacts; dispenser error.	Ensure cassette is fully seated. Clean contacts on cassette and dispenser. Restart dispenser.
Notes jamming during dispensing	Overfilled cassette; damaged notes; foreign objects; worn rollers (in dispenser).	Remove some notes. Replace damaged notes. Inspect cassette for debris. Consult dispenser manual for roller maintenance.
Difficulty inserting/removing cassette	Misalignment; obstruction.	Ensure proper alignment with guides. Check for any obstructions in the bay. Do not force.

7. TECHNICAL SPECIFICATIONS

Specification	Detail
Model Number	KD03234-C520
Brand	Fujitsu
Compatibility	Fujitsu F53 and F56 Cash Dispensers
Item Weight	Approximately 10 pounds (4.5 kg)
Manufacturer Part Number	KD03234-C520
ASIN	B01M5KO5CK
Date First Available	November 4, 2016

8. WARRANTY AND SUPPORT

For specific warranty information regarding your Fujitsu KD03234-C520 Cash Cassette, please refer to the documentation provided at the time of purchase or contact your authorized Fujitsu dealer or service provider.

For technical support, service, or to order replacement parts, please contact Fujitsu customer support or your product supplier. Ensure you have your model number (KD03234-C520) and any relevant purchase details ready when contacting support.

Note: This cash cassette is designed for professional use within compatible Fujitsu cash dispensers. Any unauthorized modification or use outside of its intended purpose may void the warranty and could lead to malfunction or damage.

© 2024 Fujitsu. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question