



[Manuals.plus](#) /

> [Cornat](#) /

> Cornat Premium 4 Toilet Seat Instruction Manual KSPREMSC400

## Cornat KSPREMSC400

# Cornat Premium 4 Toilet Seat Instruction Manual

Model: KSPREMSC400

## INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your Cornat Premium 4 Toilet Seat. Please read these instructions carefully before installation and retain them for future reference.



*Image: Top-down view of the Cornat Premium 4 Toilet Seat, showcasing its clean, white design and integrated hinges.*

## SPECIFICATIONS

<b>Model</b>	KSPREMSC400
<b>Brand</b>	Cornat

<b>Material</b>	Duroplast
<b>Color</b>	White
<b>Dimensions (L x W)</b>	17.05 inches x 14.33 inches (approx. 43.3 cm x 36.4 cm)
<b>Features</b>	Slow-close mechanism, Quick-Up removable for cleaning, Rust-free stainless steel hinges, Easy top mounting, Universal fit.

# PRODUKT-ABMESSUNGEN

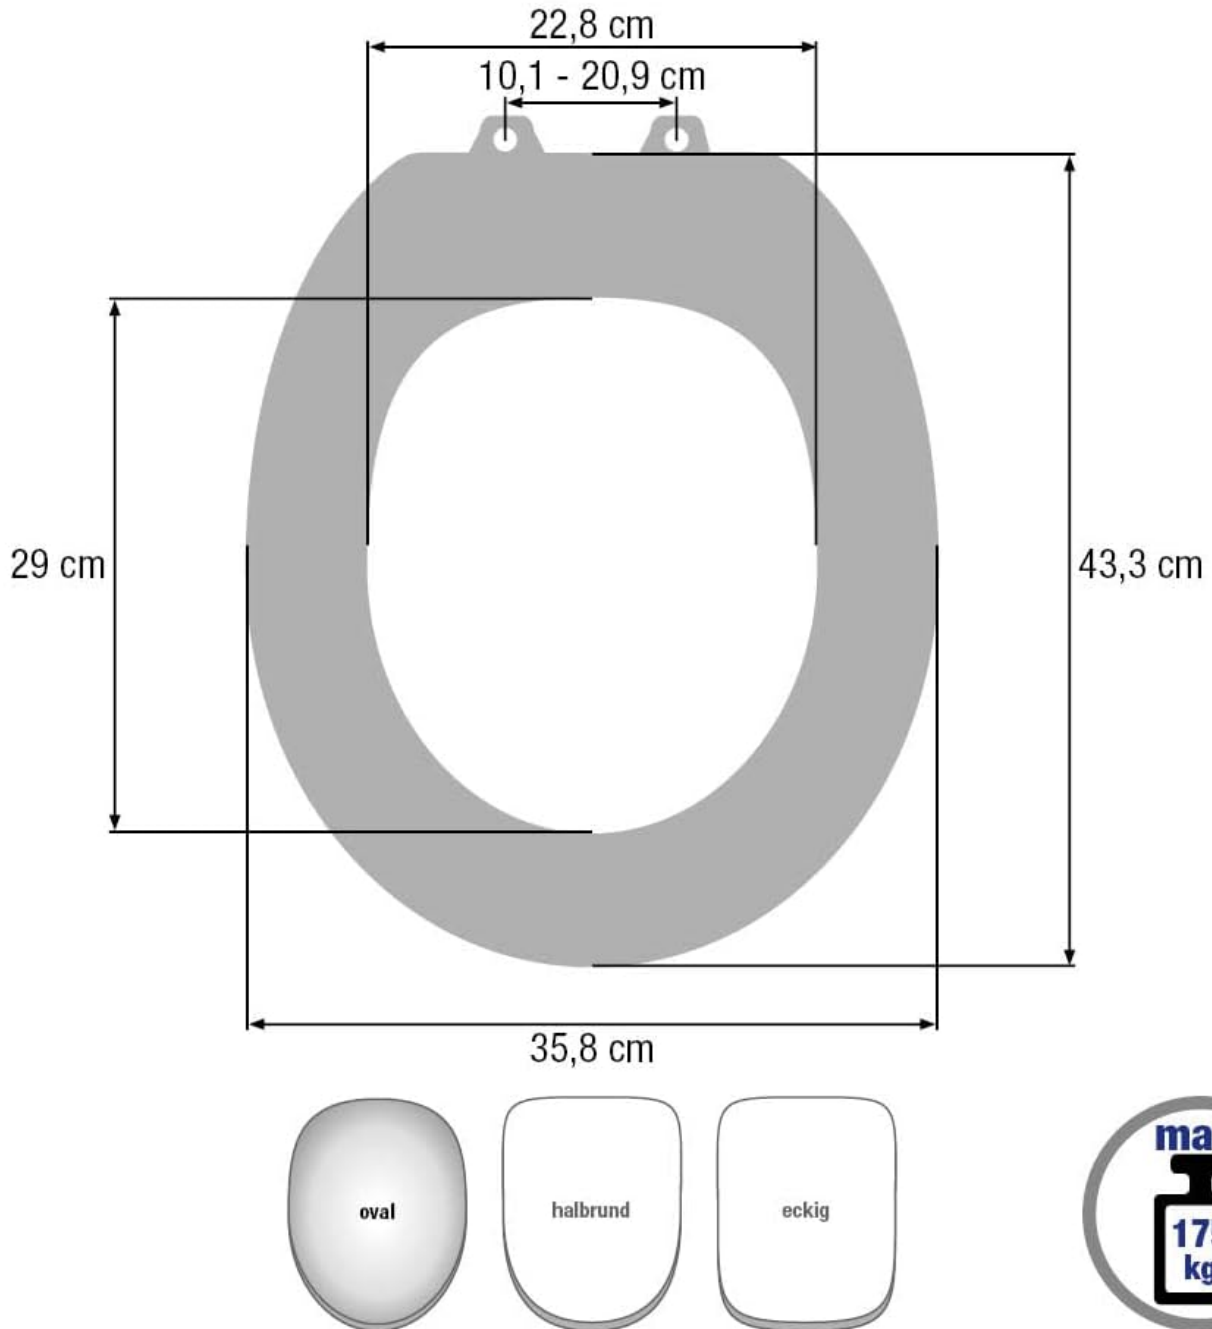


Image: Technical drawing illustrating the dimensions of the Cornat Premium 4 Toilet Seat, including length, width, and hinge spacing.

## SETUP AND INSTALLATION

## Package Contents:

- Cornat Premium 4 Toilet Seat (Lid and Ring)
- Mounting hardware (rust-free stainless steel hinges, screws, washers, nuts)
- 2 cover pads
- 4 ring buffers

## Tools Required:

- Screwdriver (appropriate for mounting screws)
- Measuring tape (optional, for fit verification)

## Installation Steps (Easy Mounting from Above):

1. **Prepare the Toilet Bowl:** Ensure the toilet bowl is clean and dry where the seat will be installed. Remove any old toilet seat and mounting hardware.
2. **Insert Mounting Posts:** Place the mounting posts (hinges) into the holes on the toilet bowl. Ensure the rubber gaskets are correctly positioned to prevent movement.
3. **Secure Mounting Posts:** From above, insert the screws through the hinge bases and tighten them. The design allows for easy tightening without needing access from underneath the bowl. Do not overtighten.
4. **Attach Toilet Seat:** Align the toilet seat's hinge receivers with the secured mounting posts. Gently press down until the seat clicks into place.
5. **Verify Fit:** Check that the seat is centered and stable. Adjust the mounting posts if necessary before fully tightening.

# MONTAGE VON OBEN



*Image: Illustration of the "Montage von oben" (mounting from above) feature, showing how the hinges are secured directly from the top of the toilet bowl.*

## OPERATING INSTRUCTIONS

### Slow-Close Mechanism:

The Cornat Premium 4 Toilet Seat is equipped with an integrated slow-close mechanism. To close the seat or lid, simply push it gently downwards. The mechanism will engage, allowing the seat and lid to lower softly and silently without slamming.



*Image: Visual representation of the "Absenkautomatik" (slow-close mechanism), depicting the toilet seat and lid gently lowering.*

## CARE AND MAINTENANCE

### Regular Cleaning:

Clean the toilet seat regularly with mild soap and water. Use a soft cloth or sponge. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the Duroplast surface and the stainless steel hinges.

### Quick-Up Removable Feature for Thorough Cleaning:

For thorough cleaning of the toilet bowl and the seat itself, the Cornat Premium 4 features a "Quick-Up" removal function:

1. **Lift the Seat:** Lift the toilet seat and lid to an upright position.
2. **Press Release Buttons:** Locate the release buttons or levers near the hinges (often on the underside or side of the hinge covers). Press these buttons simultaneously.

3. **Lift Off:** While holding the buttons, gently lift the entire toilet seat assembly straight up from the mounting posts.
4. **Clean:** Clean the toilet seat and the exposed mounting posts and toilet bowl area.
5. **Reattach:** Align the seat's hinge receivers with the mounting posts and press down firmly until it clicks back into place. Ensure it is securely fastened before use.

## „QUICK UP & CLEAN“- FUNKTION



*Image: Step-by-step visual guide demonstrating the "Quick Up & Clean" function, showing how to detach the toilet seat from its hinges for easy cleaning and reattachment.*

### **Antibacterial Properties:**

The Duroplast material of the Cornat Premium 4 Toilet Seat is designed to be antibacterial, contributing to a hygienic bathroom environment. Regular cleaning as described above will maintain these properties.

# ANTIBAKTERIELL



*Image: A clean bathroom setting featuring the Cornat toilet seat, emphasizing its antibacterial material for enhanced hygiene.*

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Seat is loose or wobbly.	Mounting screws are not tight enough.	Remove the seat using the Quick-Up function. Tighten the mounting screws firmly from above. Reattach the seat.
Slow-close mechanism not working properly.	Hinges are dirty or damaged.	Remove the seat and clean the hinges thoroughly. If still not working, inspect for damage. Contact customer support if damaged.

Seat does not fit the toilet bowl.	Toilet bowl dimensions are incompatible.	Verify your toilet bowl dimensions against the product specifications (17.05"L x 14.33"W). This seat is designed for universal fit, but extreme variations may occur.
------------------------------------	--	---

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Cornat website or contact your retailer. Keep your proof of purchase for warranty claims.

### Contact Information:

- **Brand:** Cornat
- **Manufacturer:** CORNAT
- **Website:** [www.cornat.de](http://www.cornat.de) (Note: This is a placeholder link, please refer to official product documentation for correct support channels.)

