

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DGT](#) /

› [DGT 1002 With Bonus Time Digital Chess Clock Instruction Manual](#)

DGT 1002

DGT 1002 With Bonus Time Digital Chess Clock

Model: 1002 | Brand: DGT

1. PRODUCT OVERVIEW

The DGT 1002 is a user-friendly digital chess clock designed for chess players of all levels. It features a single-period countdown timer and the ability to add a fixed amount of bonus time before each move. Its compact design and clear digital display make it an ideal choice for various chess environments.

- **Simplicity:** Extremely easy to set and use, requiring only '+' or '-' button presses to configure time.
- **Bonus Time Feature:** Allows for a fixed amount of additional time per move, enhancing gameplay.
- **Compact Design:** Small footprint fits neatly alongside any chessboard.
- **Clear Display:** Large display with clear digits ensures easy readability.



Image 1: DGT 1002 Digital Chess Clock with its retail packaging, showcasing the clock's display and control buttons.

2. PACKAGE CONTENTS

- 1 x DGT 1002 Digital Chess Clock
- 2 x AAA Batteries
- 1 x Instruction Manual

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the underside of the clock.
2. Open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

3.2 Power On/Off

To turn the clock ON, slide the ON/OFF switch located on the bottom of the device to the 'ON' position. To turn the clock OFF, slide the switch to the 'OFF' position.



Image 2: Underside of the DGT 1002 clock, highlighting the battery compartment and the ON/OFF switch for power control.

4. OPERATING INSTRUCTIONS

4.1 Setting Time Controls

The DGT 1002 offers simple time setting for both players and a bonus time option. The clock features a central rocker bar to switch turns and dedicated buttons for time adjustment.

1. **Initial Time Setting:** With the clock on, use the '+' and '-' buttons to adjust the initial time for each player. The display will show the time in minutes and seconds.
2. **Bonus Time Setting:** The clock supports a fixed bonus time. After setting the main time, you can adjust the bonus time using the '+' and '-' buttons. This adds a set amount of time to a player's clock after each move.
3. **Confirm Settings:** Once the desired times are set, press the central play/pause button to confirm and exit the setting mode.

4.2 Playing a Game

1. **Start Game:** After setting the time, press the central play/pause button to start the game. The clock for the first player will begin counting down.
2. **Switching Turns:** After making a move, press the rocker bar on your side of the clock. This stops your clock and starts your opponent's clock.
3. **Pausing the Game:** To pause the game, press the central play/pause button. The clocks will stop. Press it again to resume.

4.3 Official Product Videos

Watch these official videos from the seller for a visual guide on setting up and operating your DGT 1002 chess clock.

Chess Clock Setting Guide

This video provides a comprehensive guide on how to set various timing rules and bonus options on a digital chess clock, demonstrating the button presses and display changes.

LEAP PQ9921 Chess Clock Overview

An overview of the LEAP PQ9921 chess clock, demonstrating its features, including the on/off switch, setting modes for counting up, bonus time, and delay, and how to exit settings.

LEAP Digital Chess Clock Timer (Preview)

A short preview video showcasing the LEAP digital chess clock timer in action, demonstrating its basic functionality during a game.

5. CARE AND MAINTENANCE

- Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Storage:** Store the clock in a dry place away from extreme temperatures and direct sunlight.
- Battery Care:** Remove batteries if the clock will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

- Display Not Working:** Check if batteries are correctly installed and have sufficient charge. Replace if necessary.
- Buttons Unresponsive:** Ensure the clock is not in a paused or locked state. Try turning the device off and on again.
- Incorrect Time Display:** Re-enter the time settings as described in Section 4.1.

7. SPECIFICATIONS

Brand	DGT
Model Number	43211-4932
Color	Black
Material	Plastic
Product Dimensions	7.19 x 16.61 x 5.41 inches
Item Weight	0.035 ounces
Screen Size	2 Inches
Batteries Required	2 AAA batteries

8. WARRANTY AND SUPPORT INFORMATION

For warranty claims, technical support, or further assistance, please refer to the contact information provided on the product packaging or the official DGT website. Keep your purchase receipt as proof of purchase.