

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [JustFine](#) /

> [JustFine Replacement Remote Control Instruction Manual for Samsung TVs \(Models: LNT3242HX/XAA, LNT466F, LN46S81BX/XAP, HLT5676SXXAC, HPS6373, LNT4065F, LNT4069FX/XAA\)](#)

JustFine LYSB01M692QEN

JustFine Replacement Remote Control Instruction Manual

Model: LYSB01M692QEN

[Overview](#)

[Compatibility](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Warranty &](#)

[Specifications](#)

[Support](#)

1. PRODUCT OVERVIEW

This manual provides instructions for the JustFine replacement remote control, designed for use with various Samsung Plasma, LCD, and LED HDTV television models. This remote is pre-programmed and does not require additional setup beyond battery installation.



Image 1.1: Front view of the JustFine Replacement Remote Control. This image shows the general layout and design of

the remote control.

2. COMPATIBILITY

This replacement remote control is compatible with the following Samsung TV models:

- LNT3242HX/XAA
- LNT466F
- LN46S81BX/XAP
- HLT5676SXXAC
- HPS6373
- LNT4065F
- LNT4069FX/XAA
- Other compatible Samsung Plasma, LCD, and LED HDTV TV models.

Please verify your TV model number to ensure compatibility.

3. SETUP

The remote control is pre-programmed and ready for use upon battery installation. No additional programming is required.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 3.1: Back view of the remote control, highlighting the battery compartment. The cover for the battery compartment is visible at the bottom section of the remote.

Note: Batteries are not included with the remote control. Always use new batteries and dispose of old batteries responsibly.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready to operate your compatible Samsung TV. Point the

remote control directly at the TV's infrared sensor.

4.1 Basic Functions

- **Power Button:** Press to turn the TV on or off.
- **Channel Up/Down:** Use to change TV channels.
- **Volume Up/Down:** Use to adjust the TV volume.
- **Mute Button:** Press to mute or unmute the TV sound.
- **Input/Source Button:** Press to cycle through available input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9):** Use to directly enter channel numbers.
- **Menu Button:** Access the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate through TV menus and confirm selections.

Refer to your Samsung TV's original manual for specific functions and menu navigation details, as button labels and functions may vary slightly depending on the TV model.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote control's performance degrades or stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).

5.2 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

5.3 Storage

Store the remote control in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote is too far from TV.	<ul style="list-style-type: none">◦ Replace batteries with new ones, ensuring correct polarity.◦ Remove any objects blocking the line of sight between the remote and the TV's IR sensor.◦ Move closer to the TV.
Some buttons not responding	Dirty contacts under buttons. Remote malfunction.	<ul style="list-style-type: none">◦ Clean the remote control as described in the Maintenance section.◦ If the issue persists, the remote may be faulty.

Problem	Possible Cause	Solution
Remote works intermittently	Weak batteries. Interference.	<ul style="list-style-type: none">◦ Replace batteries.◦ Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the IR signal.

If troubleshooting steps do not resolve the issue, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	JustFine
Model Number	LYSB01M692QEN
Connectivity Technology	Infrared (IR)
Compatible Devices	Samsung Plasma, LCD, LED HDTV TVs
Max Number of Supported Devices	1 (Television)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	4.53 x 1.57 x 1.38 inches
Item Weight	2.72 ounces
Special Feature	Ergonomic design

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This product comes with a **30-day quality warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as intended under normal use. It does not cover damage caused by misuse, accidents, or unauthorized modifications.

8.2 Customer Support

For any problems, questions, or warranty claims, please contact us via email. Our customer support team is available to assist you.

Please refer to your purchase documentation or the seller's contact information for the specific email address.

