

[Manuals.plus](#) /

› [Satisfyer](#) /

› Satisfyer Double Plus Vibrator Instruction Manual

Satisfyer PARTNERPLUS

Satisfyer Double Plus Vibrator Instruction Manual

Model: PARTNERPLUS

1. INTRODUCTION

The Satisfyer Double Plus is a versatile vibrator designed for both individual and partner use. It features a U-shaped design, two powerful motors, and multiple vibration programs to enhance experiences. This manual provides essential information for the safe and effective operation and maintenance of your device.



Figure 1: The Satisfyer Double Plus device.

2. SAFETY INFORMATION

- **Material Safety:** The device is made of body-safe silicone. Clean thoroughly before and after each use.
- **Lubrication:** Use only water-based lubricants with this device. Oil-based or silicone-based lubricants can damage the silicone material.
- **Charging:** Use only the provided magnetic USB charging cable. Do not use the device while charging.
- **Water Resistance:** The device is waterproof (IPX7 rated) and can be used in water. Ensure the charging port is dry before connecting the charger.
- **Storage:** Store in a clean, dry place away from direct sunlight and extreme temperatures. Keep out of reach of children.
- **Disposal:** Dispose of the device responsibly according to local electronic waste regulations.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Satisfyer Double Plus Vibrator
- 1 x Magnetic USB Charging Cable
- 1 x Instruction Manual (this document)



Figure 2: Satisfyer Double Plus retail packaging.

4. SETUP

4.1 Initial Charging

1. Locate the magnetic charging contacts on the device.
2. Connect the magnetic USB charging cable to the device's charging contacts. Ensure a secure connection.
3. Plug the USB end of the cable into a standard USB power adapter (not included) or a computer's USB port.
4. The indicator light on the device will illuminate during charging. A full charge typically takes approximately 2-3 hours.
5. The indicator light will change or turn off when charging is complete.



Figure 3: Close-up of the device's control button and magnetic charging contacts.



Figure 4: The magnetic USB charging cable.

4.2 Initial Cleaning

Before first use, clean the device thoroughly with warm water and a mild, toy-safe cleaner. Rinse well and allow to air dry completely.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on, press and hold the control button (located on the top surface) for approximately 2 seconds until the device vibrates.
- To power off, press and hold the control button for approximately 2 seconds until the device stops vibrating.

5.2 Changing Vibration Programs

- Once powered on, short press the control button to cycle through the 10 available vibration programs.
- Each short press will switch to the next program.

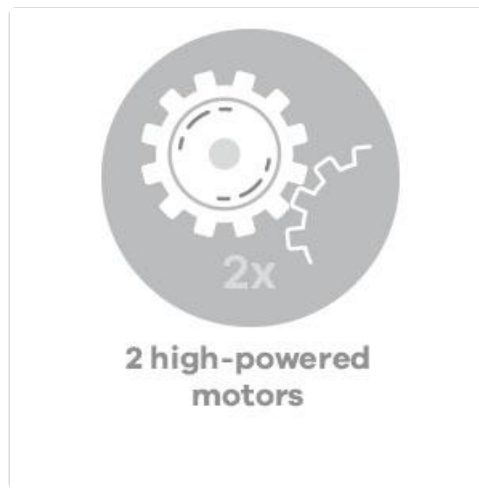 


Figure 5: The device offers 10 vibration programs.

5.3 Usage for Couples

The U-shaped design is intended to provide simultaneous stimulation for both partners during intimate moments. One arm of the device is positioned internally, while the other rests externally, targeting sensitive areas for shared experiences.

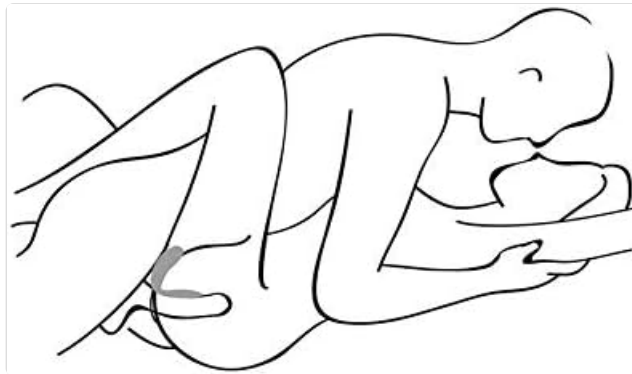 


Figure 6: Illustration of couple use.



Figure 7: Icon for partner use.

5.4 Usage for Individuals

The device can also be used for individual pleasure, with its flexible design allowing for targeted external stimulation.



Figure 8: The device is also suitable for individual use.

5.5 Product Features Overview

PRODUCT FEATURES

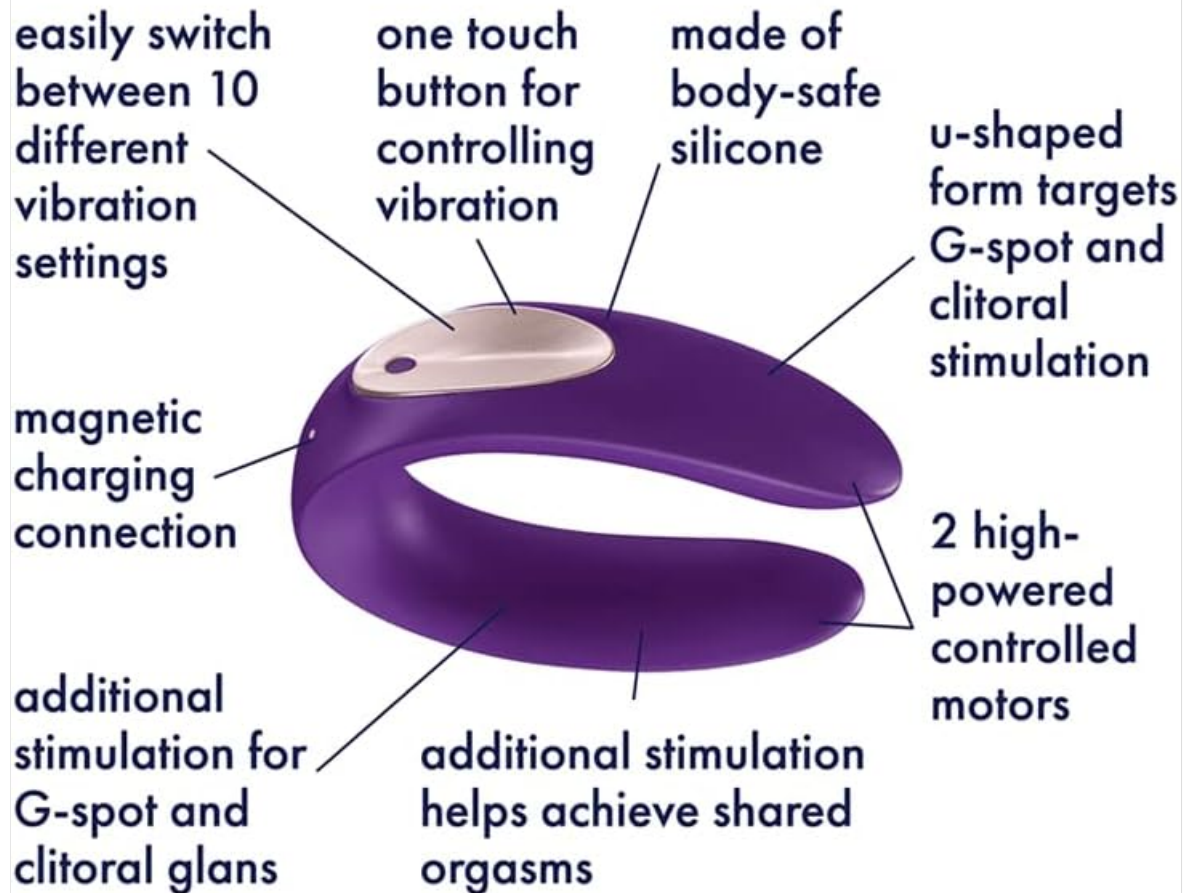 


Figure 9: Key product features.

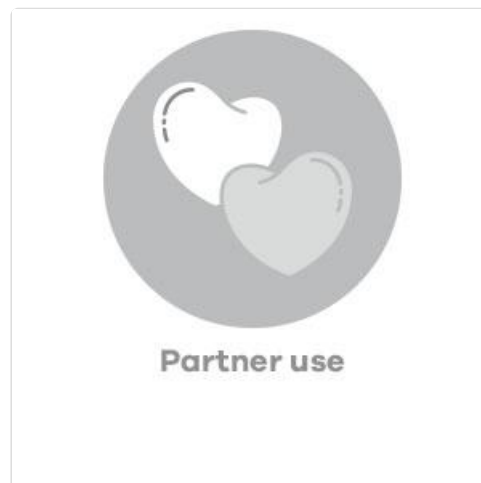 


Figure 10: Two high-powered motors provide strong vibrations.

6. MAINTENANCE

6.1 Cleaning

Always clean your Satisfyer Double Plus before and after each use. Use warm water and a mild, toy-safe soap or specialized toy cleaner. Rinse thoroughly to remove all soap residue and allow to air dry completely before storing.



Figure 11: The device is waterproof (IPX7) for easy cleaning.

6.2 Storage

Store the device in a clean, dry, and dust-free environment. Avoid direct sunlight and extreme temperatures. Keep it separate from other silicone products to prevent material degradation.

7. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. If the battery is depleted, it may take a few minutes of charging before it responds.
- **Device not vibrating:** Check if the device is powered on. If it is, try cycling through the vibration programs. If still unresponsive, ensure it is fully charged.
- **Charging issues:** Ensure the magnetic charging cable is securely connected to both the device and the power source. Check if the USB power adapter is functioning correctly. Clean the charging contacts on both the device and the cable to remove any debris.
- **Weak vibrations:** The battery may be low. Charge the device fully.

8. SPECIFICATIONS

Feature	Detail
Model Number	PARTNERPLUS
Material	Silicone
Color	Partner Plus (Purple)
Dimensions (L x W x H)	3 x 0.75 x 2 inches
Weight	0.04 ounces
Battery	1 Lithium Ion battery (rechargeable)
Vibration Programs	10
Water Resistance	IPX7 (Waterproof)

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The Satisfyer Double Plus comes with a 15-year product protection guarantee. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation included with your product or visit the official Satisfyer website.



Figure 12: 15-year product protection.

9.2 Customer Support

For further assistance, technical support, or warranty inquiries, please contact Satisfyer customer service through their official website or the contact information provided in your product packaging.

10. PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: Official product video demonstrating the features and use of the Satisfyer Double Plus device.

© 2025 Satisfyer. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01M6TJISQ>

More documents and user manuals: <https://manuals.plus/>