

[Manuals.plus](#) /

> [NAPA](#) /

> NAPA Gold 100010 Oil Filter Instruction Manual

NAPA 100010

NAPA Gold 100010 Oil Filter Instruction Manual

Your guide to proper installation and maintenance

INTRODUCTION

This instruction manual provides essential information for the safe and effective installation and maintenance of your NAPA Gold 100010 Oil Filter. Proper installation and regular maintenance are crucial for the longevity and performance of your vehicle's engine. Please read all instructions carefully before proceeding with installation.

PRODUCT OVERVIEW

The NAPA Gold 100010 Oil Filter is designed to efficiently remove contaminants from your engine oil, ensuring clean oil circulates through the engine. This helps protect engine components from wear and tear, extending engine life. The filter typically consists of a pleated filter media housed within a durable casing, along with a sealing O-ring to prevent leaks.



Image showing two NAPA Gold 100010 oil filter elements, one standing upright and one lying horizontally, alongside a black rubber O-ring. These components are essential for effective oil filtration and sealing.

SETUP AND INSTALLATION

Installing an oil filter requires basic mechanical knowledge and adherence to safety precautions. If you are unsure about any step, consult a qualified mechanic.

Safety Precautions:

- Always work on a cool engine to avoid burns.
- Use appropriate personal protective equipment, including gloves and eye protection.
- Ensure the vehicle is securely supported on jack stands if lifted.
- Dispose of used oil and filters responsibly according to local regulations.

Installation Steps:

1. **Prepare the Vehicle:** Park the vehicle on a level surface and engage the parking brake. Allow the engine to cool down.
2. **Locate the Oil Filter:** Refer to your vehicle's service manual for the exact location of the oil filter. It is typically near the bottom of the engine.
3. **Drain Engine Oil:** Place a drain pan under the oil drain plug. Loosen and remove the drain plug to allow the old engine oil to drain completely. Once drained, replace the drain plug and tighten it to the manufacturer's specifications.
4. **Remove Old Filter:** Place the drain pan under the oil filter. Use an oil filter wrench to loosen the old filter. Carefully unscrew the filter by hand, allowing any remaining oil to drain into the pan.
5. **Clean Mounting Surface:** Wipe the oil filter mounting surface on the engine clean with a rag, ensuring no debris or old gasket material remains.
6. **Prepare New Filter:** Apply a thin film of new engine oil to the rubber gasket (O-ring) of the NAPA Gold 100010 Oil Filter. This ensures a proper seal.
7. **Install New Filter:** Carefully screw the new filter onto the engine by hand until the gasket makes contact with the mounting surface. Then, tighten the filter an additional 3/4 to 1 full turn, or as specified by your vehicle's manufacturer. *Do not overtighten.*
8. **Add New Engine Oil:** Refill the engine with the recommended type and amount of new engine oil, as specified in your vehicle's owner's manual.
9. **Check for Leaks:** Start the engine and let it run for a few minutes. Check for any oil leaks around the new filter and the drain plug. Turn off the engine and recheck the oil level, adding more if necessary.

MAINTENANCE

The NAPA Gold 100010 Oil Filter should be replaced at every oil change interval recommended by your vehicle manufacturer. This typically ranges from every 5,000 to 15,000 kilometers (or 3,000 to 10,000 miles), or every 3 to 6 months, depending on driving conditions and oil type. Regular replacement ensures optimal engine protection and performance.

TROUBLESHOOTING

Oil Leak After Installation:

- **Cause:** Improperly tightened filter, damaged O-ring, or debris on the mounting surface.
- **Solution:** Turn off the engine. Carefully check if the filter is tightened correctly. Ensure the O-ring is properly seated.

and not pinched. Clean the mounting surface thoroughly before re-installing the filter. If the O-ring appears damaged, replace it.

Low Oil Pressure Light On:

- **Cause:** Insufficient oil level, incorrect filter, or a severe leak.
- **Solution:** Immediately turn off the engine. Check the oil level and add oil if necessary. Verify that the correct NAPA Gold 100010 filter was installed for your vehicle. Inspect for any significant oil leaks. If the light persists after these checks, seek professional assistance.

SPECIFICATIONS

Attribute	Value
Manufacturer	NAPA Filters
Brand	NAPA
Model Number	100010
Item Weight	68 g
Parcel Dimensions	17.4 x 6.9 x 6.7 cm
Product Grade	Performance Part
UPC	765809226234

WARRANTY AND SUPPORT

For specific warranty information regarding your NAPA Gold 100010 Oil Filter, please refer to the documentation provided with your purchase or contact NAPA directly. Warranty terms can vary based on region and retailer.

If you require further assistance or have questions not covered in this manual, please contact NAPA customer support or consult a certified automotive technician. You can often find contact information on the official NAPA website or through your local NAPA retailer.

© 2024 NAPA. All rights reserved.

This manual is for informational purposes only. Always refer to your vehicle's owner's manual for specific instructions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01M6ZT80H>

More documents and user manuals: <https://manuals.plus/>