



[Manuals.plus](#) /

› [CakCity](#) /

› CakCity Boys Camouflage LED Sport Watch Model 1197-10 Instruction Manual

CakCity 1197-10

CakCity Boys Camouflage LED Sport Watch - Model 1197-10 Instruction Manual

Your guide to setting up and using your new CakCity Sport Watch.

INTRODUCTION

This manual provides comprehensive instructions for the CakCity Boys Camouflage LED Sport Watch, Model 1197-10. Please read this manual carefully to ensure proper use and maintenance of your watch. This digital watch is designed for active use, featuring multiple functions and a durable construction.



Image: Front view of the CakCity Boys Camouflage LED Sport Watch, displaying the digital time and camouflage pattern.

PRODUCT FEATURES

- **Multifunctionality:** Includes Light, Stopwatch, Waterproofing, Shockproof design, Calendar, EL Backlight, and Alarm Clock.
- **Digital Display:** Features a fashionable sporty dial design with large numbers and a light for clear

visibility in the dark.

- **Water Resistance:** Rated 164Ft/50M, suitable for swimming and bathing in cold water.
- **Durable Design:** Built for active use, suitable for various sports and daily wear.

MULTIFUNCTIONAL CHILDREN'S CAMO WATCH

SPORT WATCH
ALARM-CHRONO
CakCity
LIGHT START
MODE SIG ALM RESET
WATER 50M RESIST

12/24 hours LED Date/Week 50M Waterproof Alarm clock Stopwatch

Image: Visual representation of the watch's key features: 12/24-hour clock, LED backlight, date/week display, 50M water resistance, alarm clock, and stopwatch.

WATCH INTERFACE AND BUTTON DISPLAY

Familiarize yourself with the watch's buttons and display areas for optimal operation.

WATCH INTERFACE AND BUTTON DISPLAY



Image: A diagram illustrating the watch's interface, labeling the 'LIGHT', 'MODE', 'START/STOP', and 'RESET' buttons, along with display indicators for Week, Date, PM, Alarm, and Time.

SETUP INSTRUCTIONS

Initial Setup

Before first use, ensure to remove any protective film from the watch screen.

PLEASE REMOVE THE PROTECTIVE FILM BEFORE USE



Image: A visual reminder to remove the protective film from the watch face before use.

Setting Time and Date

1. In normal time display mode, press the **MODE** button three times to enter time setting mode. The seconds will flash.
2. Press the **RESET** button to select the item to be adjusted (seconds, hours, minutes, month, date, week).
3. Press the **START/STOP** button to adjust the selected item.
4. Press the **MODE** button once to return to normal time display mode.

Setting the Alarm

1. In normal time display mode, press the **MODE** button twice to enter alarm mode. The hours will flash.
2. Press the **RESET** button to select hours or minutes.
3. Press the **START/STOP** button to adjust the alarm time. Pay attention to AM/PM or 24H display.
4. Press the **MODE** button once to exit alarm setting.

OPERATING INSTRUCTIONS

Using the EL Backlight

Press the **LIGHT** button (top-left) to illuminate the display for a few seconds, allowing visibility in low-light conditions.

ESSENTIAL FOR TRAVEL



Image: A comparison showing the watch display in normal light and with the EL backlight activated, highlighting its visibility in the dark.

Using the Stopwatch

1. From normal time display, press the **MODE** button once to enter stopwatch mode.
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to pause the stopwatch.
4. Press the **RESET** button to reset the stopwatch to zero.
5. Press the **MODE** button to return to normal time display.

Switching 12/24-Hour Format

In time setting mode, when adjusting the hours, press the **START/STOP** button to toggle between 12-hour (AM/PM) and 24-hour formats.

MAINTENANCE AND CARE

Water Resistance

The watch is water-resistant up to 50 meters (5 ATM), making it suitable for daily use, hand washing, rainy days, and swimming. However, to prevent damage to the waterproof seal:

- **DO NOT** press any buttons underwater.
- Keep the watch away from steam and hot water.



Image: An illustration demonstrating the 50-meter water resistance of the watch, showing its suitability for activities like washing hands, being in the rain, swimming, and bathing.

Cleaning

Wipe the watch with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used. Avoid harsh chemicals or abrasive cleaners.

TROUBLESHOOTING

Display is Blank or Faint

- Check if the battery needs replacement. The watch uses 1 CR2 battery.
- Ensure no protective film is obstructing the display.

Buttons Not Responding

- Ensure the watch is not submerged in water when attempting to press buttons.
- If the watch has been exposed to extreme temperatures, allow it to return to normal operating temperature.

Incorrect Time Display

- Follow the "Setting Time and Date" instructions to re-adjust the time.

SPECIFICATIONS

Feature	Detail
Model Number	1197-10
Product Dimensions	9.45 x 0.79 x 1.89 inches

Item Weight	3.2 ounces
Water Resistance	50M (5 ATM)
Battery Type	1 CR2 battery (included)
Date First Available	October 24, 2016
Manufacturer	CakCity



Image: A diagram showing the physical dimensions of the CakCity Sport Watch, including face diameter and band length.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your CakCity Sport Watch, please refer to the seller's contact information or the official CakCity website for assistance. Specific warranty details may vary and are typically provided with your purchase documentation.