

[Manuals.plus](#) /

› [MYMAHDI](#) /

› MYMAHDI M280 16GB MP3 Music Player Instruction Manual

MYMAHDI M280

MYMAHDI M280 16GB MP3 Music Player Instruction Manual

Model: M280

1. INTRODUCTION

Thank you for choosing the MYMAHDI M280 16GB MP3 Music Player. This device is designed to provide high-quality audio playback in a portable format. It features a 1.8-inch screen, supports various audio formats, and includes additional functions such as FM radio, voice recording, and a picture viewer. This manual will guide you through the setup, operation, and maintenance of your new MP3 player.

2. PACKAGE CONTENTS

Please check the package for the following items:

- MYMAHDI M280 MP3 Music Player
- USB Cable
- Earphones
- User's Manual (this document)
- High Valued Gift Box

3. PRODUCT OVERVIEW

Familiarize yourself with the device's physical features and controls.



Image: Front view of the MYMAHDI M280 MP3 player, showing the screen and control buttons. Also visible are the USB charging cable and a side view of the player highlighting the charging port and headphone jack.



Image: Multiple views of the MYMAHDI M280 MP3 player, including the front with screen and controls, a side profile showing the slim design, and the back panel.



Image: A close-up view of the built-in loudspeaker located on the back of the MYMAHDI M280 MP3 player.

Controls and Ports:

- **Screen:** 1.8-inch display for navigation and content viewing.

- **Navigation Pad:** Central circular pad with directional buttons (up, down, left, right), Play/Pause, Menu (M), and Volume (VOL) controls.
- **Power Switch:** Located on the side or back for turning the device On/Off.
- **USB Port:** For charging and data transfer.
- **Headphone Jack:** Standard 3.5mm port for connecting earphones.
- **Micro SD Card Slot:** For expanding storage capacity.
- **Built-in Speaker:** For audio playback without earphones.

4. SETUP

4.1. Charging the Device

Before first use, fully charge your MP3 player. Connect the provided USB cable to the player's USB port and the other end to a computer's USB port or a compatible USB wall adapter. A full charge typically takes approximately 2 hours and provides up to 70 hours of audio playback.

4.2. Inserting a Micro SD Card

The MYMAHDI M280 has 16GB of internal memory and supports external Micro SD cards up to 128GB. To insert a Micro SD card:

1. Locate the Micro SD card slot on the side of the player.
2. Gently insert the Micro SD card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, push the card inward until it clicks, then release, and it will eject.

4.3. Transferring Music and Files

To transfer files from your computer to the MP3 player:

1. Ensure the MP3 player is **powered off** before connecting it to your computer.
2. Connect the MP3 player to your computer using the provided USB cable.
3. The player will appear as a removable disk drive on your computer.
4. Drag and drop your desired music files (MP3, WMA, FLAC, APE, etc.), videos (AMV, AVI), pictures (JPEG, BMP, GIF), or e-books into the appropriate folders on the player or Micro SD card.
5. Once transfer is complete, safely eject the removable disk from your computer before disconnecting the USB cable.

Note: For video files, conversion to AMV or AVI format (resolution 128*160) may be required using a conversion tool, which might be available on the device itself when connected to a computer.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- To power on, slide the power switch to the 'ON' position.
- To power off, slide the power switch to the 'OFF' position.

5.2. Basic Navigation

Use the circular navigation pad to move through menus and select options:

- **Up/Down:** Scroll through menu items.
- **Left/Right:** Navigate within options or fast forward/rewind during playback.
- **Play/Pause (Center button):** Select an item or play/pause media.
- **M (Menu button):** Return to the previous menu or access context-sensitive options during playback.
- **VOL (Volume button):** Adjust the volume level.



Image: The screen of the MYMAHDI M280 MP3 player displaying its user interface, which has been updated for ease of use.

5.3. Music Playback

1. From the main menu, select 'Music'.
2. Browse by Artist, Album, Song, or Folder.
3. Select a song to begin playback.
4. During playback, use the navigation pad for controls: Play/Pause, Skip Forward/Back, and Volume adjustment.
5. The player supports MP3, WMA, FLAC, APE, AAC-LC, and ACELP formats. Album art is also supported.
6. To enable shuffle playback, navigate to the settings menu during music playback and select the shuffle option.

5.4. FM Radio

1. Connect your earphones, as they act as the antenna for the FM radio.
2. From the main menu, select 'FM Radio'.
3. Use the navigation controls to scan for stations or manually tune to a frequency.

5.5. Voice Recorder

1. From the main menu, select 'Record'.
2. Choose 'Start Voice Recording' to begin.
3. Press the Play/Pause button to pause or stop recording.
4. Recordings are saved automatically. The device features noise-canceling technology and can record for up to 20 hours.

5.6. Picture Viewer

1. From the main menu, select 'Pictures'.

2. Browse through your image files (JPEG, BMP, GIF).
3. Select an image to view it on the screen.

5.7. Video Playback

1. From the main menu, select 'Video'.
2. Browse your video files (AMV, AVI).
3. Select a video to begin playback.

5.8. E-book Reader



Image: The screen of the MYMAHDI M280 MP3 player displaying its e-book reading function.

1. From the main menu, select 'E-book'.
2. Browse your text files.
3. Select a file to open and read.

6. MAINTENANCE

- Keep the device dry. Avoid exposure to moisture or liquids.
- Clean the screen and body with a soft, dry cloth. Do not use abrasive cleaners.
- Avoid extreme temperatures.
- Do not drop or subject the device to strong impacts.
- Store the device in a clean, dust-free environment when not in use.

7. TROUBLESHOOTING

- **Device does not power on:** Ensure the battery is charged. Connect to a power source and try again. Check the power switch position.
- **Cannot transfer files:** Ensure the MP3 player is powered off before connecting to the computer. Try a different USB port or cable. Ensure the device appears as a removable drive.
- **Poor sound quality from built-in speaker:** The built-in speaker is designed for convenience. For optimal sound quality, use the provided earphones or other high-quality headphones.
- **Difficulty navigating menus:** The navigation system may require some practice. Refer to section 5.2 for basic navigation instructions. Repeated use will improve familiarity.

- **Video files not playing:** Ensure video files are in AMV or AVI format with a resolution of 128x160 pixels. Conversion may be necessary.
- **Micro SD card not recognized:** Ensure the card is inserted correctly and fully. Try reinserting or using a different compatible Micro SD card.

8. SPECIFICATIONS

Feature	Specification
Brand	MYMAHDI
Model Number	M280
Memory Storage Capacity	16 GB (supports up to 128 GB Micro SD card)
Screen Size	1.8 Inches
Connectivity Technology	Aux, USB
Supported Audio Formats	MP3(MP1,MP2,MP3), WMA, OGG, WAV, APE, FLAC, AAC-LC, ACELP
Supported Video Formats	AMV, AVI (requires conversion)
Supported Image Formats	JPEG, BMP, GIF
Battery Average Life	70 Hours (audio playback)
Item Weight	1.1 Ounces
Special Features	FM Radio, Voice Recorder, Built-in Speaker, E-book Reader

9. PRODUCT VIDEO OVERVIEW

Your browser does not support the video tag.

Video: An official product video showcasing the MYMAHDI M280 MP3 Player's features, including lossless sound quality, long battery life, large memory support, recording function, picture viewer, video playback, FM radio, and external speaker capabilities.

10. WARRANTY AND SUPPORT

The MYMAHDI M280 MP3 Music Player comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact MYMAHDI customer service through the retailer where you purchased the product.