

[Manuals.plus](#) /

› [Megachef](#) /

› Megachef 1.8 Quart Stainless Steel Electric Tea Kettle Instruction Manual

Megachef MGKTL-1739

Megachef 1.8 Quart Stainless Steel Electric Tea Kettle Instruction Manual

Model: MGKTL-1739 (1.8 Quarts Stainless Steel)

INTRODUCTION

Thank you for purchasing the Megachef 1.8 Quart Stainless Steel Electric Tea Kettle. This appliance is designed for quickly and safely boiling water for various hot beverages. Please read this instruction manual thoroughly before first use to ensure proper operation, maintenance, and to maximize the lifespan of your kettle.

Key features include a 1.8-quart capacity, 360-degree cordless jug design, boil-dry protection, an on/off switch with a bright LED light, and a removable, washable filter. The kettle is also BPA-free.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before use.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Extreme caution must be used when moving an appliance containing hot water.
14. Ensure the lid is securely closed before operating.

15. Do not fill above the 'MAX' line or below the 'MIN' line indicated on the water level indicator.
16. This kettle is equipped with boil-dry protection. If the kettle is accidentally switched on without water, it will automatically shut off. Allow it to cool down before refilling.

PRODUCT COMPONENTS

Your Megachef Electric Tea Kettle package includes the following items:

- 1 x Stainless Steel Electric Kettle
- 1 x Power Base (Heater)



Image: The Megachef 1.8 Quart Stainless Steel Electric Tea Kettle, showing its main body, handle, spout, lid, and water level indicator on the power base.

SETUP

1. **Initial Cleaning:** Before first use, fill the kettle to the MAX line with fresh water. Boil the water, then discard it. Repeat this process two more times to ensure the kettle is clean and free of any manufacturing residues.
2. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface. Ensure the power cord is not dangling where it can be pulled or tripped over.
3. **Filling:** Open the lid and fill the kettle with the desired amount of fresh water. Do not fill below the MIN mark or above the MAX mark on the water level indicator.

OPERATING INSTRUCTIONS

1. **Positioning:** Place the kettle securely onto the power base. The kettle features a 360-degree cordless design, allowing it to be placed on the base from any angle.
2. **Power On:** Plug the power base into a standard electrical outlet. Press the ON/OFF switch located on the handle. A bright LED light will illuminate, indicating that the kettle is heating the water.
3. **Boiling:** The kettle will begin to heat the water. Once the water reaches a rolling boil, the kettle will automatically shut off, and the LED light will extinguish.
4. **Serving:** Carefully lift the kettle from its base by the handle and pour the hot water. Exercise caution as the kettle body and steam can be very hot.
5. **Re-boiling:** If you need to re-boil water immediately after it has shut off, wait a few seconds for the internal thermostat to reset before pressing the ON/OFF switch again.



Image: The Megachef Electric Tea Kettle with its blue LED light illuminated, indicating it is actively heating water. A glass of tea is visible next to it.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will help prolong the life of your kettle.

- **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the stainless steel finish.
- **Removable Filter:** The kettle features a removable and washable filter located behind the spout. To clean, detach the filter and rinse it under running water. Reinstall once clean and dry.
- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale, fill the kettle with a mixture of equal parts water and white vinegar (or use a commercial descaling solution). Let it soak for at least 30 minutes, or boil the mixture if the buildup is severe. Discard the solution and rinse the kettle thoroughly several times with fresh water.
- **Do Not Immerse:** Never immerse the kettle or its power base in water or any other liquid.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in; power switch not pressed; boil-dry protection activated.	Ensure plug is securely in outlet; press ON/OFF switch; allow kettle to cool if boil-dry protection was activated.
Water takes too long to boil.	Limescale buildup.	Descale the kettle as per the 'Maintenance and Cleaning' section.
Kettle shuts off before boiling.	Limescale buildup affecting thermostat; kettle not properly seated on base.	Descale the kettle; ensure kettle is firmly seated on the power base.
Water tastes metallic or unusual.	First use residue; limescale buildup.	Perform initial cleaning steps again; descale the kettle.

SPECIFICATIONS

Feature	Detail
Brand	Megachef
Model Name	MGKTL-1739 (Stainless Steel Light Up)
Capacity	1.8 Quarts (1.7 Liters)
Material	Stainless Steel
Special Features	360° Cordless Jug-Kettle, Boil-Dry Protection, On/Off Switch with LED Light, Removable & Washable Filter, BPA Free
Product Dimensions	7.5 x 7.5 x 11 inches
Item Weight	2 Pounds
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Megachef customer service directly. Keep your purchase receipt as proof of purchase.

IMPORTANT WARNING



Image: A warning sign indicating that this product can expose you to chemicals including lead, known to the State of California to cause cancer. For more information, visit www.P65Warnings.ca.gov.

This product can expose you to chemicals including lead, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01M72QY4K>

More documents and user manuals: <https://manuals.plus/>