

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Whirlpool](#) /

> [Whirlpool Main Control Board W10751502 Instruction Manual](#)

Whirlpool W10751502

Whirlpool Main Control Board W10751502

Instruction Manual

INTRODUCTION

This manual provides essential information for the Whirlpool Main Control Board, model W10751502. This component is a genuine Original Equipment Manufacturer (OEM) replacement part designed to ensure the proper function and longevity of your Whirlpool appliance. It is crucial to use genuine parts to maintain the performance and safety standards set by Whirlpool Corporation.

SAFETY INFORMATION

WARNING: Risk of Electric Shock. Disconnect power before servicing.

- Always disconnect the appliance from its power source before attempting any installation, repair, or maintenance.
- Wear appropriate personal protective equipment, including safety glasses and gloves.
- Installation should only be performed by a qualified technician. Improper installation can lead to appliance malfunction, property damage, or personal injury.
- Ensure all connections are secure and correctly made before restoring power.

PRODUCT OVERVIEW

The Whirlpool Main Control Board W10751502 is a critical electronic component responsible for managing and coordinating various functions within your appliance, typically a dryer. It processes user inputs, monitors sensor readings, and controls operational cycles to ensure efficient and effective performance. As a genuine OEM part, it is manufactured to Whirlpool's exact specifications for design, durability, and compatibility.



Image of the Whirlpool Main Control Board W10751502, an essential component for controlling various functions of your appliance.

INSTALLATION AND SETUP

Due to the complexity of appliance electronics and the safety risks involved, professional installation by a certified technician is strongly recommended for the Whirlpool Main Control Board W10751502.

General Installation Steps (for qualified technicians):

1. **Disconnect Power:** Ensure the appliance is completely disconnected from the electrical supply.
2. **Access Control Board:** Carefully open the appliance's control panel or access area to locate the existing main control board.
3. **Document Connections:** Take clear photos or make detailed diagrams of all wire connections to the old control board before removal. This is crucial for correct reassembly.
4. **Remove Old Board:** Disconnect all wires and mounting hardware, then carefully remove the faulty control board.
5. **Install New Board:** Position the new Whirlpool Main Control Board W10751502 in place and secure it with the appropriate mounting hardware.
6. **Reconnect Wires:** Reconnect all wires to the new control board according to your documentation.

Double-check each connection for accuracy and security.

7. **Reassemble Appliance:** Close and secure the control panel or access area.
8. **Restore Power and Test:** Reconnect the appliance to the power supply and perform a functional test to ensure all operations are normal.

OPERATION

The Whirlpool Main Control Board W10751502 operates automatically as part of your appliance's internal system. Once correctly installed, it will manage the appliance's cycles and functions based on user selections and sensor feedback. There are no direct user operational controls on the board itself.

MAINTENANCE

The main control board itself requires minimal maintenance. To ensure its longevity and proper function:

- Keep the appliance's environment clean and free from excessive dust or debris.
- Avoid exposing the appliance to extreme temperatures or high humidity, which can affect electronic components.
- If the appliance requires internal cleaning, ensure power is disconnected and use only dry methods or specialized electronic cleaning solutions, avoiding direct moisture contact with the board.

TROUBLESHOOTING

If your appliance experiences issues after the installation of the new control board, consider the following general troubleshooting steps:

- **Power Check:** Ensure the appliance is receiving power and the circuit breaker has not tripped.
- **Connections:** Verify all wire connections to the control board are secure and correctly seated. Refer to your installation documentation.
- **Error Codes:** Consult your appliance's main user manual for specific error codes displayed on the control panel, as these can indicate the nature of the problem.
- **Professional Assistance:** If issues persist, it is best to contact a qualified appliance repair technician. They can diagnose complex electronic problems and ensure proper repair.

SPECIFICATIONS

- **Part Number:** W10751502
- **Manufacturer:** Whirlpool
- **Item Weight:** Approximately 15 ounces
- **Product Dimensions:** Approximately 1 x 1 x 1 inches (packaging dimensions may vary)
- **Country of Origin:** United States
- **Compatibility:** Designed for specific Whirlpool brand appliances (verify with your appliance model number).

IMPORTANCE OF GENUINE PARTS

Using genuine Whirlpool OEM parts like the W10751502 Main Control Board is essential for maintaining the performance, safety, and warranty of your appliance. Non-genuine aftermarket parts may not meet

Whirlpool's rigorous engineering standards for design, durability, and compatibility, potentially leading to suboptimal performance or further damage.

Your browser does not support the video tag.

Video explaining the importance of using genuine Whirlpool OEM parts for appliance repair and maintenance, highlighting their quality, durability, and perfect fit.

WARRANTY AND SUPPORT

For warranty information regarding your Whirlpool appliance or the W10751502 Main Control Board, please refer to the documentation that came with your original appliance or visit the official Whirlpool website. For technical support, service appointments, or to purchase additional genuine parts, please contact Whirlpool Customer Service or an authorized Whirlpool service provider.

Whirlpool Customer Service: www.whirlpool.com/owners.html