

Lorell LLR34417

Lorell RTA Mobile Desk (Model LLR34417) Instruction Manual

Model: LLR34417 | Brand: Lorell

1. INTRODUCTION

This manual provides essential instructions for the assembly, operation, maintenance, and safety of your Lorell RTA Mobile Desk, Model LLR34417. This desk is designed to offer a flexible and spacious workstation solution for various office environments.

Key features include:

- Flexible design with a spacious desktop.
- Generous space underneath for user comfort and storage.
- Minimalist style suitable for personal or collaborative workspaces.
- Sturdy steel frame construction for durability.
- Four convenient rolling casters, two of which are locking, for easy mobility.

2. SAFETY INFORMATION

Please read and understand all safety warnings before assembling or using this product.

- **Tip-Over Prevention:** To prevent accidental tip-over, always engage both locking casters when the desk is stationary.
- **Weight Limit:** This desk has a maximum weight limit of 48 pounds (21.7 kg). Exceeding this limit may compromise stability and cause damage or injury.
- **Stable Surface:** Always place the desk on a stable, level surface.
- **Placement:** Avoid placing the desk in high-traffic areas where it could be easily bumped or tipped.
- **Assembly:** Ensure all components are securely fastened according to assembly instructions.

3. SETUP AND ASSEMBLY

The Lorell RTA Mobile Desk requires assembly. Please ensure all parts are present before beginning. Refer to the separate assembly guide included with your product for detailed, step-by-step instructions.

General Assembly Tips:

- Unpack all components and verify against the parts list.
- Assemble on a soft, clean surface to prevent scratches.
- Do not fully tighten all fasteners until the desk is completely assembled and level.
- Ensure casters are correctly installed, with locking casters positioned as indicated in the assembly guide.



Figure 3.1: The Lorell RTA Mobile Desk, fully assembled. This image displays the desk's black finish, steel frame, and four casters, two of which are visible with locking mechanisms.

4. OPERATING INSTRUCTIONS

4.1 Moving the Desk

The Lorell RTA Mobile Desk is equipped with four rolling casters for easy repositioning. To move the desk:

1. Ensure both locking casters are disengaged (unlocked).
2. Gently push or pull the desk to its desired location.
3. Once in position, engage both locking casters to secure the desk and prevent unintended movement.

4.2 General Use

Utilize the spacious desktop for your computer, documents, and other work essentials. The open design underneath provides ample legroom and space for a mobile pedestal (sold separately), as shown in Figure 4.1.



Figure 4.1: The Lorell RTA Mobile Desk integrated into an office setup, demonstrating its use with a separate mobile pedestal, a lamp, and other office items. The desk's black finish complements the surrounding decor.

5. MAINTENANCE

5.1 Cleaning

To maintain the appearance and longevity of your desk:

- Wipe surfaces with a soft, damp cloth.
- Avoid using abrasive cleaners, harsh chemicals, or solvents, as these can damage the finish.
- For stubborn marks, a mild soap solution can be used, followed by wiping with a clean, dry cloth.

5.2 Caster Care

Periodically check the casters for any accumulated debris (e.g., hair, dust) that might hinder smooth movement. Clean as necessary. Ensure the locking mechanisms operate freely.

5.3 Fastener Check

Over time, fasteners may loosen. Periodically inspect all screws and bolts and tighten them as needed to ensure the desk remains stable and secure.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Lorell RTA Mobile Desk.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Desk is wobbly or unstable.	Loose fasteners; uneven floor; weight exceeding limit.	Tighten all assembly screws. Move desk to a level surface. Ensure weight on desk does not exceed 48 pounds.
Casters do not roll smoothly.	Debris in casters; locking mechanism engaged.	Clean casters of any hair or dust. Disengage (unlock) locking casters.
Desk slides when casters are locked.	Locking casters not fully engaged; faulty locking mechanism.	Ensure locking casters are fully engaged. If issue persists, contact customer support.

7. SPECIFICATIONS

Detailed specifications for the Lorell RTA Mobile Desk (Model LLR34417).



Figure 7.1: This image provides a clear dimensional view of the Lorell RTA Mobile Desk, indicating its height (29.5 inches), width (47.8 inches), and depth (12.9 inches).

Feature	Detail
Brand	Lorell
Model Number	LLR34417
UPC	035255344173
Product Dimensions (D x W x H)	29.5"D x 47.8"W x 12.9"H

Feature	Detail
Item Weight	48 Pounds (21.7 kg)
Color	Black
Base Material	Alloy Steel
Top Material Type	Alloy Steel
Finish Type	Steel
Included Components	Casters
Required Assembly	Yes
Desk Design	Computer Desk
Base Type	Casters, Cross, Pedestal

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Lorell RTA Mobile Desk (Model LLR34417) is covered by a **Limited Lifetime Warranty**. Please refer to the warranty documentation included with your purchase for specific terms, conditions, and coverage details.

8.2 Customer Support

For further assistance, missing parts, or warranty claims, please contact Lorell customer support. Contact information can typically be found on the Lorell official website or in the packaging materials.
You can visit the [Lorell Store on Amazon](#) for more product information.

© 2023 Lorell. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question