

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fujifilm](#) /

› [Fujifilm Instax Mini 26 Instant Camera Instruction Manual](#)

Fujifilm Mini 26

Fujifilm Instax Mini 26 Instant Camera Instruction Manual

Model: Mini 26

INTRODUCTION

The Fujifilm Instax Mini 26 is an instant camera designed for capturing and printing photos immediately. It features simple operation and a compact design, allowing users to share physical prints with ease. This manual provides essential information for setting up, operating, and maintaining your Instax Mini 26 camera.

WHAT'S IN THE BOX

- Instax Mini 26 Camera
- Rainbow film pack
- 2 CR2 batteries
- Close-up lens

SETUP

1. Installing Batteries

The Instax Mini 26 requires two CR2 batteries. Open the battery compartment cover, insert the batteries according to the polarity indicators, and close the cover securely.

2. Loading Film

1. Open the film compartment door on the back of the camera.
2. Align the yellow mark on the film pack with the yellow mark on the camera.
3. Insert the film pack straight into the compartment. Do not press the two rectangular holes on the back of the film pack.
4. Close the film compartment door. The film counter will display 'S' (Start).
5. Press the shutter button once to eject the black film cover. The film counter will then show '10', indicating 10 exposures remaining.



Image: Rear view of the Instax Mini 26 camera, showing the film compartment and a sticker illustrating how to load film correctly. The film eject slot is visible at the top.

OPERATING THE CAMERA

1. Powering On/Off

Press the power button (usually a red button or a switch near the lens) to turn the camera on. The lens will extend. Press it again to turn off the camera and retract the lens.

2. Taking a Photo

1. Turn on the camera.
2. Look through the viewfinder to frame your shot.
3. Press one of the two shutter buttons (one for horizontal, one for vertical shooting) to take a picture. The photo will be ejected from the top slot.



Image: Front view of the Fujifilm Instax Mini 26 camera, showcasing its blue and white design, lens, flash, and shutter button.

3. Lighten-Darken Control

Use the Lighten-Darken Control buttons to adjust the brightness of your prints. This feature allows you to make the print finish brighter or darker depending on the lighting conditions and desired effect.

4. Selfie Mirror and Close-up Lens

The camera includes a selfie mirror mounted on the lens for easy self-portraits. For detailed close-up shots, attach the included close-up lens. This allows you to focus on subjects as close as 35 cm.



Image: Angled view of the Fujifilm Instax Mini 26 camera, highlighting the lens, flash, and the "instax mini 26" branding.

5. Automatic Exposure Compensation

The Instax Mini 26 features built-in automatic exposure compensation, which helps capture the right amount of light in most shooting situations, including low lighting conditions.

MAINTENANCE

- Keep the lens clean using a soft, dry cloth. Avoid touching the lens directly.
- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove batteries if the camera will not be used for an extended period.
- Use only genuine Fujifilm Instax Mini film for optimal performance.

TROUBLESHOOTING

Problem	Solution
Camera does not power on.	Check if batteries are inserted correctly and are not depleted. Replace batteries if necessary.
Film does not eject.	Ensure film is loaded correctly. Check the film counter; if it shows 'S', press the shutter button to eject the black film cover. If the counter shows '0', the film pack is empty.
Photos are too dark/light.	Adjust the Lighten-Darken Control settings. Ensure the flash is not obstructed.
Image is blurry.	Ensure the subject is within the camera's focus range (0.6m to infinity). Use the close-up lens for subjects closer than 0.6m.

SPECIFICATIONS

- Film:** Fujifilm Instax Mini Instant Film
- Picture Size:** 62mm x 46mm
- Lens:** 2 components, 2 elements, f=60mm, 1:12.7
- Focus Range:** 0.6m - ∞
- Shutter:** Programmed electronic shutter, 1/400 sec.
- Exposure Control:** Automatic, Interlocking range (ISO 800): LV 5.0 - LV 15.5, Exposure compensation (Lighten-Darken Control): $\pm 2/3$ EV
- Film Ejection:** Automatic
- Flash:** Built-in, automatic electronic flash, Fill-in Flash Mode, Red-eye Reduction Mode
- Power Supply:** Two CR2/DL CR2 lithium batteries
- Dimensions:** 5.5 x 4.25 x 5.75 inches (approximate)
- Weight:** 1.2 pounds (excluding batteries, strap, and film pack)

OFFICIAL PRODUCT VIDEO



Video: An official product video demonstrating the Fujifilm Instax Mini 26 camera. This video provides a visual overview of the camera's features and operation.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Fujifilm website or contact their customer service. Specific warranty terms may vary by region and purchase location.

Official Fujifilm Website: www.fujifilm.com

