

LG MH7265DPS

LG MH7265DPS 2-in-1 Grill Microwave Oven User Manual

Model: MH7265DPS

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your LG MH7265DPS 2-in-1 Grill Microwave Oven. Please read this manual thoroughly before using your appliance and retain it for future reference.

The LG MH7265DPS combines microwave and grill functions, offering versatile cooking options. It features Smart Inverter technology for precise power control, ensuring even heating, defrosting, and cooking while preserving food quality.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the appliance.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Refer to the full safety section in the comprehensive user manual provided with your product for detailed warnings and precautions.

3. PRODUCT OVERVIEW

External View

The LG MH7265DPS features a sleek black/white design with an LED display and a control dial for easy operation.



Image: Front view of the LG MH7265DPS microwave oven, showcasing its black finish, LED display, and control panel.

Internal Components

- **Turntable:** A 36 cm diameter interior plate ensures even cooking by rotating food. Its hexagonal ring provides enhanced stability for various containers.
- **Crisp Plate:** Included for healthy and flavorful roasting and frying, achieving crispy exteriors and juicy interiors.
- **Grill Rack:** Used for grilling functions.
- **EasyClean Interior:** Designed for good hygiene and easy cleaning.

4. SETUP

Unpacking

Carefully remove all packaging materials from the oven and its accessories. Check for any damage during transit. Do not remove the waveguide cover (the mica sheet) inside the oven.

Placement

- Place the oven on a flat, stable surface strong enough to hold the oven and the food being cooked.
- Ensure adequate ventilation: Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side for proper airflow.
- Keep the oven away from heat sources and strong magnetic fields.
- This appliance is designed for countertop installation.

Initial Cleaning

Before first use, wipe the interior and exterior of the oven with a soft, damp cloth. Wash the turntable, crisp plate, and grill rack with warm, soapy water, rinse thoroughly, and dry.

5. OPERATING INSTRUCTIONS

Smart Inverter Technology

The unique Smart Inverter technology provides precise power control, allowing for faster, more powerful, and even cooking. This technology helps to:

- **Even Defrosting:** Prevents overcooking at the edges while keeping the center frozen.
- **Uniform Heating:** Heats and cooks all dishes evenly due to precise temperature control.
- **Faster Cooking:** Achieves up to 1.6 times faster cooking using DC current with uninterrupted power flow.
- **Nutrient Preservation:** Maintains the taste and nutrients of your dishes by preventing overheating and cell damage.



**Mantiene el sabor y los nutrientes de tus platos
al evitar la destrucción de las células**

Image: A dish prepared in the microwave, demonstrating how Smart Inverter technology helps maintain flavor and nutrients.

Cooking Modes

- **Microwave Cooking:** Use for general heating, reheating, and cooking. Adjust power levels and time using the control panel.
- **Grill Function:** Ideal for browning and crisping food. Place food on the grill rack.
- **Combination Cooking (Microwave + Grill):** Combines microwave power with grilling for faster cooking and browning results. Refer to the full manual for specific combination settings.
- **Automatic Menus:** The oven includes multiple automatic cooking menus for various food types. Consult

the detailed instruction manual for a list of available programs and their usage.

- **Crisp Plate Usage:** Utilize the crisp plate for roasting and frying with less fat, achieving crispy textures.

Energy Saving Features

- The oven saves up to 40% energy in standby mode.
- The interior light automatically turns off after 5 minutes if the door remains open.

6. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

- **Interior Cleaning:** The EasyClean interior coating allows for good hygiene and easy cleaning. Wipe the interior with a damp cloth after each use. For stubborn stains, use a mild detergent and then wipe with a clean, damp cloth.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Turntable and Accessories:** The glass turntable, crisp plate, and grill rack can be washed in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seals:** Keep the door seals clean to ensure proper closure and efficient operation.

7. TROUBLESHOOTING

If you encounter issues with your LG MH7265DPS, refer to the following common troubleshooting tips. For more complex problems, consult the full user manual or contact customer support.

Problem	Possible Cause / Solution
Oven does not start	Ensure the power cord is securely plugged in. Check the household fuse or circuit breaker. Make sure the door is closed properly.
Food is not heating	Check if the cooking time and power level are set correctly. Ensure the door is fully closed. Avoid using metal containers in microwave mode.
Turntable does not rotate	Ensure the turntable is correctly placed on its support ring and coupler. Check for any obstructions beneath the turntable.
Unusual noise during operation	Ensure dishes are not touching the oven walls. Check if the turntable is properly seated.
Oven light not working	The bulb may need replacement (contact service). Note that the light turns off automatically if the door is open for more than 5 minutes.

8. SPECIFICATIONS

Detailed technical specifications for the LG MH7265DPS microwave oven:

Feature	Detail
Brand	LG

Feature	Detail
Model Number	MH7265DPS
Product Dimensions (L x W x H)	45.8 x 30.8 x 54.4 cm (18.03 x 12.13 x 21.42 inches)
Weight	11 Kilograms (24.25 lbs)
Capacity	32 Liters
Microwave Power Consumption	1200 Watts
Grill Power	1000 Watts
Microwave + Grill Power	1500 Watts
Voltage	230 Volts
Installation Type	Countertop
Special Feature	Child Safety Lock
Cooking Mode	Microwave Radiation and Grill
Color	Black/White
Material	Glass, Metal
Interior Coating	Ceramic or Enamel Coated Steel
Included Components	Grill
Door Opening	Left
Defrost Type	Manual Defrost

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official LG website for your region. Keep your proof of purchase for warranty claims.

If you require technical assistance, spare parts, or have questions not covered in this manual, please contact LG customer support. Contact details can typically be found on the LG website or in the documentation supplied with your appliance.

Note: Information regarding spare parts availability is not provided in this document. Please contact LG customer service for details.