Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- VTech /
- > VTech CS5119 DECT 6.0 Cordless Phone 1 Handset User Manual

VTech CS5119

VTech CS5119 DECT 6.0 Cordless Phone - 1 Handset

USER MANUAL

Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your VTech CS5119 DECT 6.0 Cordless Phone. Please read this manual thoroughly to ensure proper use and to maximize the features of your new phone system. The VTech CS5119 is designed for clear communication and ease of use in a home or small office environment.

Package Contents

Before you begin, ensure all items are present in your package:

- 1 Cordless Handset
- 1 Cordless Handset Base
- 1 AC Power Adapter for the base
- 1 Telephone Line Cord
- 2 AA Rechargeable Batteries
- · This User Manual

Setup

1. Battery Installation:

Open the battery compartment cover on the back of the handset. Insert the two AA rechargeable batteries, observing the correct polarity (+ and -). Close the battery compartment cover securely.

2. Base Unit Connection:

Plug the small end of the AC power adapter into the power jack on the back of the telephone base. Plug the large end of the AC power adapter into a standard electrical outlet. Plug one end of the

telephone line cord into the TEL LINE jack on the back of the telephone base. Plug the other end of the telephone line cord into a telephone wall jack.

3. Initial Charging:

Place the handset in the telephone base to charge. The handset will beep, indicating it is properly seated and charging. Allow the handset to charge for at least 12 hours before initial use to ensure optimal battery performance.



This image displays the VTech CS5119 cordless phone, featuring a black handset with a green backlit keypad and a digital display, resting in its silver and black charging base. The VTech logo is visible on both the handset and the base unit.

4. Handset Registration:

Your handset is pre-registered to the telephone base. If for any reason the handset is not registered (e.g., after a power outage or if you purchase an accessory handset), refer to the troubleshooting section or the full user manual for registration instructions.

Operating Your Phone

Making and Answering Calls

- To Make a Call: Press TALK/FLASH or SPEAKER, then dial the phone number.
- To Answer a Call: When the phone rings, pressTALK/FLASH or SPEAKER.
- To End a Call: Press OFF/CLEAR or place the handset back in the telephone base.

Volume Adjustment

During a call, press VOL ▲ or VOL ▼ on the side of the handset to adjust the listening volume.

Intercom and Call Transfer

The VTech CS5119 supports intercom functionality and call transfer between handsets (if accessory handsets are used). For detailed instructions on using these features, please consult the full user manual.

Redial

Press REDIAL to view the last numbers dialed. PressTALK/FLASH to call the displayed number.

Mute

During a call, press **MUTE** to temporarily silence the microphone. Press **MUTE** again to resume the conversation.

Caller ID

When you receive a call, the caller's information (name and number, if available) will appear on the handset display. You can review past calls by accessing the Caller ID log.

Phonebook/Directory

Store frequently called numbers in the phonebook for quick dialing. Refer to the handset menu for instructions on adding, editing, and deleting entries.

Digital Answering System

The integrated digital answering system records incoming messages when you are unavailable. Access messages via the handset or the telephone base. Follow the on-screen prompts to set up your outgoing announcement and manage messages.

Maintenance

- Cleaning: Clean the phone and base unit with a soft, damp cloth. Do not use cleaning sprays or harsh chemicals.
- **Battery Care:** Use only the provided rechargeable batteries. If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- Storage: Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

Problem	Solution	
No dial tone	Ensure the telephone line cord is securely plugged into both the base and the wall jack. Verify the AC power adapter is connected to the base and a working electrical outlet. Check if other phones on the same line are working.	
Handset does not charge	Ensure the handset is properly seated in the charging cradle. Clean the charging contacts on both the handset and the base with a dry cloth. Verify the AC power adapter is connected.	
Poor sound quality	Move the handset closer to the telephone base. Avoid placing the phone near other electronic devices that may cause interference. Check your telephone line for static or noise.	
Handset displays "Not Registered"	If it still doesn't register, refer to the full user manual for manual	

Specifications

Feature	Detail
Model Number	CS5119
Telephone Type	Cordless
Technology	DECT 6.0
Answering System Type	Digital
Power Source	Battery Powered (2 AA batteries required)
Material	Plastic
Color	Silver
Product Dimensions	6 x 8 x 2 inches
Item Weight	12.7 ounces
Compatible Devices	VTech CS5109 accessory handsets, DECT 6.0 devices, standard telephone networks

Warranty and Support

For warranty information, technical support, or to purchase accessories, please refer to the official VTech website or contact VTech customer service. Keep your purchase receipt as proof of purchase.

Related Documents - CS5119



VTech CS5119 Series DECT 6.0 Cordless Telephone Abridged User's Manual

This abridged user's manual provides essential installation, operation, and safety instructions for the VTech CS5119, CS5119-2, and CS5119-3 DECT 6.0 cordless telephones. Learn how to set up your phone, use features like Caller ID, Call Block, Phonebook, and troubleshoot common issues.



VTech CS5209 DECT 6.0 Accessory Handset User Manual

User manual for the VTech CS5209 DECT 6.0 accessory handset, providing instructions on setup, registration, operation, and safety precautions. Learn how to install the battery, connect the charger, register new handsets, and understand display icons and features.



VTech IS8101-1S DECT 6.0 Accessory Handset User Manual (Canada Version)

User manual for the VTech IS8101-1S DECT 6.0 accessory handset, providing instructions on setup, installation, operation, safety precautions, warranty information, and technical specifications for use with VTech IS8151 series telephone systems.

ANALOG CAMPATON STATE

TALE A FASTE CONTROL CONTROL CONTROL

TALE A FASTE CONTROL CONTROL

TALE A FASTE CONTROL CONTROL

TALE A CAMPATON CONTROL

VTech Analog Contemporary Series Cordless Telephone User's Guide

Comprehensive user's guide for the VTech Analog Contemporary Series cordless telephones, covering models like CTM-A2421-BATT, CTM-A242SD, CTM-A242SDU, CTM-C4201, C4011, and C4011-USB. Learn about setup, operation, safety instructions, and troubleshooting.

MSSS111
1-Line SIP Contines Phone
NGCCSHIPSC
Virtual Bunde of NGCSS and C0016
Use Colour Contines Phonebut and Changing Street
NGCSSS Colour Contines Phonebut and Changing Street
Line Colour Contines Northinic Colour Contines Northinic Colour Colour Colour Northinic Colour Colour

vtech

VTech SIP Next Gen Series Cordless Phones User's Guide

Comprehensive user's guide for the VTech SIP Next Gen Series cordless phones, including models NG-S3111 and NGC-C3416HC. Learn about setup, operation, safety, and troubleshooting for VTech's advanced SIP communication solutions.

vtech User's Guide



VTech LS6001 Series DECT 6.0 Accessory Handset User Manual

Comprehensive user manual for the VTech LS6001 series DECT 6.0 accessory handset, covering setup, registration, operation, safety instructions, maintenance, and technical specifications. This guide provides detailed information for VTech models LS6001, LS6001-13, LS6001-15, LS6001-16, and LS6001-17, designed for use with VTech model LS6191.