

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tangkula](#) /

› [Tangkula Golf Stand Bag AM0048SP Instruction Manual](#)

Tangkula AM0048SP

Tangkula Golf Stand Bag Instruction Manual

Model: AM0048SP

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Tangkula Golf Stand Bag. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Image: The Tangkula Golf Stand Bag positioned on a golf course, ready for use, with a golfer in the background.

SETUP

1. Deploying the Stand Mechanism

The golf stand bag features an automatic stand mechanism. To deploy the stand, gently push the bag forward until the legs extend outwards. Ensure the bag is placed on a flat, stable surface for optimal balance.

Stable Triangular Support Frame

Specification

Material:

Polyester Fabric, Aluminum

Bag Height

(without Rain Hood): 34"

Base Dimension: 12" x 8" (L x W)

Net Weight: 5.5 lbs

Package includes:

1 x Golf Stand Bag

1 x Rain Hood

1 x Golf Stand Bag

1 x Rain Hood



Image: A diagram illustrating the stable triangular support frame of the golf bag when the stand is deployed. The image also shows the base and how to push to extend the legs.

The bag is equipped with a solid base and non-slip feet on the stand legs to prevent sliding and ensure stability on various terrains.



Solid Base



Non-slip Feet

2. Attaching and Adjusting Shoulder Straps

The bag comes with a detachable, adjustable dual shoulder strap system for comfortable carrying. Attach the straps to the designated D-rings on the bag. Adjust the buckles to achieve a balanced and comfortable fit across your shoulders.

Detachable Shoulder Strap

With dual strap system



Adjustable
Buckles



Comfy Hip
Cushion



Image: Details of the adjustable shoulder strap system and the hip cushion for enhanced carrying comfort.

OPERATING INSTRUCTIONS

1. Organizing Golf Clubs

The bag features a 6-way organizational top divider system. Insert your golf clubs into the individual dividers to keep them separated and protected. This helps prevent clubs from clattering and reduces wear.



Image: A close-up of the 6-way top organizer for golf clubs and the rain hood.

2. Utilizing Storage Pockets

The bag is equipped with 8 zippered pockets for various accessories. These include pockets for golf balls, beverages, apparel, and other personal items. Ensure zippers are fully closed to secure contents.

- **Ball Pocket:** Store golf balls and tees.
- **Apparel Pockets:** Larger pockets for clothing or rain gear.
- **Accessory Pockets:** Smaller pockets for valuables, gloves, or other small items.
- **Insulated Pocket:** Designed to keep beverages cool.



Image: A visual representation of the golf bag's various storage pockets and their locations.

3. Using the Rain Hood

A waterproof rain hood is included to protect your clubs from adverse weather conditions. Locate the rain hood, typically stored in a side pocket, and attach it over the top of your clubs using the snaps or elastic loops provided.

4. Carrying Options

The bag offers multiple carrying options:

- **Dual Shoulder Straps:** For backpack-style carrying, distributing weight evenly.
- **Reinforced Top Handle:** For quick lifting and maneuvering.
- **Comfortable Side Handle:** For easy lifting from a cart or vehicle.



Image: A visual guide to the multiple carrying options, including the top handle, side handle, and shoulder straps.

MAINTENANCE

- **Cleaning:** Wipe the bag with a damp cloth and mild soap to remove dirt and stains. Avoid harsh chemicals that may damage the material.
- **Drying:** Allow the bag to air dry completely before storage to prevent mildew. Do not expose to direct sunlight for extended periods.
- **Storage:** Store the golf bag in a cool, dry place when not in use. Ensure all pockets are empty and zippers are closed.
- **Zipper Care:** Periodically check zippers for smooth operation. If a zipper becomes stiff, apply a small amount of zipper lubricant.
- **Stand Legs:** Inspect the stand legs and mechanism regularly for any signs of wear or damage. Ensure the non-slip feet are intact.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand legs do not deploy or retract smoothly.	Mechanism obstruction or dirt.	Check for debris around the pivot points. Clean and lubricate if necessary. Ensure the bag is placed on a flat surface.

Problem	Possible Cause	Solution
Bag tips over easily.	Uneven weight distribution or unstable ground.	Rearrange clubs and contents for better balance. Ensure the bag is on a level surface. Check if stand legs are fully extended.
Zippers are stuck or difficult to move.	Dirt, debris, or lack of lubrication.	Clean the zipper teeth. Apply a small amount of zipper lubricant (e.g., wax or silicone spray).
Water seeps into pockets during rain.	Rain hood not properly installed or pockets not fully zipped.	Ensure the rain hood is securely attached. Double-check that all pocket zippers are completely closed.

SPECIFICATIONS

Brand: Tangkula

Model Name: AM0048SP

Material: Polyester

Color: Black

Product Dimensions (L x W x H): 12" x 8" x 34"

Number of Dividers: 6

Item Weight: 6 Pounds

Number of Pockets: 8

Golf Club Bag Type: Stand Golf Bag

CONTACT AND SUPPORT

For further assistance, product inquiries, or support, please refer to the official Tangkula website or contact their customer service department. Keep your model name (AM0048SP) and ASIN (B01M8IBVMX) available when contacting support.

Online Store: [Tangkula Store on Amazon](#)