

## Disney XKT2133

# Disney Hallmark XKT2133 Minnie Mouse Christmas Express Train Accessory User Manual

## INTRODUCTION

---

This manual provides essential instructions for the setup, operation, and maintenance of your Disney Hallmark XKT2133 Minnie Mouse Christmas Express Train Accessory. Please read this manual thoroughly before use to ensure proper function and enjoyment of your product.

## SETUP

---

### 1. Battery Installation

The Minnie Mouse train car requires **three (3) AAA batteries** for operation. To install the batteries:

1. Locate the battery compartment on the underside of the train car.
2. Using a small Phillips head screwdriver, carefully unscrew the battery compartment cover.
3. Insert three AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

**Note:** Always use fresh batteries. Do not mix old and new batteries, or different types of batteries.

### 2. Connecting Multiple Train Cars (Optional)

If you have additional Disney Christmas Express train cars, they can be connected to form a complete train set. Each car features connection points on its front and rear.

- Align the connector on one car with the corresponding slot on another car.
- Gently push the cars together until they securely click into place.
- Ensure all cars are properly connected for synchronized movement and music.



*Image: The underside of the Minnie Mouse train car, highlighting the battery compartment, on/off switch, and the connection points for linking with other train cars.*

## OPERATING INSTRUCTIONS

---

### 1. Independent Operation

Each train car can operate independently. To activate the Minnie Mouse car:

- Locate the on/off switch on the bottom of the car, near the battery compartment.
- Slide the switch to the "ON" position. The car will begin to move and play Christmas music.
- To turn off, slide the switch back to the "OFF" position.

### 2. Synchronized Operation (with connected cars)

When multiple Disney Christmas Express train cars are connected, activating one car will synchronize the movement and music across the entire train set. The characters on each car will also interact.

- Ensure all cars are securely connected as described in the Setup section.
- Turn on any one of the connected train cars using its individual on/off switch.
- All connected cars will then move together and play synchronized Christmas music.

Your browser does not support the video tag.

*Video: This video demonstrates the independent operation of the Minnie Mouse train car, showing its battery compartment and on/off switch. It also illustrates how multiple train cars connect and operate together, playing Christmas music and moving their characters.*

## MAINTENANCE

---

- **Cleaning:** Wipe the train car with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Battery Care:** Remove batteries if the product will not be used for an extended period to prevent

leakage. Dispose of used batteries responsibly.

- **Storage:** Store the train car in a cool, dry place away from direct sunlight when not in use.

## TROUBLESHOOTING

- **Train car does not turn on:**

- Check if the on/off switch is in the "ON" position.
- Ensure batteries are correctly installed with proper polarity.
- Replace with fresh AAA batteries.

- **Train cars do not synchronize:**

- Verify that all train cars are securely connected.
- Ensure batteries in all connected cars are functional.

- **Music is distorted or too quiet:**

- Replace batteries with fresh ones.
- Ensure the speaker on the bottom of the car is not obstructed.

## SPECIFICATIONS

Feature	Detail
Model Number	XKT2133
Brand	Hallmark (Disney Licensed)
Power Source	3 x AAA batteries (not included)
Item Weight	9.9 ounces
Package Dimensions	6.38 x 6.3 x 4.72 inches
Interactive Features	Plays Christmas music, characters move when connected to other cars.

## WARRANTY INFORMATION

Warranty information for the Disney Hallmark XKT2133 Minnie Mouse Christmas Express Train Accessory is not available in the provided product data. Please refer to the product packaging or contact the retailer for specific warranty details.

## SUPPORT

Support contact information for the Disney Hallmark XKT2133 Minnie Mouse Christmas Express Train Accessory is not available in the provided product data. For assistance, please contact the retailer or visit the official Hallmark website.

