

[manuals.plus](#) /› [Supersonic](#) /› [Supersonic SC-1312 13.3" Widescreen LED HDTV with Built-in DVD Player Instruction Manual](#)

Supersonic SC-1312

Supersonic SC-1312 13.3" Widescreen LED HDTV with Built-in DVD Player Instruction Manual

Model: SC-1312 | Brand: Supersonic

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Supersonic SC-1312 13.3-inch Widescreen LED HDTV with Built-in DVD Player. Please read these instructions thoroughly before using the product to ensure optimal performance and safety.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your product packaging:

- Supersonic SC-1312 13.3" LED HDTV with Built-in DVD Player
- Detachable Stand
- Remote Control
- Power Adapter
- User Manual (this document)

3. PRODUCT OVERVIEW

The Supersonic SC-1312 is a compact 13.3-inch LED HDTV featuring a built-in DVD player, designed for versatile entertainment. It offers a 1366 x 768 pixel resolution for clear high-definition viewing and includes an integrated ATSC tuner for receiving over-the-air digital broadcasts. Connectivity options include HDMI, AV input, USB, and an SD card slot.



Figure 1: Front view of the Supersonic SC-1312 TV, showing a football game on screen and a DVD partially inserted on the right side.

4. SETUP

4.1 Attaching the Stand

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align the stand with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Ensure it is firmly attached.

4.2 Power Connection

1. Connect the power adapter cable to the DC 12V input port on the TV.
2. Plug the other end of the power adapter into a standard electrical outlet.

4.3 Antenna Connection

To receive over-the-air digital broadcasts:

1. Connect a compatible antenna (not included) to the 'RF IN' port on the TV.
2. Position the antenna for optimal signal reception.

4.4 Initial Setup and Channel Scan

1. Press the **POWER** button on the remote control or the TV to turn it on.
2. Follow the on-screen prompts to select your language and region.
3. Navigate to the 'Channel' menu in the settings and select 'Auto Scan' to search for available digital channels.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **POWER** button on the remote control or the TV to turn the unit on or off.

5.2 Input Source Selection

To switch between different input sources (TV, DVD, HDMI, AV, USB, SD):

1. Press the **SOURCE** or **INPUT** button on the remote control.
2. Use the arrow keys to highlight the desired input source.
3. Press **OK** or **ENTER** to confirm your selection.

5.3 DVD Player Operation

The TV features a built-in DVD player located on the side of the unit.

1. Ensure the TV is powered on and the input source is set to 'DVD'.
2. Gently insert a DVD disc into the disc slot with the label side facing towards you. The player will automatically load the disc.
3. Use the remote control's playback buttons (**PLAY**, **PAUSE**, **STOP**, **FF**, **REW**) to control playback.
4. To eject a disc, press the **EJECT** button on the remote or the TV.

5.4 USB/SD Media Playback

To play media from a USB drive or SD card:

1. Insert your USB drive into the USB port or your SD card into the SD card slot.
2. Select 'USB' or 'SD' as the input source.
3. Navigate through the on-screen menu to select and play your desired media files (photos, music, videos).

5.5 Volume and Channel Control

- Use the **VOL+** and **VOL-** buttons on the remote or TV to adjust the volume.
- Use the **CH+** and **CH-** buttons to change TV channels.

5.6 Menu Navigation

Press the **MENU** button to access the TV's settings. Use the arrow keys to navigate and **OK** to select options for Picture, Sound, Channel, and System settings.

6. MAINTENANCE

6.1 Cleaning

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet. For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use alcohol, benzene, thinners, or other volatile substances, as they may damage the TV's surface.

6.2 Storage

When storing the TV for an extended period, ensure it is unplugged, clean, and stored in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected or outlet not working.	Check power cord connection. Test outlet with another device.
No picture/sound	Incorrect input source selected or external device not connected.	Verify correct input source. Check connections to external devices.
DVD not playing	Disc inserted incorrectly, dirty, or incompatible format.	Ensure disc is clean and inserted correctly. Try a different disc.
Poor TV reception	Weak antenna signal or antenna positioning.	Adjust antenna position. Perform a channel rescan. Consider an amplified antenna.
Remote control not working	Batteries depleted or remote not aimed at sensor.	Replace batteries. Ensure clear line of sight to the TV's remote sensor.

8. SPECIFICATIONS

Feature	Detail
Brand	Supersonic
Model Number	SC-1312 (MGGSC-1312)
Screen Size	13.3 Inches
Display Technology	LED
Resolution	1366 x 768 Pixels (HD)
Aspect Ratio	16:9
Special Feature	Flat Screen, Built-in DVD Player
Connectivity Technology	HDMI, USB, AV In
Voltage	12 Volts (DC)
Item Weight	2.95 pounds
Product Dimensions	17.9 x 12.1 x 3.9 inches

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your package or visit the official Supersonic website. Keep your purchase receipt as proof of purchase for any warranty claims.

