

[manuals.plus](#) /› [Nespresso](#) /› [Nespresso Inissia Espresso Machine by De'Longhi with Milk Frother \(Model EN80BAE\) - Instruction Manual](#)

## Nespresso EN80BAE

# Nespresso Inissia Espresso Machine by De'Longhi with Milk Frother

Model: EN80BAE | Brand: Nespresso

## INTRODUCTION

Welcome to the world of Nespresso. This manual provides essential information for the safe and efficient operation of your Nespresso Inissia Espresso Machine by De'Longhi with Milk Frother. Designed for convenience and quality, this compact machine allows you to enjoy rich espresso and lungo, along with creamy milk-based beverages, in the comfort of your home.



Image: Nespresso Inissia Espresso Machine with Aeroccino Milk Frother and various Nespresso Original Line capsules.

## SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only Nespresso Original Line capsules with this machine.
- Ensure the water tank is filled with fresh, potable water before brewing.

## PACKAGE CONTENTS

Your Nespresso Inissia Espresso Machine by De'Longhi with Milk Frother package includes:

- Nespresso Inissia Espresso Machine

- Aeroccino Milk Frother
- 16-Capsule Tasting Pack (may vary)
- Instruction Manual

## SETUP

1. **Unpack:** Remove all packaging materials and place the machine on a stable, flat surface.
2. **Fill Water Tank:** Fill the removable water tank with fresh, potable water.
3. **Power On:** Plug the machine into a grounded power outlet. The Espresso and Lungo buttons will blink as the machine heats up (approximately 25 seconds).
4. **Initial Rinse:** Once the buttons are steady, place a container under the coffee outlet. Press the Lungo button to run water through the machine without a capsule. Repeat this process 2-3 times to clean the internal system.



Image: Nespresso Inissia machine and Aeroccino frother set up on a kitchen counter.

## OPERATING INSTRUCTIONS

### Making Espresso or Lungo

- 1. Fill Water Tank:** Ensure the water tank is filled.
- 2. Power On:** Press either the Espresso or Lungo button to turn on the machine. Wait for the buttons to stop blinking (approx. 25 seconds).
- 3. Insert Capsule:** Lift the lever completely and insert a Nespresso Original Line capsule. Close the lever firmly.



Image: A Nespresso capsule being placed into the machine's capsule slot.

- 4. Place Cup:** Place an espresso cup or mug under the coffee outlet. The folding drip tray can be adjusted for different cup sizes.
- 5. Select Brew Size:** Press the Espresso button for a 40ml shot or the Lungo button for a 110ml shot. The machine will automatically stop when the selected volume is reached.



Image: The Nespresso Inissia machine actively brewing coffee into a small glass cup.

6. **Eject Capsule:** After brewing, lift the lever to eject the used capsule into the internal container.

## Using the Aeroccino Milk Frother

The included Aeroccino allows you to prepare hot or cold milk froth for your favorite coffee recipes.

1. **Fill Milk:** Pour fresh, cold milk into the Aeroccino. Do not exceed the maximum fill line for frothing.
2. **Select Froth Type:** For hot froth, press the button briefly. For cold froth, press and hold the button for 2 seconds. The indicator light will illuminate.
3. **Start Frothing:** The frother will automatically start and stop when the milk is ready.
4. **Pour:** Pour the frothed milk directly into your coffee.

Your browser does not support the video tag.

Video: A quick demonstration and review of the Nespresso Inissia Espresso Machine, showing its compact design and ease of use for brewing espresso.

## CLEANING AND MAINTENANCE

- **Daily Cleaning:** Empty and rinse the used capsule container and drip tray daily. Wipe the machine exterior with a damp cloth.



Image: A hand inserting a Nespresso capsule into the machine, illustrating the capsule loading process.

- **Water Tank:** Clean the water tank regularly with mild detergent and rinse thoroughly.
- **Aeroccino:** Clean the interior of the Aeroccino immediately after each use with a non-abrasive cloth. Do not immerse the base in water.
- **Descaling:** Descale the machine every 3-6 months, or as indicated by the machine's descaling alert (if applicable), using a Nespresso descaling kit. Follow the instructions provided with the kit.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee flows, pump is running.	Air lock in the system.	Fill water reservoir, turn on machine, press Lungo button without a capsule. Repeatedly open and close the capsule lid/handle while the pump is running to prime the pump.
Coffee is not hot enough.	Cold cup, machine not fully preheated.	Preheat cup with hot water. Ensure machine is fully preheated (buttons steady).
Water leaking from machine.	Water tank not correctly positioned or damaged.	Check water tank position. Ensure it is securely seated. Inspect for cracks or damage.

Problem	Possible Cause	Solution
Used capsules not ejecting properly.	Used capsule container is full.	Empty the used capsule container.

## SPECIFICATIONS

---

- **Brand:** Nespresso
- **Model Name:** EN80BAE
- **Color:** Black
- **Product Dimensions:** 7.99"D x 20"W x 12.87"H
- **Item Weight:** 8.4 pounds
- **Special Feature:** Milk Frother, Programmable
- **Coffee Maker Type:** Espresso Machine
- **Operation Mode:** Fully Automatic
- **Voltage:** 110 Volts
- **Compatible Coffee Pods:** Nespresso Original
- **Water Tank Capacity:** 24 ounces (approx. 0.7 liters)
- **Used Capsule Capacity:** Up to 10 capsules
- **Preheating Time:** 25 seconds

# DESIGN COMPACT

## COMPACT DESIGN



Image: Nespresso Inissia machine highlighting its compact design and dimensions.

### WARRANTY AND SUPPORT

The Nespresso Inissia Espresso Machine by De'Longhi is backed by a manufacturer's one-year warranty. For warranty claims, technical support, or further assistance, please refer to the contact information provided in your product packaging or visit the official Nespresso website.

Your browser does not support the video tag.

Video: A detailed review of the Nespresso Inissia Espresso Maker, showcasing its features and performance.