

- Manuals.plus /
- > Redi-Remote /
 - > Replacement Remote for JVC RM-RK42, KSRF150, CHX1500RF User Manual

Redi-Remote RTRMRK42

Replacement Remote for JVC RM-RK42, KSRF150, CHX1500RF User Manual

Brand: Redi-Remote | Model: RTRMRK42

1. INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, specifically designed to be compatible with JVC RM-RK42, KSRF150, and CHX1500RF units. This remote is a custom-built replacement and is not an original JVC product. It is pre-programmed to control the specified JVC models without requiring additional setup or programming.

Please read this manual thoroughly to ensure proper use and to maximize the functionality of your new remote control.



Figure 1: Redi-Remote Replacement Remote Control

This image displays the full view of the Redi-Remote replacement remote control. The remote is dark gray with a combination of blue and black buttons. The upper section features primary controls such as power, volume up/down, channel up/down, mute, menu, recall, and display buttons. Below these, a standard numeric keypad (0-9, 100, ENT) is visible. The lower half of the remote is concealed by a sliding panel, which is clearly labeled "SLIDE DOWN" to indicate its function.

2. KEY FEATURES

- **Pre-Programmed:** No programming required; ready to use with compatible JVC units (RM-RK42, KSRF150, CHX1500RF).
- **Dedicated Functions:** Designed to perform every function for the specific unit it controls.
- **Compact Design:** Measures approximately 7 1/2" x 2 1/4" x 3/4".
- **Sliding Cover:** Features a sliding cover over the lower half to reveal additional buttons.
- **No Auxiliary Device Control:** Cannot be programmed to control other devices.
- **No Laser Pointers or LED Lights:** Does not include these features.

3. SETUP

3.1 Battery Installation

The remote control requires 4 AAA batteries for operation. These batteries are included with your purchase.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

3.2 Initial Use

Once batteries are installed, the remote is ready for immediate use with your compatible JVC RM-RK42, KSRF150, or CHX1500RF unit. No additional programming or pairing steps are required.

4. OPERATING INSTRUCTIONS

4.1 Button Functions Overview

The remote control features a standard layout with a sliding cover to access additional functions. Below is a general guide to the buttons:

Button Label	Function
PWR	Power On/Off for the JVC unit.
TV VIDEO	Switches between TV and Video input modes.
SLEEP	Activates or deactivates the sleep timer function.
DISP	Displays on-screen information.
CH+ / CH-	Changes channels up or down.

Button Label	Function
VOL+ / VOL-	Adjusts volume up or down.
MUTE	Mutes or unmutes audio output.
MENU	Accesses the system menu.
RECALL	Recalls the previously viewed channel or input.
Numeric Keypad (0-9, 100)	Direct channel entry or numerical input.
ENT	Confirms numerical input or selection.
SLIDE DOWN (Cover)	Reveals additional function buttons for advanced control (e.g., DISC+, DISC-, RND, RPT, SEL, INT, BAR, BUTTON, DISP, FLDR+, FLDR-). Specific functions depend on the JVC unit's capabilities.

4.2 Basic Operation

- **Power On/Off:** Press the **PWR** button to turn your JVC unit on or off.
- **Adjusting Volume:** Use the **VOL+** and **VOL-** buttons to increase or decrease the audio volume.
- **Changing Channels:** Press **CH+** or **CH-** to navigate through channels. For direct channel access, use the numeric keypad and then press **ENT**.
- **Muting Audio:** Press the **MUTE** button to temporarily silence the audio. Press again to restore sound.
- **Accessing Menus:** Press the **MENU** button to open the on-screen menu of your JVC unit. Use the directional buttons (often integrated with CH/VOL) to navigate and **ENT** to select.
- **Using Advanced Functions:** Slide down the lower cover to access buttons for specific functions like disc navigation, folder selection, repeat, random play, and more, depending on your JVC unit's capabilities.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace all 4 AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote. Store in a cool, dry place.
- **Avoid Extreme Conditions:** Do not expose the remote to extreme temperatures, direct sunlight, high humidity, or water.

6. TROUBLESHOOTING

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace all 4 AAA batteries with fresh ones.

- Ensure there are no obstructions between the remote control and the JVC unit's infrared sensor.
- Make sure you are within the effective operating range and pointing the remote directly at the unit.

- **Certain Buttons Not Working:**

- Verify that the button is clean and not stuck.
- Confirm that the function you are trying to use is supported by your specific JVC unit model.
- For buttons under the sliding cover, ensure the cover is fully open.

- **Intermittent Operation:**

- This often indicates low battery power. Replace the batteries.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.

If you continue to experience issues after following these troubleshooting steps, please contact the seller for further assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RTRMRK42
Compatible Devices	JVC RM-RK42, KSRF150, CHX1500RF (Stereo System)
Connectivity Technology	Infrared
Power Source	4 AAA batteries (included)
Product Dimensions	7 x 3 x 1 inches (approx. 7 1/2" x 2 1/4" x 3/4" as per feature bullets)
Item Weight	5 ounces
Special Feature	Ergonomic
Max Number of Supported Devices	1 (Dedicated to the specified JVC units)

8. WARRANTY AND SUPPORT

This Redi-Remote replacement remote control is designed for reliable performance. For any concerns with the remote after purchase, or if you require technical assistance, please contact the seller directly through the platform where the purchase was made.

Please refer to your purchase documentation for specific warranty terms and conditions provided by the seller.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01M9FJCQ8>

More documents and user manuals: <https://manuals.plus/>