

Pyle PBMSPG11

Pyle PBMSPG11 Portable Bluetooth Speaker

INSTRUCTION MANUAL

Introduction

Thank you for purchasing the Pyle PBMSPG11 Portable Bluetooth Speaker. This compact and high-powered 2.1 channel stereo speaker system is designed for wireless music streaming and portable audio playback. Please read this manual carefully to ensure proper setup, operation, and maintenance of your device.

What's in the Box:

- Wireless Tube Speaker (PBMSPG11)
- USB Charging Cable
- Audio Connection Cable (3.5mm)
- Detachable Carry Strap

Safety Information

To ensure safe operation and prevent damage to the device, please observe the following safety precautions:

- **Water Exposure:** This device is **not water resistant**. Avoid exposure to water, rain, or moisture to prevent electric shock or damage.
- **Temperature:** Do not expose the speaker to extreme temperatures (hot or cold) or direct sunlight for extended periods.
- **Charging:** Use only the provided USB charging cable. Charge the internal battery for 3-5 hours. Do not charge for more than 8 hours to prevent potential battery damage.
- **Ventilation:** Ensure proper ventilation around the speaker. Do not block any ventilation openings.
- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosols.
- **Disassembly:** Do not attempt to disassemble, repair, or modify the unit yourself. Refer all servicing to qualified personnel.

- **Placement:** Place the speaker on a stable, flat surface to prevent it from falling.

Product Overview

Familiarize yourself with the various parts and controls of your Pyle PBMSPG11 speaker.

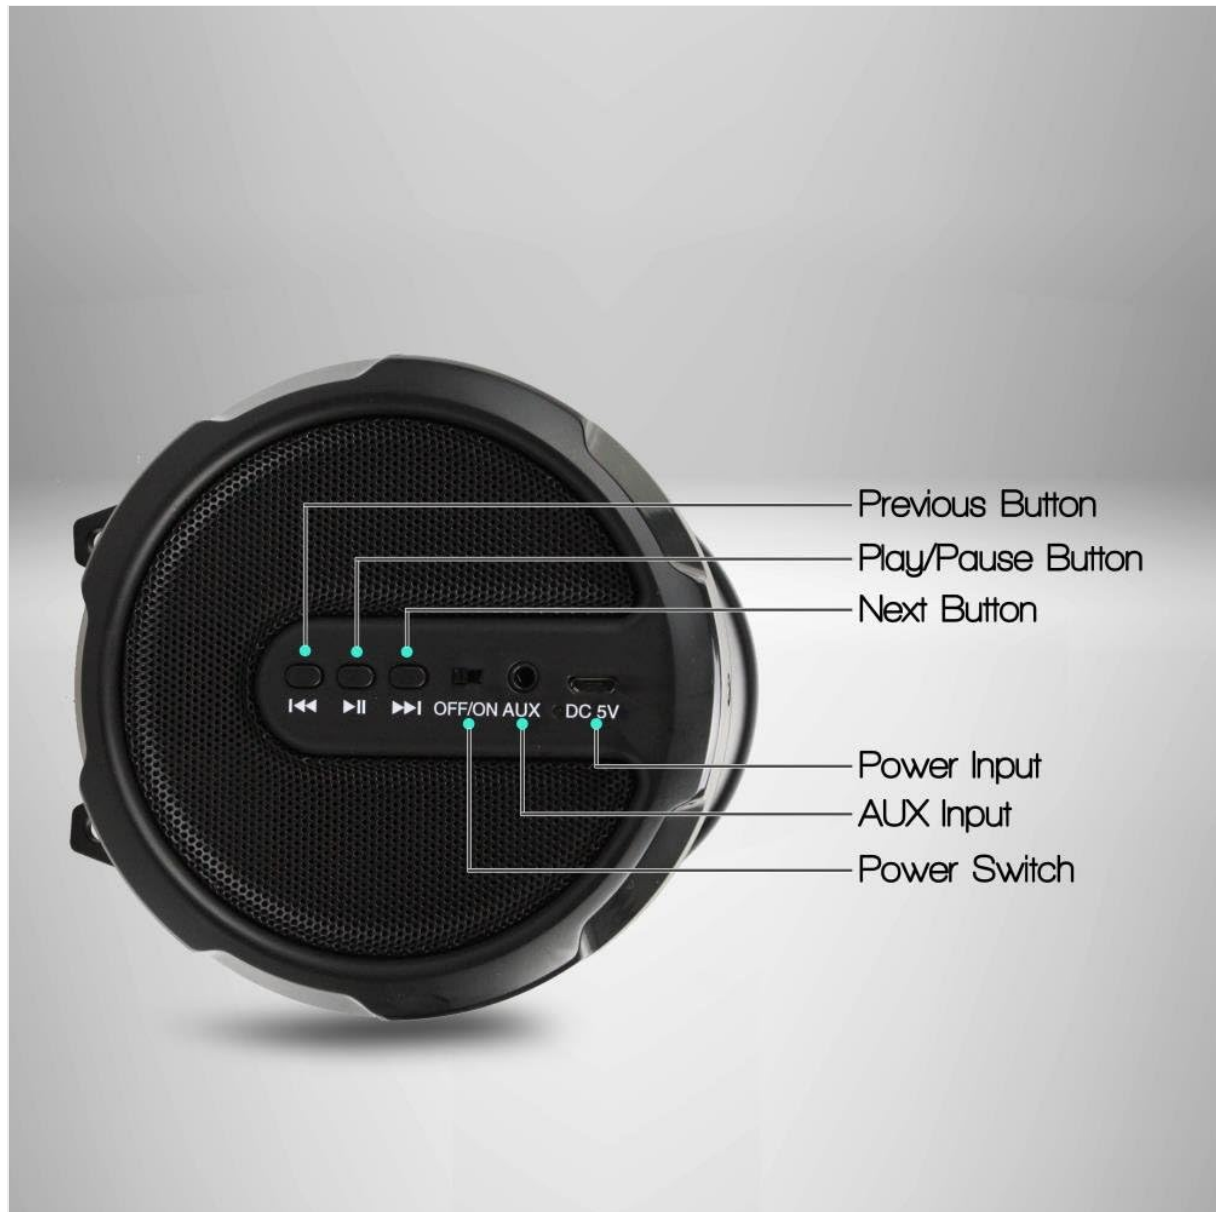


Image: Side view of the Pyle PBMSPG11 speaker highlighting the control panel and input ports.

Control Panel and Ports:

- **Previous Button:** Press to go to the previous track.
- **Play/Pause Button:** Press to play or pause audio playback.
- **Next Button:** Press to go to the next track.
- **OFF/ON/AUX Switch:** Power switch for turning the unit ON/OFF and selecting AUX mode.
- **DC 5V Input:** Power input port for charging the speaker using the USB charging cable.
- **AUX Input:** 3.5mm audio input jack for connecting external audio devices.



Image: Front-side view of the Pyle PBMSPG11 Portable Bluetooth Speaker, showcasing its cylindrical design and speaker grille.

Setup

1. Charging the Speaker:

1. Locate the DC 5V input port on the side panel of the speaker.
2. Connect the small end of the provided USB charging cable to the DC 5V input port.
3. Connect the larger end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate. Charge the speaker for approximately 3-5 hours for a full charge. Do not exceed 8 hours of charging.
5. Once fully charged, disconnect the USB charging cable.

2. Powering On/Off:

- To power on the speaker, slide the OFF/ON/AUX switch to the 'ON' position.
- To power off the speaker, slide the OFF/ON/AUX switch to the 'OFF' position.

Operating Instructions

1. Bluetooth Pairing:

The PBMSPG11 speaker supports Bluetooth version 2.1 with A2DP for wireless audio streaming.

1. Ensure the speaker is powered on and in Bluetooth mode (it typically defaults to Bluetooth when powered on, or after AUX is disconnected).
2. On your mobile device (smartphone, tablet, PC, etc.), enable Bluetooth and search for available devices.
3. Select '**PyleUSA**' from the list of found devices.
4. Once paired, the speaker will indicate a successful connection (e.g., an audible tone).
5. You can now stream audio wirelessly from your device to the speaker. The wireless range is over 30 feet (10 meters).

2. AUX (3.5mm) Input:

To connect an external audio device via the 3.5mm AUX input:

1. Slide the OFF/ON/AUX switch to the 'AUX' position.
2. Connect one end of the provided 3.5mm audio connection cable to the AUX input jack on the speaker.
3. Connect the other end of the audio cable to the headphone jack or audio output of your external device.
4. The speaker will automatically switch to AUX input mode. Adjust the volume on both your external device and the speaker.

3. Playback Controls:

- **Play/Pause:** Press the Play/Pause button to start or pause the current track.
- **Previous Track:** Press the Previous button to skip to the beginning of the current track or to the previous track.
- **Next Track:** Press the Next button to skip to the next track.

Maintenance

Cleaning:

- Always power off and unplug the speaker before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

Storage:

- When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- It is recommended to charge the battery periodically (e.g., every 3 months) to maintain battery health, even if not in use.

Battery Care:

- Avoid fully discharging the battery frequently.
- Do not leave the speaker connected to power for excessively long periods after it is fully charged (e.g., overnight). Adhere to the 3-8 hour charging guideline.

Troubleshooting

If you encounter issues with your Pyle PBMSPG11 speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the USB charging cable.
No sound from speaker.	Volume is too low; Incorrect input source; Device not connected properly.	Increase volume on both speaker and connected device. Ensure correct input mode (Bluetooth/AUX). Re-pair Bluetooth or re-connect AUX cable.

Problem	Possible Cause	Solution
Bluetooth pairing fails.	Speaker not in pairing mode; Device Bluetooth off; Too far from speaker.	Ensure speaker is on and Bluetooth is active. Turn Bluetooth off/on on your device. Move device closer to speaker (within 30 ft).
Sound is distorted or unclear.	Volume too high; Audio source quality is poor; Interference.	Reduce volume on speaker and/or connected device. Try a different audio source. Move speaker away from other electronic devices.

Specifications

Detailed technical specifications for the Pyle PBMSPG11 Portable Bluetooth Speaker:

- **Model:** PBMSPG11
- **Power Output:** 40 Watt MAX
- **Sound System:** Dual 2" Mid-Ranges + 3" Subwoofer
- **Speaker Type:** 2.1 Channel Hi-Fi Active Stereo
- **Rechargeable Battery:** 3.7V Li-iOn, 1500mAh
- **Impedance:** 4 Ohm
- **Signal/Noise Ratio:** >82dB
- **Frequency Response:** 100-20kHz
- **Bluetooth Version:** 2.1, A2DP
- **Bluetooth Network Name:** 'PyleUSA'
- **Wireless Range:** Over 30'+ Feet (10 Meters)
- **Audio Input:** 3.5mm Aux Input Jack
- **Power Input:** DC, 5V/1A
- **Housing Material:** Engineered ABS
- **Product Dimensions (L x W x H):** 8.9" x 4.5" x 4.7"
- **Item Weight:** 2.61 pounds
- **Water Resistance:** Not Water Resistant

PBMSPG11



Image: Diagram showing the dimensions of the Pyle PBMSPG11 speaker: 8.9 inches long, 4.5 inches wide, and 4.7 inches high.

Warranty and Support

Limited Warranty:

This Pyle PBMSPG11 speaker comes with a limited warranty. Please refer to the warranty card included with your purchase or visit the official Pyle website for detailed warranty terms and conditions.

Customer Support:

If you have any questions, require technical assistance, or need to report an issue that cannot be resolved using the troubleshooting guide, please contact Pyle customer support. Contact information can typically be found on the official Pyle website or on the product packaging.