

[Manuals.plus](#) /

› [Panasonic](#) /

› Panasonic 2.2 cu. ft. Stainless-Steel Microwave Oven with Inverter Technology Instruction Manual

## Panasonic NN-SN966SR

# Panasonic 2.2 cu. ft. Stainless-Steel Microwave Oven

Model: NN-SN966SR

## INTRODUCTION

---

This manual provides detailed instructions for the safe and efficient operation of your new Panasonic 2.2 cu. ft. Stainless-Steel Microwave Oven with Inverter Technology. Please read this manual thoroughly before using the appliance and retain it for future reference. This microwave oven is designed for household use only.

## IMPORTANT SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the appliance.

## UNBOXING AND SETUP

---

Carefully remove the microwave oven from its packaging. Inspect the oven for any damage. Ensure all packing materials, including the turntable and roller ring, are removed from the oven cavity.



Figure 1: Front view of the Panasonic 2.2 cu. ft. Stainless-Steel Microwave Oven.

## Placement

- Place the oven on a flat, stable surface that can support its weight.
- Ensure adequate space for ventilation: at least 4 inches (10 cm) of space on the top, sides, and rear of the oven.
- Do not block air vents.

## Turntable Installation

Place the roller ring in the center of the oven floor. Place the glass turntable securely on the roller ring. Ensure the turntable is properly seated before operating the oven.



Figure 2: Angled view of the microwave oven, highlighting the spacious interior and glass turntable.

## OPERATING INSTRUCTIONS

---

### Setting the Clock

1. Press the **Clock Set** button.
2. Enter the current time using the number pads.
3. Press **Clock Set** again to confirm.

### Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door securely.
3. Enter the desired cooking time using the number pads. For example, for 1 minute and 30 seconds, press **1, 3, 0**.
4. To adjust power level (default is high), press **Power Level** and then the desired number (1-10).
5. Press **Start** to begin cooking.

### Quick 30 Function

The **Quick 30** button allows for quick cooking at full power. Each press adds 30 seconds of cooking time, up to 5 minutes.

1. Press **Quick 30** for desired cooking time.
2. Press **Start** (optional, oven will start automatically after a few seconds).

### Inverter Turbo Defrost

This feature allows for rapid and even defrosting of food items based on weight.

1. Press **Inv. Turbo Defrost (lb/kg)**.

2. Enter the weight of the food using the number pads.
3. Press **Start**.

## FEATURES

---

- **Inverter Technology:** Provides a seamless stream of cooking power even at lower settings, ensuring consistent and evenly cooked food.
- **Genius Sensor:** Automatically adjusts power and cooking time for various foods, ensuring optimal results without guesswork.
- **Large Capacity:** With 2.2 cu. ft. of interior space, this microwave can accommodate larger dishes and platters.
- **Keep Warm Function:** Maintains food at a warm temperature until ready to serve.

## MAINTENANCE AND CLEANING

---

Regular cleaning of your microwave oven will ensure its longevity and efficient operation.

- **Interior:** Wipe the interior cavity with a damp cloth and mild detergent after each use. For stubborn stains, place a bowl of water with lemon slices inside and microwave for 2-3 minutes to loosen residue, then wipe clean.
- **Exterior:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or scouring pads.
- **Turntable and Roller Ring:** The glass turntable and roller ring can be washed with warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seals:** Regularly wipe the door seals and adjacent parts with a damp cloth to remove any food spills or residue.

## TROUBLESHOOTING

---

Problem	Possible Cause / Solution
Oven will not start	<b>Door not closed:</b> Ensure the door is securely latched. <b>Plug not inserted:</b> Check if the power cord is properly plugged into an electrical outlet. <b>Fuse blown or circuit breaker tripped:</b> Replace fuse or reset circuit breaker. <b>Incorrect operation:</b> Re-enter cooking time and press Start.
Food is not cooking evenly	<b>Food quantity:</b> Large quantities may require longer cooking times or stirring. <b>Improper dish:</b> Use microwave-safe cookware. <b>Food placement:</b> Ensure food is centered on the turntable.
Oven light not working	<b>Bulb needs replacement:</b> Contact qualified service personnel.

## SPECIFICATIONS

---

Feature	Detail
Brand	Panasonic
Model Number	NN-SN966SR
Capacity	2.2 Cubic Feet

Feature	Detail
Wattage	1250 Watts
Color	Stainless Steel
Installation Type	Countertop
Dimensions (D x W x H)	19.41"D x 23.88"W x 14"H
Item Weight	43 Pounds
Included Components	Turntable

## WARRANTY AND SUPPORT

---

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Panasonic support website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may contact Panasonic Customer Service.