

Spirit Of Gamer SOG-RFXGP

Spirit Of Gamer XGP Wireless Xtrem Controller User Manual

Model: SOG-RFXGP

INTRODUCTION

This manual provides comprehensive instructions for the Spirit Of Gamer XGP Wireless Xtrem Controller. Please read this manual carefully before using the product to ensure proper operation and to maximize your gaming experience. Keep this manual for future reference.

1. PACKAGE CONTENTS

- Spirit Of Gamer XGP Wireless Xtrem Controller
- USB Nano Receiver (2.4 GHz RF)
- USB Charging Cable
- User Manual

2. SETUP

2.1. Connecting the Controller

Wireless Connection (PC)

1. Insert the USB Nano Receiver into an available USB port on your PC.
2. Turn on the controller by pressing the **Home** button. The LED indicator will flash.
3. The controller will automatically pair with the receiver. Once connected, the LED indicator will become solid.
4. If the connection is not established, ensure the receiver is properly inserted and the controller is charged.



Image: Front view of the Spirit Of Gamer XGP Wireless Xtrem Controller with its USB Nano Receiver.

Wired Connection (PC/PS3)

1. Connect one end of the USB charging cable to the controller's USB port.
2. Connect the other end of the USB charging cable to an available USB port on your PC or PlayStation 3 console.
3. The controller will automatically be recognized and can be used in wired mode. This also charges the controller.

2.2. Charging the Controller

The controller features a built-in rechargeable battery with approximately 12 hours of autonomy. When the battery is low, the LED indicator may flash rapidly or change color (depending on the model).

1. Connect the controller to a USB power source (PC USB port, USB wall adapter) using the provided USB charging cable.
2. The LED indicator will show the charging status.
3. A full charge typically takes about 2.5 hours.
4. You can continue to use the controller in wired mode while it is charging.

3. OPERATING

3.1. Controller Layout and Functions

The XGP Wireless Xtrem Controller features 12 digital buttons, 360° analog sticks, dual analog triggers, and vibration motors for enhanced gaming feedback.



Image: Side view of the controller highlighting its ergonomic design and button placement.

Buttons and Controls

- **Analog Sticks (Left & Right):** For precise movement and camera control.
- **D-Pad (Octo-directional):** For directional input, especially in fighting games or menu navigation.
- **Action Buttons (A, B, X, Y / Square, Triangle, Circle, Cross):** Standard action inputs.
- **Shoulder Buttons (L1, R1) & Triggers (L2, R2):** For various in-game actions.
- **SELECT Button:** Typically used for menu access or specific game functions.
- **START Button:** Typically used for pausing games or confirming selections.
- **HOME Button:** Powers on/off the controller and accesses system menus (e.g., PlayStation menu).
- **TURBO Button:** Activates the Rapid Fire function.

3.2. Rapid Fire Function (TURBO)

The Rapid Fire function allows a button to be pressed repeatedly as long as it is held down, providing an advantage in certain games.

1. Press and hold the **TURBO** button.
2. While holding **TURBO**, press the desired action button (e.g., A, B, X, Y, L1, R1, L2, R2) you wish to assign the Rapid Fire function to.
3. Release both buttons. The assigned button will now activate Rapid Fire when pressed.
4. To deactivate Rapid Fire for a specific button, repeat steps 1 and 2.

3.3. Vibration Feedback

The controller is equipped with dual vibration motors that provide tactile feedback during gameplay, enhancing immersion. This feature is automatically active when supported by the game.

3.4. LED Indicator

The LED indicator provides information on the controller's status:

- **Flashing:** Searching for connection or low battery.
- **Solid:** Connected and operational.
- **During Charging:** Indicates charging status (specific behavior may vary, refer to visual cues on the controller).

4. MAINTENANCE

4.1. Care and Maintenance

To ensure the longevity and optimal performance of your controller, follow these guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the controller. Do not use abrasive cleaners, solvents, or harsh chemicals.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge the controller regularly, even if not in use for extended periods, to maintain battery health.
- **Avoid Impact:** Do not drop the controller or subject it to strong impacts, as this can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your XGP Wireless Xtrem Controller, refer to the following common solutions:

Problem	Possible Cause	Solution
Controller does not connect wirelessly.	USB Nano Receiver not properly inserted or not recognized. Controller battery is low. Interference from other wireless devices.	Ensure the USB Nano Receiver is fully inserted into a working USB port. Try a different USB port. Charge the controller fully. Move closer to the receiver or reduce other wireless device usage.
Controller does not charge.	Faulty USB cable or power source. Controller's charging port is damaged.	Try a different USB cable and/or a different USB power source. Contact customer support if the port appears damaged.
Buttons or analog sticks are unresponsive.	Software driver issue. Physical damage or debris.	Ensure your PC drivers are up to date. Test the controller on another device if possible. Gently clean around the buttons/sticks. Avoid dropping the controller.

Vibration feedback is not working.	Game does not support vibration. Vibration function is disabled in game settings.	Check if the game you are playing supports vibration feedback. Verify in-game settings to ensure vibration is enabled.
------------------------------------	--	---

6. TECHNICAL SPECIFICATIONS

- Model Number:** SOG-RFXGP
- Connectivity:** Wireless (2.4 GHz RF via USB Nano Receiver), Wired (USB), Bluetooth
- Operating Distance:** 8-10 meters (wireless)
- Battery Life:** Approximately 12 hours
- Charging Time:** Approximately 2.5 hours
- Buttons:** 12 digital buttons, 360° analog sticks, dual analog triggers, analog bumpers, Home button, Turbo button
- Feedback:** Dual vibration motors
- D-Pad:** Octo-directional
- Compatibility:** PC, PlayStation® 3
- Dimensions (L x W x H):** 10 x 10 x 3 cm
- Weight:** 358 grams
- Certifications:** CE, RoHS, WEEE

7. WARRANTY INFORMATION

Spirit Of Gamer products are covered by a limited warranty against manufacturing defects. Please refer to the warranty card included with your product or visit the official Spirit Of Gamer website for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.

8. CUSTOMER SUPPORT

For technical assistance, troubleshooting, or product inquiries, please visit the official Spirit Of Gamer website or contact their customer support team. Contact information can typically be found on the product packaging or the official website.