



Manuals.plus /

› Pyle /

› Pyle Portable 2-in-1 Washing Machine & Spin-Dryer User Manual

Pyle PUCWM22

Pyle Portable 2-in-1 Washing Machine & Spin-Dryer User Manual

Model: PUCWM22

1. INTRODUCTION

Thank you for choosing the Pyle Portable 2-in-1 Washing Machine & Spin-Dryer. This compact and efficient appliance is designed for small laundry loads, offering convenience without requiring special plumbing or installation. Please read this manual thoroughly before operation to ensure safe and optimal performance.



Image: The Pyle Portable 2-in-1 Washing Machine and Spin-Dryer. This compact unit features a blue and white design with two top-loading compartments for washing and spin-drying.


2. IMPORTANT SAFETY INFORMATION

- Read all instructions before using the appliance.
- Ensure the power supply matches the appliance's requirements (110V).

- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Always unplug the appliance when not in use or before cleaning.
- Keep children and pets away from the appliance during operation.
- Do not use water hotter than 104 degrees Fahrenheit (40 degrees Celsius) to prevent damage to internal components.
- Ensure the drain hose is properly positioned to prevent water overflow.
- Avoid overloading the washer or spin-dryer to prevent damage and ensure efficient operation.
- If the appliance makes excessive noise or vibrates heavily during spin-drying, the load may be unbalanced. Stop the machine, redistribute the clothes, and restart.

3. PRODUCT FEATURES

- **2-in-1 Functionality:** Combines washing and spin-drying in one compact unit.
- **Top-Loading Design:** Convenient and easy access for loading and unloading laundry.
- **No Special Installation:** Does not require any special parts or plumbing, making it ideal for apartments, dorms, or RVs.
- **Rotary Controls:** Simple knob controls for wash timer, program selection (soft/normal), drain, and spin timer.
- **Energy & Water Efficient:** Designed to minimize water and energy consumption for smaller loads.
- **Compact & Portable:** Lightweight and easy to move and store.
- **Translucent Tub Window:** Allows you to monitor the washing process.

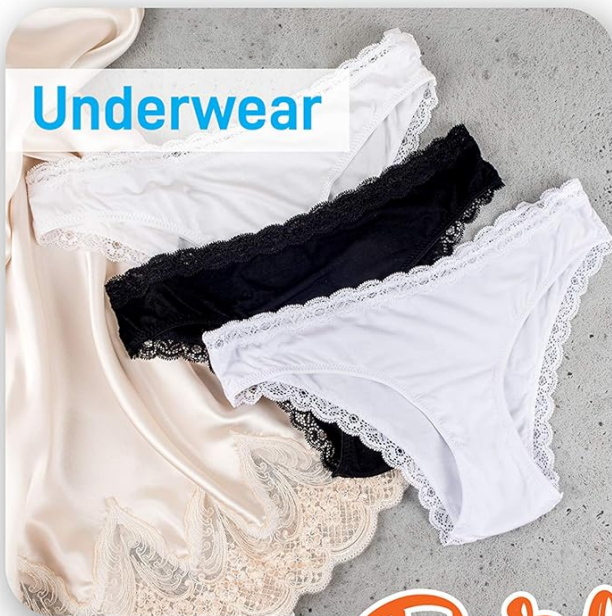

Perfect for

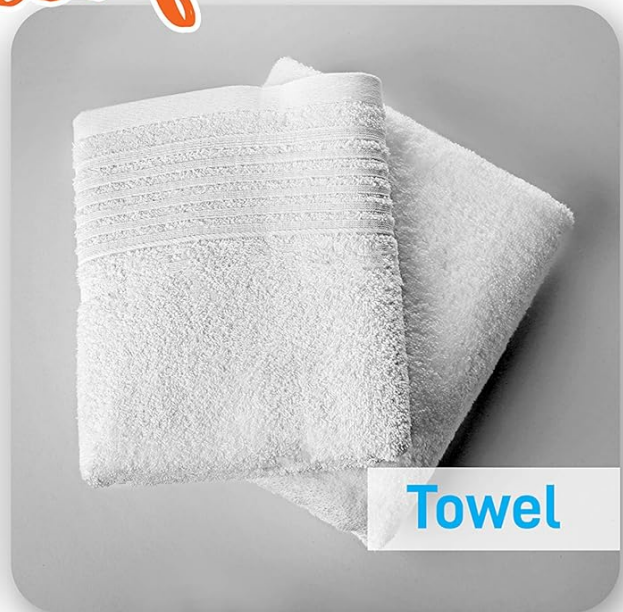


Image: This image illustrates the types of small laundry items ideal for the Pyle portable washing machine, including underwear, socks, t-shirts, and towels.

4. SETUP AND PLACEMENT

The Pyle Portable Washing Machine is designed for hassle-free setup. No special plumbing is required.

4.1 Unpacking

Carefully remove the appliance from its packaging. Inspect for any damage during transit. Keep all packaging materials until you are satisfied with the product.

4.2 Placement

Place the washing machine on a flat, stable surface. Ensure there is enough space around the unit for proper ventilation and operation. The unit's dimensions are approximately 13.9" (D) x 22.2" (W) x 23.6" (H).

Dimensions



Image: A visual representation of the washing machine's dimensions, indicating its height (24 inches), width (22 inches), and depth (14 inches). This helps in planning placement.

4.3 Power Connection

Connect the power cord to a standard 110V electrical outlet. Ensure the outlet is easily accessible.

4.4 Drainage Hose

Position the drainage hose to allow water to drain into a sink, bucket, or bathtub. The machine uses gravity for drainage, so the drain point must be lower than the machine's drain outlet.

Energy & Water Efficient Design



Image: The back of the washing machine, highlighting its energy efficiency label and the location of the drainage hose, which is crucial for proper water disposal.

5. OPERATING INSTRUCTIONS

5.1 Washing Clothes

1. **Load Laundry:** Open the lid of the washing tub. Place your clothes into the washing tub. Do not exceed the maximum wash-load capacity of 7.7 lbs.
2. **Add Water:** Fill the washing tub with water using a bucket or hose. Ensure the water level covers the clothes but does not exceed the 'H' (High) mark.
3. **Add Detergent:** Add the appropriate amount of laundry detergent directly into the washing tub.
4. **Select Program:** Turn the 'Program & Drain Selector' knob to either 'Soft' for delicate items or 'Normal' for regular clothes.
5. **Set Wash Timer:** Turn the 'Time Washer' knob to your desired wash time (up to 15 minutes). The machine will start automatically.
6. **Drain Water:** Once the wash cycle is complete, turn the 'Program & Drain Selector' knob to 'Drain' to empty the

water from the washing tub.

7. **Rinse (Optional):** For a rinse cycle, refill the tub with clean water and set the 'Time Washer' for a few minutes. Drain the water again after rinsing.



Image: A top-down view of the washing machine in operation, showing clothes being agitated in the wash tub. This illustrates the active washing process.

5.2 Spin-Drying Clothes

1. **Transfer Clothes:** Carefully transfer the washed and rinsed clothes from the washing tub to the spin-dryer tub (the smaller compartment).
2. **Distribute Evenly:** Distribute the clothes evenly inside the spin-dryer tub to prevent imbalance and excessive vibration. Do not exceed the spin-dryer capacity of 3.3 lbs.
3. **Secure Lid:** Place the spin-dryer lid firmly on top of the clothes.
4. **Set Spin Timer:** Turn the 'Spin Timer' knob to your desired spin time (up to 5 minutes). The machine will start spinning.
5. **Remove Clothes:** Once the spin cycle is complete, remove the clothes. They will be damp but significantly

drier than after a wash cycle.

Easy to Operate

Separate timer control settings for washer and spinner



Image: A detailed view of the control panel, highlighting the three rotary knobs: 'Time Washer', 'Program & Drain Selector', and 'Spin Timer'. These controls are used to manage the washing and drying cycles.

5.3 Official Product Video

Video: An official product video titled "Pyle Portable Washer & Spin Dryer, Mini Washing Machine." This video demonstrates the features and operation of the Pyle portable washing machine, providing a visual guide to its use.

6. MAINTENANCE AND CARE

- **Cleaning:** After each use, wipe down the interior and exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Draining:** Ensure all water is drained from both tubs after use to prevent mildew and odors.
- **Storage:** If storing for an extended period, ensure the machine is completely dry. Store in a cool, dry place away from direct sunlight.
- **Drain Hose:** Periodically check the drain hose for cracks or blockages. Replace if necessary.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	Not plugged in; Power outage; Timer not set.	Check power connection; Verify power supply; Set the timer knob.
Excessive vibration/noise during spin	Unbalanced load in spin-dryer.	Stop the machine, redistribute clothes evenly in the spin-dryer, and restart.
Water not draining	Drain hose not positioned correctly (too high); Drain selector not set to 'Drain'; Hose kinked or blocked.	Ensure drain hose is lower than the machine's drain outlet; Turn selector to 'Drain'; Check hose for kinks or blockages.
Motor overheats and stops	Continuous use without rest; Overloaded.	Allow the motor to cool down for 15-20 minutes before restarting; Reduce load size.
Clothes not clean	Insufficient detergent; Overloaded; Incorrect wash time.	Use appropriate amount of detergent; Reduce load size; Increase wash time.

8. TECHNICAL SPECIFICATIONS

Model: PUCWM22

Power Supply: 110V

Washing Motor Power: 250 Watt

Wash-Load Capacity: 7.7 lbs.

Spin-Dryer Power: 120 Watt

Spin-Dryer Capacity: 3.3 lbs.

Product Dimensions (L x W x H): 13.9" x 22.2" x 23.6"

Item Weight: 24.25 lbs.

Material: Plastic

Controls Type: Knob

Access Location: Top Load

Drum Material: Stainless Steel

9. WARRANTY AND SUPPORT

This Pyle Portable 2-in-1 Washing Machine & Spin-Dryer comes with a **1 Year Limited Warranty**. For warranty claims, technical support, or further assistance, please refer to the official Pyle website or contact their customer service department.

A detailed PDF user manual may also be available for download from the manufacturer's website for additional information and diagrams. You can often find this by searching for 'Pyle PUCWM22 User Manual PDF'.

