

[Manuals.plus](#) /

› [Edison Professional](#) /

› Edison Professional Party System 1000MKII User Manual

Edison Professional Party System 1000MKII

Edison Professional Party System 1000MKII User Manual

Bluetooth Wireless Speaker

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Edison Professional Party System 1000MKII Bluetooth Wireless Speaker. Please read this manual thoroughly before using the product and retain it for future reference. This speaker is designed to deliver powerful audio and versatile connectivity for various social events and gatherings.





Figure 1.1: Front view of the Edison Professional Party System 1000MKII, showcasing the illuminated woofer, tweeter, control panel, and side handles with wheels for portability.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following precautions:

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not open the cabinet. Refer servicing to qualified personnel only.
- Ensure proper ventilation. Do not block ventilation openings.
- Place the unit on a stable, flat surface.
- Unplug the unit during lightning storms or when unused for long periods.
- Keep away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

3. FEATURES

The Edison Professional Party System 1000MKII offers a range of features for an enhanced audio experience:

- 2000 Watt PMPO illuminated 12-inch woofer speaker.
- Wireless Bluetooth pairing capability.
- Includes a remote control for convenient operation.
- Built-in FM Radio tuner.

- USB and SD card input for direct media playback.
- Auxiliary input for connecting external audio devices.
- Microphone input (microphone not included).
- Integrated EQ mixer for sound customization.
- LED display for operational feedback.
- RCA input and output connections.
- LED lighting around the tweeter area and RGB lighting on the 12-inch woofer.
- Side handles and wheels for easy transport.

4. SETUP

1. **Unpacking:** Carefully remove the speaker from its packaging. Retain the packaging materials for future transport or storage.
2. **Placement:** Place the speaker on a stable, flat surface. Utilize the integrated wheels and side handles for easy positioning. Ensure there is adequate space around the unit for ventilation.
3. **Power Connection:** Connect the power cable to the AC input on the speaker and then to a standard electrical outlet. Ensure the power source matches the voltage requirements specified on the unit.
4. **Initial Power On:** Press the Power button, usually located on the control panel, to turn on the unit. The LED display should illuminate.

5. OPERATING INSTRUCTIONS

5.1. Bluetooth Pairing

1. Turn on the speaker.
2. Press the Mode button on the control panel until "Bluetooth" or "BT" appears on the LED display. The unit will enter pairing mode, indicated by a flashing Bluetooth icon or sound.
3. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "Edison Professional" or "Party System 1000MKII" from the list of devices.
5. Once paired, the speaker will emit a confirmation sound, and the Bluetooth indicator will stop flashing. You can now play audio wirelessly from your device.

5.2. FM Radio Operation

1. Press the Mode button to select FM Radio mode.
2. Press the Play/Pause button to auto-scan and save available FM stations.
3. Use the Previous/Next track buttons to navigate between saved stations.

5.3. USB/SD Card Playback

1. Insert a USB flash drive or SD card into the respective port.
2. The unit should automatically switch to USB/SD mode and begin playing compatible audio files. If not, press the Mode button to select.
3. Use the Play/Pause, Previous/Next track buttons to control playback.

5.4. Auxiliary Input (AUX)

1. Connect an external audio device (e.g., MP3 player, laptop) to the AUX input using a 3.5mm audio cable or RCA cables.

- 2. Press the Mode button to select AUX mode.
- 3. Control playback from your connected device.

5.5. Microphone Input

- Connect a wired microphone (not included) to the microphone input jack.
- Adjust the microphone volume using the dedicated MIC VOL knob on the control panel.

5.6. EQ Mixer and LED Lighting

- Use the EQ controls on the panel to adjust bass, treble, and other audio parameters to your preference.
- The LED lighting around the tweeter and on the woofer can be controlled via a dedicated button or switch, allowing you to cycle through different lighting modes or turn them off.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, preferably in its original packaging.
- **Ventilation:** Ensure ventilation openings are clear of dust and debris to prevent overheating.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; outlet not active.	Check power cable connection; try a different outlet.
No sound	Volume too low; incorrect input mode; faulty cable.	Increase volume; select correct input mode (Bluetooth, AUX, USB/SD); check/replace audio cables.
Bluetooth not pairing	Speaker not in pairing mode; device too far; interference.	Ensure speaker is in BT pairing mode; move device closer; turn off other Bluetooth devices.
Remote control not working	Dead batteries; obstruction; too far.	Replace batteries; remove obstructions; ensure line of sight to IR receiver.

8. SPECIFICATIONS

Feature	Specification
Model	Party System 1000MKII
Power Source	Corded Electric
Connector Type	Auxiliary, RCA, USB
Product Weight	15.42 kg (34 Pounds)
Output Power (PMPO)	2000 Watts
Nominal Speaker Output Power	1000 Watts

Feature	Specification
Audio Input	Auxiliary Input, USB Input
Recommended Use	Parties and Social Events
Manufacturer	Edison Professional
UPC	636123236011
Special Features	Bluetooth, Wireless
Product Dimensions (LxWxH)	39.12 x 43.18 x 71.88 cm (15.4 x 17 x 28.3 inches)
Connectivity Technology	Bluetooth, USB
Compatible Devices	Headphones, Laptop, Smartphone
Mounting Type	Floor Mount

9. WARRANTY AND SUPPORT

The Edison Professional Party System 1000MKII comes with a 90-day limited warranty for parts and 1-year labor included. For warranty claims, technical support, or service inquiries, please contact Edison Professional customer service. Keep your purchase receipt as proof of purchase.

For the most up-to-date support information, please visit the official Edison Professional website or refer to the contact details provided with your product packaging.

© 2023 Edison Professional. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where can I get a replacement remote control for the Edison Professional Party System 1000MKII?

To obtain a replacement remote control for your Edison Professional Party System 1000MKII, you should contact the manufacturer directly as they handle parts and service inquiries. According to the manual, you can reach out...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B01MAZD42B>

More documents and user manuals: <https://manuals.plus/>