

[Manuals.plus](#) /

› [Kitchen Home](#) /

› Super Squeegee Window Washer Instruction Manual

## Kitchen Home SC-113B

# Super Squeegee Window Washer Instruction Manual

Model: SC-113B

Brand: Kitchen Home

## INTRODUCTION

The Super Squeegee Window Washer is a comprehensive cleaning kit designed for efficient and streak-free cleaning of windows, glass, mirrors, and other smooth surfaces. This versatile tool is suitable for both residential and commercial applications, including tall windows, RVs, and automotive glass. It combines a silicone squeegee blade with a microfiber scrubbing pad for a complete cleaning solution.



Image: The complete Super Squeegee Window Washer kit, featuring both the large and small squeegee heads, along with the extendable pole.

## PRODUCT COMPONENTS

The Super Squeegee Window Washer kit includes the following components:

- **1 Large 13-inch Super Squeegee:** Features a silicone blade and an attached microfiber scrubbing pad.
- **1 Small 9-inch Super Squeegee:** Features a silicone blade and an attached microfiber scrubbing pad.
- **1 Telescoping Extension Pole:** Extends from approximately 29 inches to 59 inches for extended reach.
- **1 Spare 13-inch Microfiber Pad:** Replacement pad for the large squeegee.
- **1 Spare 9-inch Microfiber Pad:** Replacement pad for the small squeegee.

Silicone Squeegee blade removes water stains and lasts longer than conventional rubber blades

Microfiber scrubbing pad gently scrubs and traps dirt with just soap and water

Telescopic Extension Pole gives you an additional 4 feet of reach

Lightweight aluminum extension pole makes cleaning and reaching easier

Anti-Slip grip and opening for easy hanging



Image: A detailed breakdown of the Super Squeegee components, illustrating the two squeegee sizes, the extension pole, and the spare microfiber pads.

## SETUP INSTRUCTIONS

- Attach Squeegee Head:** Select the desired squeegee head (13-inch or 9-inch). Align the connector on the squeegee head with the end of the telescoping pole. Push firmly until it clicks securely into place.
- Adjust Pole Length:** To extend the pole, twist the locking collar counter-clockwise to loosen. Pull the pole to the desired length. Twist the locking collar clockwise to tighten and secure the pole at the chosen length. Ensure the pole is firmly locked before use.
- Replace Microfiber Pad (if needed):** The microfiber pads are detachable. To remove, gently pull the pad away from the squeegee head. To attach a new pad, align it with the squeegee head and press firmly along the edges until it is securely fastened.

7pc

kitchen<sup>+</sup>  
HOME



Image: Visual guide demonstrating the attachment of the squeegee head to the extension pole and the detachment of the microfiber pad.

## OPERATING INSTRUCTIONS

### Preparation:

- Prepare a cleaning solution using just soap and water. The advanced microfiber scrubbing pad is designed to effectively clean surfaces without the need for strong chemical sprays.
- Dip the microfiber scrubbing pad into the cleaning solution, ensuring it is adequately saturated.

### Cleaning Process:

1. **Scrubbing:** Use the microfiber scrubbing pad to gently scrub the surface. The pad is designed to trap dirt and grime effectively.
2. **Wiping:** After scrubbing, use the silicone squeegee blade to wipe the surface clean. Start from the top and pull downwards in a continuous, overlapping motion. For best results, overlap each stroke by about an inch.
3. **Edge Cleaning:** The oversized silicone blades are designed to help reach into corners more easily.

4. **Combined Use:** The squeegee and scrubber can be used together as one tool for a combined scrub and wipe action, or separated for specific tasks. When combined, the scrubbing pad helps keep the silicone blade wet, contributing to a streak-free finish.

### Applications:

The Super Squeegee is suitable for a variety of surfaces and environments:

- **Windows:** Ideal for residential and commercial windows, including tall and hard-to-reach areas.
- **Glass Surfaces:** Perfect for mirrors, shower doors, and glass tables.
- **Automotive:** Effective for cleaning car windows, windshields, and RVs.
- **Other Smooth Surfaces:** Can be used on tiled walls and other smooth, non-porous surfaces.

A person is shown from behind, using a long-handled squeegee to clean a large glass window. The window reflects a blue car and some greenery. The background is a bright green gradient. On the left, there are three circular icons: a hexagon, a chain link, and a feather. On the right, there is a logo for 'kitchen HOME' and a washing machine icon with the text 'washable microfiber heads'.

aluminum telescoping pole

durable construction

lightweight design

kitchen HOME

washable microfiber heads

Image: An individual demonstrating the use of the Super Squeegee with the extension pole for cleaning a large window.



Image: A visual representation of the Super Squeegee's versatility across various applications, including automotive, residential, commercial, and outdoor cleaning.

## MAINTENANCE

- **Microfiber Pads:** The microfiber pads are machine washable. After use, detach the pads from the squeegee heads and wash them with your regular laundry. Allow them to air dry completely before reattaching or storing. Regular cleaning ensures optimal performance and hygiene.
- **Silicone Blade:** The silicone blade is resistant to cracks and hardening. After each use, rinse the blade with clean water to remove any soap residue or debris. Wipe it dry with a clean cloth. Avoid storing the squeegee with the blade resting on a hard surface to prevent deformation.
- **Extension Pole:** Wipe the extension pole clean with a damp cloth after use. Ensure all parts are dry before collapsing and storing to prevent corrosion.
- **Storage:** Store the Super Squeegee kit in a clean, dry place away from direct sunlight and extreme temperatures. The

squeegee heads can be detached from the pole for compact storage.

TROUBLESHOOTING

| Problem                                     | Possible Cause                                                                                                                                                                                           | Solution                                                                                                                                                                                                                                                                                                      |
|---------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Streaks left on glass                       | <ul style="list-style-type: none"> <li>Blade is dirty or damaged.</li> <li>Insufficient cleaning solution.</li> <li>Improper squeegee technique (e.g., uneven pressure, stopping mid-stroke).</li> </ul> | <ul style="list-style-type: none"> <li>Clean the silicone blade thoroughly. If damaged, consider replacing the squeegee head.</li> <li>Ensure the microfiber pad is adequately wet with cleaning solution.</li> <li>Maintain consistent pressure and a continuous, overlapping motion when wiping.</li> </ul> |
| Squeegee not gliding smoothly               | <ul style="list-style-type: none"> <li>Surface is too dry.</li> <li>Blade is dry or has residue.</li> </ul>                                                                                              | <ul style="list-style-type: none"> <li>Ensure the surface is thoroughly wet with cleaning solution before squeegeeing.</li> <li>Rinse the blade and ensure it is clean. The microfiber pad helps keep the blade wet during use.</li> </ul>                                                                    |
| Extension pole slips or doesn't hold length | <ul style="list-style-type: none"> <li>Locking collar not tightened sufficiently.</li> <li>Debris inside the pole mechanism.</li> </ul>                                                                  | <ul style="list-style-type: none"> <li>Twist the locking collar clockwise firmly until the pole is secure.</li> <li>Inspect the pole's locking mechanism for any obstructions and clean if necessary.</li> </ul>                                                                                              |

SPECIFICATIONS

|                      |                                     |
|----------------------|-------------------------------------|
| Brand                | Kitchen Home                        |
| Model Number         | SC-113B                             |
| Color                | Green                               |
| Product Dimensions   | 13"W x 59"H (fully extended)        |
| Item Weight          | 1.96 Pounds                         |
| Blade Material       | Silicone                            |
| Handle Material      | Plastic                             |
| Blade Widths         | 13 Inches (large), 9 Inches (small) |
| UPC                  | 734869223422                        |
| Manufacturer         | SC Chang                            |
| Date First Available | April 28, 2016                      |

## WARRANTY AND SUPPORT

Specific warranty information for the Super Squeegee Window Washer is not provided in the available product data. For details regarding warranty coverage, product support, or any inquiries not covered in this manual, please contact the manufacturer, SC Chang, or the brand, Kitchen Home, directly through their official support channels. Please retain your proof of purchase for any warranty claims or support requests.

© 2024 Kitchen Home. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question