

## **ALLIMITY RM-ED017**

# **ALLIMITY RM-ED017 Replacement Remote Control User Manual**

For Sony TV Models

## **1. INTRODUCTION**

---

This manual provides instructions for the ALLIMITY RM-ED017 replacement remote control. This remote is designed to function as a direct replacement for the original Sony RM-ED017 remote, offering immediate functionality without the need for programming. Please read this manual carefully to ensure proper use and maintenance of your new remote control.

## **2. PRODUCT OVERVIEW**

---

The ALLIMITY RM-ED017 is a dedicated replacement remote control for specific Sony TV models. It features standard television control buttons for power, channel selection, volume adjustment, menu navigation, and other common functions. The remote operates using infrared technology.



**Image 1:** Front view of the ALLIMITY RM-ED017 replacement remote control, showing its button layout and design.

### 3. COMPATIBILITY

---

This remote control is compatible with the following Sony TV models:

- KDL-19L4000, KDL-19S5700, KDL-19S5710, KDL-19S5730
- KDL-22E5500, KDL-22S5500
- KDL-26L4000, KDL-26P5550, KDL-26S5550
- KDL-32L4000, KDL-32L4000K, KDL-32P3550, KDL-32P3600, KDL-32P5550, KDL-32P5650, KDL-32S5500, KDL-32S5550, KDL-32S5600, KDL-32S5650
- KDL-37P3600, KDL-37P5650, KDL-37S5500, KDL-37S5600, KDL-37S5650
- KDL-40P3600, KDL-40P5650, KDL-40S5500, KDL-40S5600, KDL-40S5650
- KDL-46WE5B

It also replaces original remote models such as RM-ED013, RM-ED014, RM-ED016, and RM-ED017.

### 4. SETUP

---

#### 4.1. Battery Installation

The remote control requires two AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



**Image 2:** Back of the remote control showing the open battery compartment and the detached battery cover, illustrating

## 4.2. First Use

This replacement remote control is pre-programmed for compatible Sony TV models. No additional setup or pairing is required. Once batteries are installed, the remote is ready for immediate use with your television.

## 5. OPERATING INSTRUCTIONS

---

Point the remote control directly at your Sony TV's infrared receiver. Ensure there are no obstructions between the remote and the TV.

- **Power Button:** Press to turn the TV on or off.
- **Channel Buttons (CH+/CH-):** Press to change channels up or down.
- **Volume Buttons (VOL+/VOL-):** Press to increase or decrease the volume.
- **Mute Button:** Press to mute or unmute the TV sound.
- **Number Buttons (0-9):** Use to directly enter channel numbers.
- **Menu/Home Button:** Accesses the TV's main menu or smart features.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate through menus and confirm selections.
- **Input/Source Button:** Selects different input sources (HDMI, AV, etc.).

## 6. SPECIFICATIONS

---

<b>Brand</b>	ALLIMITY
<b>Model Name</b>	RM-ED017
<b>Connectivity Technology</b>	Infrared (IR)
<b>Maximum Range</b>	10 Meters
<b>Power Source</b>	2 x AAA Alkaline Batteries
<b>Color</b>	Black
<b>Special Feature</b>	No setup required
<b>Manufacturer</b>	allimity factory
<b>Country of Origin</b>	China

## 7. TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA alkaline batteries.
  - Check for any obstructions between the remote and the TV's IR receiver.
  - Ensure you are within the maximum operating range (10 meters) and pointing the remote directly at the TV.
- **Some buttons not working:**
  - This remote is a direct replacement. If specific buttons do not work, verify your TV model is listed in the compatibility section.

- Clean the remote control buttons and surface if there is any dirt or residue.

## 8. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the remote is not used for an extended period, remove the batteries to prevent leakage.

## 9. WARRANTY AND SUPPORT

---

This ALLIMITY remote control comes with a 90-day warranty from the date of purchase. For warranty claims or technical support, please contact your retailer or the ALLIMITY customer service department. Keep your purchase receipt as proof of purchase.