

Frigidaire FRD03G4HPI

Frigidaire FRD03G4HPI Refrigerator User Manual

Model: FRD03G4HPI

[Safety Information](#)

[Product Overview](#)

[Setup & Installation](#)

[Operating Instructions](#)

[Care & Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

1. IMPORTANT SAFETY INFORMATION

Read all instructions before using this appliance to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the refrigerator is properly grounded.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Unplug the refrigerator before cleaning or making any repairs.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. PRODUCT OVERVIEW

The Frigidaire FRD03G4HPI is an independent stainless steel refrigerator designed for efficient food storage. It features an electromechanical temperature control system and adjustable feet for stable placement.



Figure 1: Front view of the Frigidaire FRD03G4HPI independent stainless steel refrigerator. This image shows the compact design and stainless steel finish of the appliance.

Key Features:

- Interior light for improved visibility.
- Electromechanical temperature control for precise settings.
- Adjustable feet for leveling on uneven surfaces.
- Two durable wire shelves for organized storage.
- Security lock with key for restricted access.
- Recessed handles for a sleek design.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Dispose of packaging responsibly. Check for any damage during transit. If damage is found, contact your retailer immediately.

3.2 Placement

- Place the refrigerator on a flat, stable surface strong enough to support it when fully loaded.
- Ensure adequate ventilation around the appliance. Allow at least 10 cm (4 inches) of space at the back and sides, and 30 cm (12 inches) at the top for proper air circulation.
- Avoid direct sunlight or heat sources (e.g., stove, heater) as this will increase energy consumption.
- This appliance is designed for independent installation. Do not embed it into cabinetry without ensuring proper ventilation.

3.3 Leveling the Appliance

The refrigerator must be level for proper operation. Adjust the adjustable feet at the bottom of the appliance by turning them clockwise or counter-clockwise until the refrigerator is stable and level.

3.4 Electrical Connection

Before plugging in the appliance, ensure the voltage and frequency match the specifications on the rating label

(115V/60Hz). Connect the refrigerator to a dedicated, properly grounded electrical outlet. Do not use extension cords or adapter plugs.

4. OPERATING INSTRUCTIONS

4.1 Initial Startup

After installation, wait for at least 2-4 hours before plugging in the refrigerator to allow the refrigerant to settle. Once plugged in, let the appliance run empty for 24 hours to reach its operating temperature before storing food.

4.2 Temperature Control

The refrigerator features an electromechanical temperature control. The control dial is typically located inside the refrigerator compartment. Turn the dial to adjust the cooling intensity. Higher numbers usually indicate colder temperatures. Start with a medium setting and adjust as needed based on ambient temperature and food load.

4.3 Interior Light

The incandescent interior light illuminates the compartment when the door is opened, providing visibility for stored items.

4.4 Security Lock

This model includes a security lock with a key. Use the key to lock or unlock the refrigerator door as needed. Keep the key in a safe place, out of reach of children.

5. CARE AND MAINTENANCE

5.1 Cleaning the Interior

Unplug the refrigerator before cleaning. Clean the interior regularly with a solution of mild detergent and warm water. Wipe dry thoroughly. Do not use abrasive cleaners, harsh chemicals, or hot water as they may damage surfaces.

5.2 Cleaning the Exterior

Wipe the exterior surfaces, especially the stainless steel, with a soft cloth and a mild, non-abrasive cleaner. For stainless steel, wipe in the direction of the grain to prevent streaks. Keep the door gasket clean to ensure a proper seal.

5.3 Defrosting

This refrigerator features an automatic defrosting system. Frost will periodically melt and drain into an evaporation tray. Ensure the drain hole is not blocked to allow proper water flow.

5.4 Power Outages

In case of a power outage, keep the refrigerator door closed to maintain the internal temperature for as long as possible. Avoid opening the door unnecessarily.

5.5 Vacation and Storage

For long vacations or storage, unplug the refrigerator, empty all contents, clean it thoroughly, and leave the door slightly ajar to prevent odors and mold growth.

6. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; reset circuit breaker; check household power.
Temperature is not cold enough.	Temperature control set too warm; door opened too frequently; warm food placed inside; poor ventilation.	Adjust temperature control to a colder setting; minimize door openings; allow hot food to cool before storing; ensure proper clearance around appliance.
Excessive noise.	Refrigerator not level; items vibrating inside; normal compressor operation.	Level the appliance using adjustable feet; rearrange items; compressor noise is normal.
Door does not close properly.	Refrigerator not level; door gasket dirty or damaged; food packages obstructing.	Level the appliance; clean or replace gasket; rearrange food items.
Water on floor.	Defrost drain blocked.	Clear any obstruction from the defrost drain hole.

7. SPECIFICATIONS

Feature	Detail
Brand	Frigidaire
Model	FRD03G4HPI
Type	Independent Refrigerator
Total Net Capacity	106 Liters (3.7 cu.ft)
Refrigerator Net Capacity	106 Liters
Freezer Net Capacity	0 Liters
Defrost System	Automatic
Cooling Method	Compressor
Temperature Control	Electromechanical, Adjustable
Shelves	2 Wire Shelves
Interior Light	Incandescent
Handles	Recessed
Security Lock	Yes, with key
Adjustable Feet	Yes
Voltage / Frequency	115V / 60Hz
Annual Energy Consumption	230 kWh/year
Energy Compliance	Energy Star

Feature	Detail
Dimensions (W x H x D)	52 cm x 88 cm x 46 cm (20.5 in x 34.6 in x 18.1 in)
Weight	21.4 kg (47.2 lbs)
GTIN	07861106367939
ASIN	B01MDLNKVO

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Frigidaire website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance or to schedule service, please contact Frigidaire customer service directly. Contact details can typically be found on the manufacturer's website or in the product packaging.

© 2023 Frigidaire. All rights reserved.

This manual is for informational purposes only. Frigidaire reserves the right to change product specifications without notice.