

[Manuals.plus](#) /

› [Lorell](#) /

› Lorell Soho Task Chair, Mid-Back, Mesh Back with Fabric Seat, Black User Manual

Lorell LLR83307

Lorell Soho Task Chair User Manual

Model: LLR83307

PRODUCT OVERVIEW

The Lorell Soho Task Chair is designed for comfortable and ergonomic office use. It features a breathable mesh back, a thickly cushioned fabric seat, and adjustable components to customize your seating experience.



Figure 1: Lorell Soho Task Chair, a mid-back office chair with a black mesh back and fabric seat.

Key Features:

- Breathable mesh back for ventilation.
- Height-adjustable lumbar support for personalized comfort.
- Thickly cushioned seat with durable fabric upholstery.
- Height-adjustable arms with soft polyurethane padding.
- Pneumatic seat-height adjustment for optimal positioning.
- Tilt lock and adjustable tilt tension for reclining preferences.
- 360-degree swivel for easy movement.
- Nylon base with dual-wheel casters for smooth mobility.

SAFETY INFORMATION

Please read and understand all safety warnings before using the Lorell Soho Task Chair.

- **Maximum Weight Capacity:** The chair is designed to support a maximum weight of 250 lb (113 kg). Do not exceed this limit to prevent damage or injury.
- **Stability:** Ensure the chair is stable before sitting. When adjusting chair features, maintain balance and avoid sudden movements.
- **Armrests:** The sturdy arms are designed for support. Avoid excessive force or standing on the armrests.
- **Assembly:** Follow all assembly instructions carefully. Improper assembly can lead to instability and potential injury.

SETUP AND ASSEMBLY

The Lorell Soho Task Chair is designed for straightforward assembly. It is recommended to assemble the chair on a soft, clean surface to prevent scratches.

Assembly Steps:

1. Unpack all components and verify against the parts list.
2. Attach the casters to the chair base. Ensure they are securely inserted.
3. Insert the pneumatic gas lift into the center hole of the base.
4. Attach the seat plate mechanism to the underside of the seat cushion using the provided screws.
5. Connect the backrest to the seat assembly.
6. Attach the armrests to the seat assembly.
7. Place the assembled seat and backrest onto the pneumatic gas lift.
8. Test all adjustments to ensure proper function.



Figure 2: Chair dimensions for planning space: 27.8"D x 27.5"W x 41.9"H.

OPERATING INSTRUCTIONS

The Lorell Soho Task Chair offers several adjustment features to optimize your comfort and posture.

Adjusting Chair Features:

- **Seat Height Adjustment:** Locate the lever on the right side under the seat. To raise the seat, lift the lever while

taking your weight off the seat. To lower the seat, lift the lever while remaining seated. Release the lever at the desired height.



Figure 3: Side view illustrating the seat height and tilt adjustment levers.

- **Tilt Lock and Tension:** The chair features a tilt mechanism. To recline, push the lever (often the same as seat height or a separate one) outwards. To lock the chair in an upright position, push the lever inwards. The tilt tension knob, usually located at the front under the seat, can be rotated to increase or decrease the resistance when reclining.
- **Lumbar Support:** The mesh back includes height-adjustable lumbar support. Position it to comfortably support the natural curve of your lower back.
- **Armrest Height Adjustment:** Press the button or lever located on the side of each armrest and slide the armrest up or down to your preferred height. Release the button/lever to lock it in place.
- **360-Degree Swivel:** The chair's base allows for full 360-degree rotation, providing flexibility and ease of movement around your workspace.

MAINTENANCE

Proper maintenance will extend the life and appearance of your Lorell Soho Task Chair.

- **Cleaning:** The fabric seat and mesh back should be spot cleaned only. Use a mild detergent and a damp cloth. Do not saturate the fabric. Allow to air dry completely.
- **Casters:** Periodically check the dual-wheel casters for hair or debris that may impede smooth rolling. Clean as necessary.
- **Hardware:** Regularly inspect all screws and bolts to ensure they are tight. Re-tighten if necessary to maintain stability.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong chemicals on any part of the chair, as they may damage the finish or materials.

TROUBLESHOOTING

If you encounter issues with your Lorell Soho Task Chair, refer to the following common problems and solutions.

- **Chair Does Not Adjust Height:**
 - Ensure the pneumatic gas lift is correctly installed and not damaged.
 - Verify that the height adjustment lever is fully engaged.
- **Chair Squeaks or Wobbles:**
 - Check all assembly screws and bolts. Tighten any loose connections.
 - Ensure the base and casters are securely attached.
- **Casters Do Not Roll Smoothly:**
 - Inspect casters for trapped debris (e.g., hair, lint). Clean thoroughly.
 - Ensure the floor surface is suitable for rolling casters.

If problems persist, contact Lorell customer support for further assistance.

SPECIFICATIONS

Attribute	Detail
-----------	--------

Brand	Lorell
Model Name	Task Chair
Model Number	LLR83307
Color	Black
Product Dimensions (D x W x H)	27.8"D x 27.5"W x 41.9"H
Item Weight	36.5 pounds (16.56 kg)
Back Style	Mid Back (Mesh)
Seat Material	Fabric (Thickly Cushioned)
Arm Style	Adjustable Armrests
Special Features	Back Support, Arm Rest, Adjustable Lumbar Support, Tilt Lock, Adjustable Tilt Tension, 360-degree Swivel, Pneumatic Seat-Height Adjustment
Maximum Weight Recommendation	250 lb (113 kg)
UPC	035255833073
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Lorell Soho Task Chair, please contact Lorell customer service directly. Keep your purchase receipt and model number (LLR83307) handy for faster service. Contact information can typically be found on the Lorell official website or on the product packaging.

© 2024 Lorell. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question