

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Theefun](#) /

› [Theefun 400W Fog Machine TFM01 User Manual](#)

## Theefun TFM01

# Theefun 400W Fog Machine TFM01 User Manual

Model: TFM01

## INTRODUCTION

This manual provides instructions for the safe and effective operation of your Theefun 400W Fog Machine. This device is designed to produce atmospheric fog effects for various events such as parties, Halloween, weddings, and stage performances. Please read this manual thoroughly before use and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

- Use only professional fog fluid. Do not use flammable liquids.
- Ensure the fog machine is placed on a stable, level surface.
- Do not spray fog directly at people or animals.
- Keep the machine away from fire, heat sources, and electrical appliances.
- Always ensure there is enough fog fluid in the tank to avoid dry burning.
- Unplug the machine from the power outlet before cleaning or maintenance.
- This product is not waterproof. Avoid exposure to water or moisture.
- Normal working surface temperature is 60-75°C. Avoid touching hot surfaces.

## PRODUCT OVERVIEW

Familiarize yourself with the components of your Theefun Fog Machine.



This image illustrates the main parts of the fog machine, including the handle for portability, the fluid tank, the fog outlet, the wired remote jack, the oil level indicator, the ON/OFF switch, the fuse, and the power supply cord.

## TECHNICAL SPECIFICATIONS

Feature	Detail
Model	TFM01
Power	400W
Voltage	AC 100-120V, 60Hz
Tank Capacity	300ml
Warm-up Time	3-5 minutes
Fog Output	Approx. 2000 CFM

Feature	Detail
Output Distance	2-3 meters (6.56-9.84 ft)
Remote Control	Wired and Wireless
Wired Remote Length	3 meters (9.8 ft)
Dimensions	9.09 x 4.49 x 4.29 inches
Weight	4 pounds

# Product Parameter

<b>Voltage</b>	<b>AC 100-120V,60HZ</b>
<b>Power</b>	<b>400W</b>
<b>Tank Capacity</b>	<b>300ml</b>
<b>Warm Up Time</b>	<b>2-3mins</b>
<b>Remote length</b>	<b>3m/9.8ft</b>
<b>Output Distance</b>	<b>2-3m/6.56-9.84ft</b>
<b>Two Operate Ways</b>	<b>Wired/Wireless Remote Control</b>

The table above details the key specifications of the fog machine, including its power, capacity, and operational characteristics. The accompanying image provides a visual representation of the product's dimensions and parameters.

## SETUP INSTRUCTIONS

- 1. Fill the Fluid Tank:** Unscrew the tank cap and carefully pour professional fog fluid (not included) into the reservoir. Ensure the metal nozzle inside the tank is fully submerged. Do not overfill.

2. **Connect Power:** Plug the machine's power cord into a standard electrical outlet.
3. **Connect Remote Control:** Plug the wired remote control into the designated jack on the back of the machine.
4. **Power On:** Flip the ON/OFF switch to the "ON" position. The machine will begin to preheat.



This image sequence demonstrates the initial setup steps: filling the fog fluid, connecting the wired remote, and powering on the machine.

This video provides a visual guide on how to set up the Theefun Fog Machine, including filling the fluid tank and connecting the remote control.

## OPERATING THE FOG MACHINE

1. **Preheating:** Allow the machine to preheat for 3-5 minutes. The red light on the wired remote control will illuminate when the machine is ready to emit fog.
2. **Emit Fog (Wired Remote):** Once the red light is on, press and hold the red button on the wired remote control to release fog. The fog will be emitted continuously for up to 60 seconds per cycle. After each emission, you will need to manually press the button again.

3. **Emit Fog (Wireless Remote):** The wireless remote can also be used. Ensure the wired remote is connected to the machine as it acts as an infrared receiver for the wireless remote. Press the button on the wireless remote to emit fog.



This image illustrates the operation of the fog machine, showing the preheating indicator and how to activate fog emission using both wired and wireless remote controls.

This video demonstrates the operation of the fog machine, specifically highlighting the use of the wireless remote control and the fog output.

## MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your fog machine.

- **Cleaning after Use:** After each use, it is recommended to clean the machine to prevent residue buildup. Empty any remaining fog fluid from the tank.
- **Storage:** Store the machine in a cool, dry place when not in use.
- **Fluid Quality:** Always use high-quality, water-based fog fluid. Poor quality fluid can clog the machine.

## TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
No fog emission	Not preheated	Wait for the red light on the wired remote to illuminate.
No fog emission	No fluid or low fluid level	Refill the fog fluid tank. Ensure the metal nozzle is submerged.
No fog emission	Remote not connected	Ensure the wired remote is securely plugged in.
Weak fog output	Clogged nozzle	Clean the nozzle according to maintenance instructions. Use high-quality fluid.
Machine not powering on	No power	Check power cord connection and wall outlet. Check fuse.



Refer to the table above for common issues and their resolutions. The image highlights critical safety reminders, such

as ensuring adequate fluid levels to prevent damage.

## **WARRANTY AND CUSTOMER SUPPORT**

---

For warranty information or technical support, please refer to the product packaging or contact Theefun customer service directly. Keep your purchase receipt as proof of purchase.

© 2024 Theefun. All rights reserved.