

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Galaxy Audio](#) /

› [Galaxy Audio LA4DPMW Powered Line Array Speaker User Manual](#)

Galaxy Audio LA4DPMW

Galaxy Audio LA4DPMW Powered Line Array Speaker User Manual

Model: LA4DPMW

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before operating this product. Retain these instructions for future reference.

- **Power Source:** Only connect the device to a power source as indicated in the specifications. Ensure the voltage is correct for your region.
- **Ventilation:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- **Water and Moisture:** Do not expose this apparatus to rain or moisture. Do not use near water.
- **Heat:** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Clean only with a dry cloth.
- **Servicing:** Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PRODUCT OVERVIEW

The Galaxy Audio LA4DPMW is a powered line array speaker designed for professional audio applications. It provides reliable sound reproduction and is suitable for various setups, including home theaters and surround sound systems. This unit features Bluetooth wireless communication technology and app control for enhanced user convenience.



Figure 1: Front view of the Galaxy Audio LA4DPMW Powered Line Array Speaker. This image shows the compact design of the speaker, suitable for various installations.

Key Features:

- Integrated Bass Boost feature for enhanced low-frequency response.
- Wireless subwoofer connectivity for flexible setup.
- Bluetooth wireless communication for audio streaming.
- App control for convenient operation.
- Compact dimensions: 1"D x 1"W x 1"H.
- Includes Power and Ground Cable.

SETUP

Unpacking:

Carefully remove the LA4DPMW speaker from its packaging. Verify that all included components are present:

- LA4DPMW Powered Line Array Speaker

- Power Cable
- Ground Cable

Placement:

Position the speaker in your desired location. For optimal sound, consider the acoustics of your room and the recommended uses for home theaters and surround sound systems. Ensure adequate ventilation around the unit.

Power Connection:

1. Connect the provided Power Cable to the LA4DPMW speaker's power input.
2. Connect the other end of the Power Cable to a suitable electrical outlet.
3. Connect the Ground Cable to the designated ground terminal on the speaker and to a proper ground source, if required by your installation.

Audio Connections:

The LA4DPMW supports wireless subwoofer connectivity and Bluetooth for audio input. Refer to the operating instructions for details on establishing these connections.

OPERATING INSTRUCTIONS

Powering On/Off:

Locate the power switch on the unit. Press it to turn the speaker on. Press it again to turn the speaker off.

Bluetooth Pairing:

1. Ensure the LA4DPMW speaker is powered on.
2. Activate Bluetooth on your source device (e.g., smartphone, tablet).
3. Search for available Bluetooth devices. The LA4DPMW should appear in the list.
4. Select the LA4DPMW to pair. Once paired, you can stream audio wirelessly.

App Control:

Download the official Galaxy Audio control app from your device's app store. Follow the in-app instructions to connect to your LA4DPMW speaker. The app allows for remote control of various functions, including volume, input selection, and activation of the Bass Boost feature.

Wireless Subwoofer Connectivity:

The LA4DPMW supports wireless connection to compatible subwoofers. Refer to your subwoofer's manual for specific pairing instructions. Ensure both devices are in pairing mode to establish a connection.

Audio Output Mode:

The speaker operates in Stereo Audio Output Mode. Ensure your audio source is configured for stereo output for optimal performance.

MAINTENANCE

Cleaning:

Always disconnect the power before cleaning. Use a soft, dry cloth to wipe the exterior of the speaker. Do not use liquid cleaners, aerosols, or solvents, as these may damage the finish or internal components.

Storage:

If storing the unit for an extended period, ensure it is powered off and disconnected from the power source. Store in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

No Power:

- Check if the power cable is securely connected to both the speaker and the electrical outlet.
- Verify that the electrical outlet is functional by plugging in another device.
- Ensure the power switch on the speaker is in the "On" position.

No Sound:

- Confirm the speaker is powered on and connected to a power source.
- Check the volume level on both the speaker (via app control) and your audio source device.
- If using Bluetooth, ensure the speaker is correctly paired with your device and that the device is playing audio.
- If using a wireless subwoofer, ensure it is properly paired and powered on.

Bluetooth Connection Issues:

- Ensure the speaker is within the effective range of your Bluetooth device (typically 10 meters/30 feet).
- Try unpairing and re-pairing the speaker with your device.
- Disable and re-enable Bluetooth on your source device.
- Ensure no other devices are actively connected to the speaker via Bluetooth.

If you continue to experience issues, please contact Galaxy Audio customer support.

SPECIFICATIONS

Feature	Detail
Model Name	LA4DPMW
Brand	Galaxy Audio
Product Type	Powered Line Array Speaker (Sound And Recording Equipment)
Speaker Type	Subwoofer
Speaker Size	2 Inches
Speaker Maximum Output Power	180 Watts

Feature	Detail
Speaker Amplification Type	Passive
Audio Output Mode	Stereo
Special Feature	Bass Boost
Recommended Uses	For Home Theaters, For Surround Sound Systems
Compatible Devices	Home Theater
Surround Sound Channel Configuration	2.0
Included Components	Power and Ground Cable
Product Dimensions (D x W x H)	1"D x 1"W x 1"H
Item Weight	14.37 pounds
Is Waterproof	FALSE
Control Method	App
Wireless Communication Technology	Bluetooth
Power Source	Corded Electric
Subwoofer Connectivity Technology	Wireless
UPC	691281006791
ASIN	B01MDOMJ5R
Country Of Origin	China

Note: Some specifications may vary slightly. For the most accurate and up-to-date information, please refer to the official product page or contact Galaxy Audio support. There is a discrepancy between the product title ("POWERED") and the "Speaker Amplification Type" specification ("Passive"), and also between the product title ("LINE ARRAY") and "Speaker Type" ("Subwoofer"). This manual uses the provided specifications.

WARRANTY AND SUPPORT

Galaxy Audio is committed to providing quality, reliable products and exceptional service. While specific warranty details are not provided in this manual, Galaxy Audio typically offers excellent warranties and dedicated support for its products.

For warranty information, technical assistance, or service inquiries, please visit the official Galaxy Audio website or contact their customer support directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Galaxy Audio

Website: www.galaxyaudio.com (Note: This is a placeholder URL as no specific support URL was provided in the input. Users should verify the correct official website.)

