

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BLACK+DECKER](#) /

› [Guard Security GK705 5 Pc. Utility Knife & Hobby Set Instruction Manual](#)

## BLACK+DECKER GK705

# Guard Security GK705 5 Pc. Utility Knife & Hobby Set Instruction Manual

Model: GK705

## PRODUCT OVERVIEW

The Guard Security GK705 5 Pc. Utility Knife & Hobby Set is designed for various cutting tasks, offering a versatile collection of tools for both professional and DIY applications. This set includes multiple retractable knives, a glass scraper, and a coupon cutter, providing solutions for a wide range of cutting needs.



Image: The Guard Security GK705 set, displaying the three retractable knives, glass scraper, and coupon cutter.

### Components Included:

- Three (3) different retractable knives
- One (1) Glass scraper with blade
- One (1) Coupon cutter

# 5 pc. UTILITY KNIFE SET



Includes: Glass Scraper, Coupon Cutter, 7pt. Break Away Knife,  
13pt. Break Away Knife, 7pt. Break Away Small Knife

**GK705**

Image: The Guard Security GK705 set as packaged, showing all five components.

## SAFETY INFORMATION

Always exercise extreme caution when handling sharp tools. Improper use can result in serious injury. Adhere to the following safety guidelines:

- **Keep Blades Sharp:** Dull blades require more force and are more likely to slip, increasing the risk of injury.
- **Wear Protective Gear:** Consider wearing cut-resistant gloves and eye protection, especially during demanding tasks.
- **Cut Away From Your Body:** Always direct the cutting motion away from yourself and others.
- **Use a Stable Surface:** Ensure the material being cut is stable and secured to prevent movement.
- **Retract Blades When Not in Use:** Fully retract all blades into their handles immediately after each use.
- **Store Safely:** Store knives and blades in a secure location, out of reach of children and pets.
- **Dispose of Blades Properly:** Use a designated blade disposal container for old or broken blades. Do not dispose of them in regular trash.

## SETUP

Upon receiving your Guard Security GK705 set, carefully remove all components from the packaging. Inspect each tool for any signs of damage or manufacturing defects. Ensure all blades are securely seated within their respective tools before initial use.

No assembly is required for these tools. They are ready for use after inspection.

## OPERATION

### Retractable Utility Knives

- **Extending the Blade:** Locate the slider mechanism on the top or side of the knife handle. Push the slider forward with your thumb until the blade extends to the desired length. Most knives have multiple locking positions for varying blade exposure.
- **Retracting the Blade:** After use, push the slider backward until the blade is fully retracted into the handle. Ensure the blade is completely enclosed before setting the knife down or storing it.
- **Cutting:** Place the material to be cut on a stable, protected surface. Apply firm, even pressure to the knife while guiding the blade along the desired cutting line. For thicker materials, multiple shallow passes are often safer and more effective than one deep cut.

### Glass Scraper

- **Blade Installation/Check:** Ensure the blade is properly installed and secured in the scraper head. Refer to the specific scraper design for blade insertion instructions.
- **Usage:** Hold the scraper at a shallow angle (approximately 15-30 degrees) to the glass surface. Apply gentle, consistent pressure and push the scraper forward to remove paint, stickers, or other residues. Avoid using on dry glass or with excessive force to prevent scratching. Use a lubricating solution (e.g., soapy water) if possible.

### Coupon Cutter

- **Usage:** This tool is designed for precise, small cuts, such as those required for coupons or thin paper. Insert the edge of the paper into the cutting slot and slide the tool along the desired line.
- **Safety:** While smaller, the blade is still sharp. Keep fingers clear of the cutting path.

## Blade Replacement (General for Utility Knives)

While specific mechanisms vary, most utility knives allow for blade replacement. Always use new, sharp blades for optimal performance and safety.

1. **Retract Blade:** Fully retract the old blade into the handle.
2. **Access Mechanism:** Depending on the knife, this may involve pressing a button, sliding a lever, or opening the handle. Consult the specific design of your knife.
3. **Remove Old Blade:** Carefully remove the dull or broken blade. Use gloves or pliers if necessary to avoid direct contact with the sharp edge.
4. **Insert New Blade:** Place a new blade into the designated slot, ensuring it is correctly oriented and seated.
5. **Secure Mechanism:** Close or secure the blade retention mechanism. Test the blade extension and retraction to ensure it operates smoothly and locks securely.
6. **Dispose Properly:** Immediately place the old blade in a safe, puncture-resistant container for disposal.

## MAINTENANCE

- **Cleaning:** After each use, wipe down the tools with a dry cloth to remove any debris, dust, or moisture. For stubborn grime, a slightly damp cloth can be used, followed by thorough drying.
- **Lubrication:** Periodically apply a small amount of light machine oil to the moving parts of retractable knives to ensure smooth operation.
- **Blade Condition:** Regularly inspect blades for sharpness and damage. Replace dull or chipped blades promptly.
- **Storage:** Store all tools in a dry environment to prevent rust. Keep them in their original packaging or a tool box to protect the blades and prevent accidental contact.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Blade not extending/retracting smoothly	Debris in mechanism; lack of lubrication; bent blade.	Clean mechanism; apply light lubricant; replace blade.
Blade feels dull or tears material	Worn or damaged blade.	Replace the blade with a new, sharp one.
Knife handle feels loose	Screws or fasteners are loose.	Tighten any visible screws. If not possible, discontinue use.

## SPECIFICATIONS

Attribute	Detail
Model Number	GK705
Item Weight	3.19 ounces
Product Dimensions	0.75 x 6 x 9 inches
Material	Glass (referring to scraper blade material)
Item Package Quantity	1 (set)
Included Components	Utility Knife (set includes multiple types)
Manufacturer	World & Main, LLC
Brand	BLACK+DECKER
Handle Type	Manual-Retractable
UPC	075877007056

## WARRANTY AND SUPPORT

This Guard Security GK705 5 Pc. Utility Knife & Hobby Set is manufactured by World & Main, LLC, under the BLACK+DECKER brand. While specific warranty details are not provided in this manual, most BLACK+DECKER products come with a limited warranty covering defects in material or workmanship. For warranty claims, product support, or to inquire about replacement parts, please refer to the official BLACK+DECKER website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

You can find more information and contact details by visiting the official [BLACK+DECKER Store on Amazon](#).