

[Manuals.plus](#) /

› [Babymoov](#) /

› Babymoov Nutribaby Plus 6-in-1 Baby Food Maker User Manual

Babymoov A001124

Babymoov Nutribaby Plus 6-in-1 Baby Food Maker User Manual

Model: A001124

INTRODUCTION

The Babymoov Nutribaby Plus is a versatile 6-in-1 baby food maker designed to simplify the preparation of healthy and balanced meals for your child. This multi-purpose appliance combines steam cooking, blending, defrosting, baby food jar heating, sterilising, and baby bottle heating functions into a single unit. It is suitable for all stages of your child's development, from bottle-feeding to weaning and beyond.

The Nutribaby Plus features a central touchscreen console and a built-in timer with audible and visual alarms, and automatic cut-off for ease of use. Its design allows for simultaneous cooking and blending, saving valuable time for busy parents.



Image: The Babymoov Nutribaby Plus, showcasing its steaming and blending capabilities with fresh ingredients.

PRODUCT FEATURES

- **6-in-1 Functionality:** Steam cooking, blending, defrosting, heating baby food jars, sterilising, and heating baby bottles (up to 3 simultaneously).
- **Nutrient Preservation:** Two separate cooking baskets allow for precise steam cooking of different foods, preserving natural flavors and nutrients. The cooking water vessel captures nutrient-rich water for blending.
- **Adaptable Blending:** Three blending speeds allow for adjusting food texture to suit your baby's age and weaning stage.
- **Large Capacity:** Total capacity of 2.2 liters (1,500 ml for cooking, 700 ml for blending) enables batch cooking of multiple meals in a single cycle.
- **Time-Saving Design:** Cook and blend simultaneously or separately as needed.
- **Intuitive Control:** Features a central control panel with one-button functions and a built-in timer with automatic cut-off.



Image: Visual representation of the Nutribaby Plus emphasizing its six distinct functions.

SETUP AND ASSEMBLY

- 1. Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in the "Included Components" section are present.
- 2. Initial Cleaning:** Before first use, wash all removable parts (baskets, blending bowl, lids, spatula) with warm soapy water. Rinse thoroughly and dry. The components are dishwasher-safe (except electrical parts).
- 3. Base Unit Placement:** Place the main base unit on a stable, flat, and heat-resistant surface. Ensure adequate ventilation around the unit.
- 4. Assembling Steamer Unit:**
 - Place the water tank lid onto the water tank opening on the left side of the base unit.
 - Position the lower steaming basket onto the steaming base.
 - If using, place the upper steaming basket on top of the lower basket.

- Place the steaming lid on top of the upper basket.

5. **Assembling Blender Unit:**

- Ensure the blending blade is securely in place at the bottom of the blending bowl.
- Place the blending bowl onto the blending base on the right side of the main unit.
- Secure the blending lid onto the blending bowl.

6. **Power Connection:** Connect the power cord to the unit and then plug it into a suitable electrical outlet (230V).



Image: An exploded diagram showing all the detachable parts of the Nutribaby Plus, including baskets, lids, blending unit, and spatula, for easy assembly and cleaning.

OPERATING INSTRUCTIONS

Steam Cooking

1. **Fill Water Tank:** Pour clean water into the water tank on the left side of the unit. Do not exceed the maximum fill line.

2. **Prepare Food:** Cut food into small, uniform pieces. Place food into the steaming baskets. You can use one or both baskets. Separate foods that require different cooking times.
3. **Select Cooking Time:** Use the control panel to select the desired steam cooking time. The timer can be adjusted.
4. **Start Cooking:** Press the start button. The unit will automatically cut off when the cooking cycle is complete, indicated by an audible and visual alarm.
5. **Collect Cooking Water:** The cooking water, rich in nutrients, collects in the vessel below the steaming baskets. This water can be used to adjust the consistency of blended foods.



Image: A visual guide illustrating the 7-step process of preparing baby food with the Nutribaby Plus, from adding water to blending.

Blending

1. **Transfer Food:** Once steamed, carefully transfer the cooked food into the blending bowl.
2. **Add Liquid:** Add a small amount of the collected cooking water or breast milk/formula to achieve the desired consistency.
3. **Activate Blender:** To use the blender, pull out the small connector on the right part of the control panel and place the blender unit onto this connector.
4. **Select Speed:** Choose one of the three blending speeds based on the desired texture (smooth puree to chunkier consistency). Ensure there is enough food in the blender to allow it to blend efficiently.
5. **Blend:** Press and hold the blending button until the desired consistency is reached. Do not over-blend.

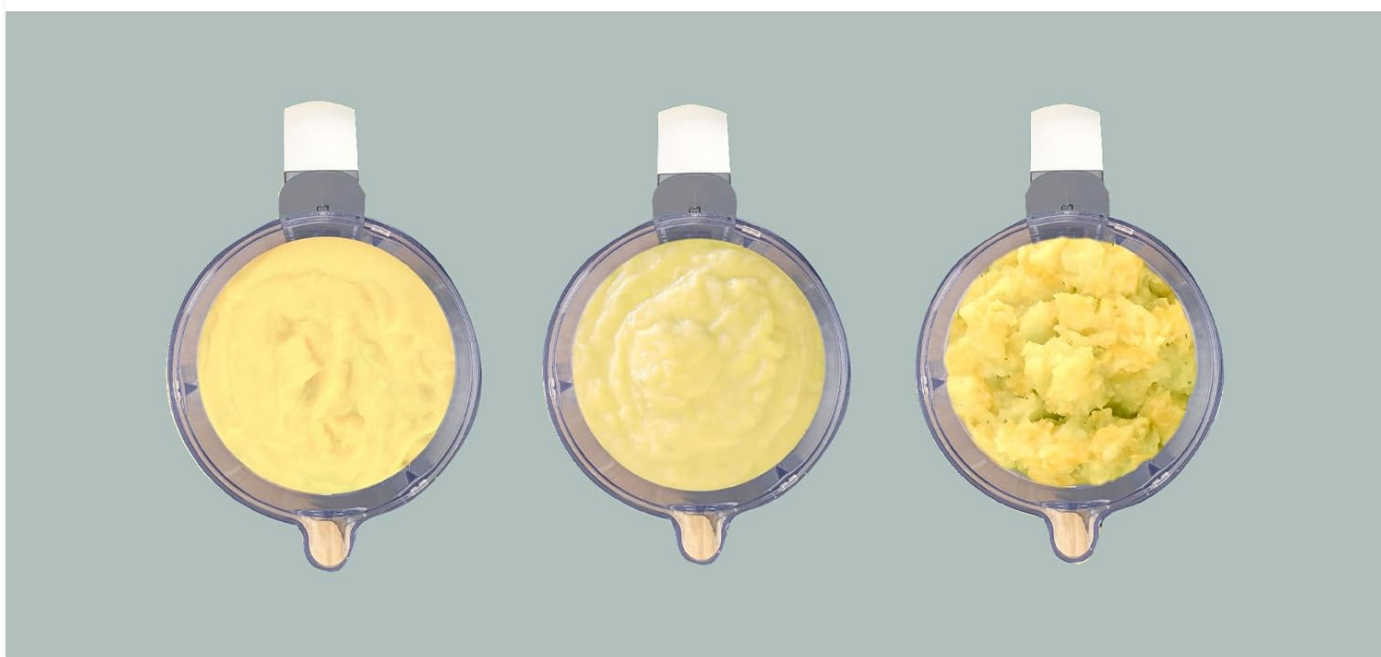


Image: Illustration demonstrating the three different food textures achievable with the Nutribaby Plus blender, ranging from smooth puree to a chunkier consistency, suitable for various weaning stages.

Other Functions (Defrosting, Heating Jars, Sterilising Bottles)

Refer to the specific icons on the control panel for these functions. Each function is pre-programmed for optimal results. Place items appropriately in the steaming baskets or blending bowl as indicated by the manual's diagrams (not provided in this summary).

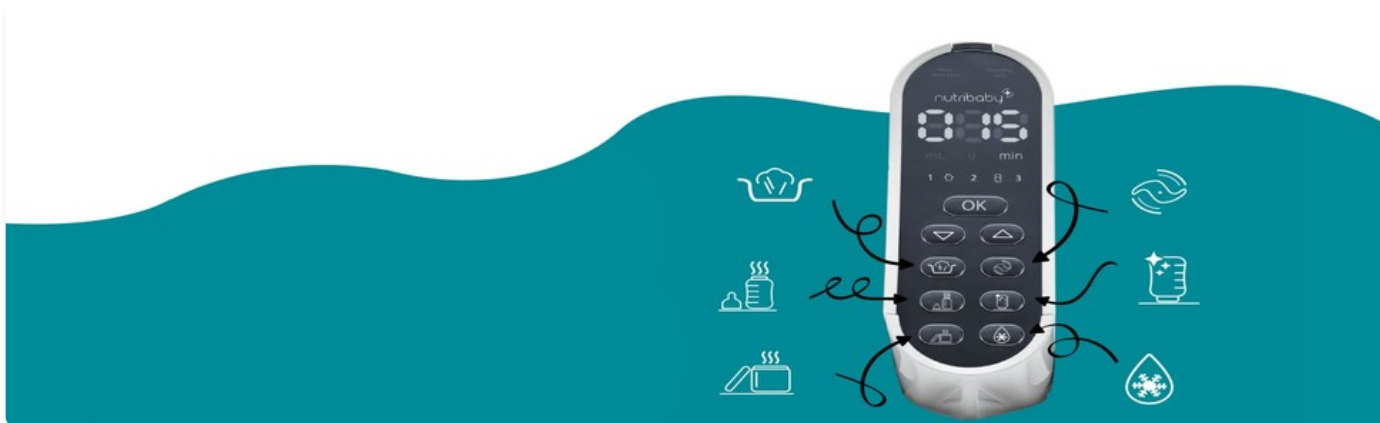


Image: Close-up of the Nutribaby Plus control panel, displaying the intuitive icons for its various functions including steaming, blending, defrosting, and sterilising.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your Nutribaby Plus.

- **Daily Cleaning:** After each use, unplug the appliance and allow it to cool. Disassemble all removable parts (baskets, blending bowl, lids, spatula). Wash these parts with warm soapy water or place them in the dishwasher.
- **Base Unit:** Wipe the main base unit with a damp cloth. Do not immerse the electrical parts in water.
- **Descaling (Water Tank):** Over time, mineral deposits may build up in the water tank. Descale regularly (e.g., every 2-4 weeks depending on water hardness) using a solution of white vinegar and water (1 part vinegar to 2 parts water). Run a steaming cycle with this solution, then rinse thoroughly by running 2-3 cycles with clean water.
- **Storage:** Ensure all parts are completely dry before reassembling or storing the unit. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into both the unit and a working electrical outlet.
Steaming function not working.	Insufficient water in tank; tank needs descaling.	Fill water tank to appropriate level. Perform descaling procedure if mineral buildup is visible.
Blender not operating.	Blender unit not correctly connected; insufficient food in bowl.	Ensure the blender unit is properly seated on its connector. Add more food if the quantity is too small for the blades to engage effectively.
Food not blending smoothly.	Not enough liquid; food pieces too large.	Add more cooking water or liquid. Cut food into smaller pieces before blending.
Cracks forming on jars.	Material stress; improper handling or cleaning.	Handle components with care. Avoid extreme temperature changes. Ensure proper cleaning as per instructions. If cracks persist, contact customer support for replacement parts.

SPECIFICATIONS

- **Model Number:** A001124
- **Brand:** Babymoov
- **Functions:** 6-in-1 (Steam Cooking, Blending, Defrosting, Jar Heating, Bottle Sterilising, Bottle Heating)
- **Total Capacity:** 2.2 Litres (1,500 ml cooking, 700 ml blending)
- **Blending Bowl Capacity:** 0.6 Litres
- **Blending Speeds:** 3
- **Power (Heating):** 230V / 500W
- **Power (Blending):** 230V / 3 speeds
- **Product Dimensions:** 25D x 39.5W x 31.5H Centimeters
- **Item Weight:** 3.8 kg
- **Colour:** Grey
- **Composition:** BPA-free Tritan, Polypropylene
- **Dishwasher Safe Parts:** Yes (baskets, bowls, accessories - excluding electrical parts)



Image: The Nutribaby Plus unit with its key dimensions (height and width) clearly marked.

WARRANTY AND SUPPORT

Babymoov products are designed for durability and reliability. The Nutribaby Plus comes with a **Lifetime Warranty**, reflecting the brand's commitment to quality and customer satisfaction. This warranty covers manufacturing defects under normal use conditions.

For warranty claims, technical support, or inquiries regarding replacement parts, please visit the official Babymoov website or contact their customer service department. Keep your proof of purchase for warranty validation.

For more information and recipes, you may also explore the Babymoov blog and the "Cooking Babyfood" app, which offers over 500 varied recipes and expert advice.

Online Resources:

- [Babymoov Official Website](#)
- [Babymoov Blog](#)
- "Cooking Babyfood" App (available on app stores)

