

[Manuals.plus](#) /

> [Nespresso](#) /

> Nespresso CitiZ Original Espresso Machine User Manual

## Nespresso EN167B

# Nespresso CitiZ Original Espresso Machine

Model: EN167B

Brand: Nespresso

## INTRODUCTION

---

The Nespresso CitiZ Original Espresso Machine by De'Longhi offers a convenient and elegant way to enjoy coffeehouse-style Lungo or espresso. Its compact design and intuitive features make it a perfect addition to any kitchen. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your machine to ensure optimal performance and a delightful coffee experience.





Figure 1: Nespresso CitiZ Original Espresso Machine.

## SETUP

---

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present: machine, water tank, drip tray, and used capsule container.
2. **Water Tank Installation:** The removable water tank is located at the back of the machine. Lift it off, fill it with fresh drinking water, and place it back securely.
3. **Initial Rinse:** Before first use, perform a rinse cycle.
  - Fill the water tank.
  - Place a container (at least 1 liter capacity) under the coffee outlet.
  - Press either the Espresso or Lungo button. The machine will start heating up (lights will blink).
  - Once the lights are steady, press the Lungo button to start the rinse cycle. Repeat this process two to three times.
4. **Power Connection:** Plug the machine into a grounded electrical outlet.



Figure 2: Machine dimensions and water tank location.

## OPERATING INSTRUCTIONS

1. **Power On:** Press either the Espresso or Lungo button to turn on the machine. The lights will blink while heating up (approximately 25 seconds). They will become steady when ready.
2. **Insert Capsule:** Lift the lever at the top of the machine. Insert a Nespresso Original capsule into the opening. Close the lever firmly.
3. **Place Cup:** Position your desired cup on the drip tray. The folding cup shelf allows for various cup sizes, from small espresso cups to taller mugs.

4. **Select Coffee Size:**

- **Espresso (40 ml / 1.35 oz):** Press the left button for a short, concentrated shot.
- **Lungo (110 ml / 3.7 oz):** Press the right button for a longer coffee.

The machine will automatically stop when the selected volume is dispensed.

5. **Eject Used Capsule:** After brewing, lift the lever again to automatically eject the used capsule into the internal container.





Figure 3: Brewing an espresso.





Figure 4: Variety of Nespresso Original capsules.

## MAINTENANCE

---

### Daily Cleaning

- **Empty Drip Tray and Used Capsule Container:** Regularly remove and empty the drip tray and the used capsule container. Wash them with warm water and mild detergent.
- **Wipe Down Machine:** Wipe the machine's exterior with a damp cloth. Do not use abrasive cleaning agents or immerse the machine in water.

### Descaling

Descaling is crucial for maintaining machine performance and coffee quality. The frequency depends on water hardness and usage. Refer to the full user manual for detailed descaling instructions.

- Use a Nespresso descaling kit or a suitable descaling solution.
- Follow the instructions provided with the descaling kit.
- Rinse the machine thoroughly after descaling.

## RE-RE-RE-RECYCLE



All aluminium pods collected by Nespresso are recycled.



## IT'S WHAT'S INSIDE THAT COUNTS



Nespresso pods are filled with freshly roasted ground coffee, and hermetically sealed with aluminium to protect the high-quality aroma and freshness over time.

Figure 5: Nespresso offers capsule recycling programs.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee flow or slow flow	Water tank empty, machine needs descaling, or capsule is blocked.	Fill water tank. Perform descaling. Check capsule for proper insertion or replace.
Machine leaks	Water tank not properly seated, or internal component issue.	Ensure water tank is correctly positioned. If problem persists, contact customer support.
Coffee is not hot enough	Machine not fully preheated, or needs descaling.	Allow machine to fully preheat until lights are steady. Perform descaling.
Machine is noisy	Normal operation sound (pump), or air in the system.	Some noise is normal. If excessive, run a few Lungo cycles without a capsule to prime the pump.

## SPECIFICATIONS

Feature	Detail
Brand	Nespresso
Model Name	EN167B
Color	Black
Product Dimensions	7.44"D x 15.91"W x 12.99"H
Special Feature	Removable Tank, Programmable
Coffee Maker Type	Espresso Machine

Feature	Detail
Filter Type	Reusable
Operation Mode	Fully Automatic
Voltage	240 Volts
Item Weight	7.5 pounds
Country of Origin	China

## WARRANTY & SUPPORT

---

The Nespresso CitiZ Original Espresso Machine comes with a manufacturer's one-year warranty.

For detailed information, troubleshooting, or to contact customer service, please refer to the official user manual or visit the Nespresso support website.

- **Official User Manual (PDF):** [Download Here](#)
- **Nespresso Website:** [Visit the Nespresso Store on Amazon](#)