

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Megachef](#) /

› [Megachef Glass and Stainless Steel Electric Tea Kettle, 1.9 Quarts, Model 1 Instruction Manual](#)

Megachef Model 1

Megachef Glass and Stainless Steel Electric Tea Kettle

Model: 1.9 Quarts, Model 1

Brand: Megachef

INTRODUCTION

Thank you for choosing the Megachef Glass and Stainless Steel Electric Tea Kettle. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read all instructions carefully before first use and retain for future reference.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Boil-dry protection: The kettle is equipped with boil-dry protection. If the kettle is switched on without water or with insufficient water, it will automatically switch off. Allow to cool for 15-20 minutes before refilling with cold water.

PRODUCT OVERVIEW

The Megachef Electric Tea Kettle features a durable borosilicate glass body and stainless steel accents, designed for efficient water heating. It includes a 360° cordless jug-kettle design for easy handling and an automatic shut-off feature for safety.



Figure 1: Megachef Electric Tea Kettle. This image shows the overall design of the kettle, highlighting its glass body and stainless steel base, with a blue LED light illuminated.



Figure 2: High Borosilicate Glass Body. A close-up view emphasizing the durable, stain-resistant borosilicate glass construction of the kettle.



Figure 3: 1.8 Liter Capacity. This image highlights the clear water level markings on the glass body, indicating the 1.8L maximum capacity.

SETUP

1. **Unpacking:** Carefully remove all packaging materials from the kettle and its base. Ensure all components are present and undamaged.
2. **First Use Cleaning:** Before initial use, fill the kettle with water to the maximum level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable surface. Ensure the power cord is not dangling or in contact with hot surfaces.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

1. **Filling the Kettle:** Press the lid release button located on the handle to open the lid. Fill the kettle with the desired amount of water, ensuring it is between the minimum (0.5L) and maximum (1.8L) fill lines. Close the lid securely.

2. **Placing on Base:** Place the kettle firmly onto its 360° cordless power base.
3. **Starting the Boil:** Press the ON/OFF switch down to the 'ON' position. The blue LED light will illuminate, indicating the kettle is heating.



Figure 4: Auto Shut-Off Switch. This image shows the power switch on the handle, which also functions as the lid release button.

4. **Automatic Shut-Off:** The kettle will automatically switch off once the water reaches a rolling boil. The blue LED light will extinguish.

VIBRANT LED LIGHT



Figure 5: Vibrant LED Light. The kettle is shown with water boiling and the blue LED light illuminated, indicating operation.

5. **Serving:** Carefully lift the kettle from its base to pour. The cordless design allows for easy serving.
6. **Using the Tea Infuser (Optional):** If your model includes a tea infuser, attach it to the underside of the lid. Add loose leaf tea to the infuser before closing the lid and boiling water. Remove the infuser after brewing to prevent over-steeping.

Official Product Videos

Electric Tea Kettle with Tea Infuser by MegaChef

Your browser does not support the video tag.

This video provides a detailed overview of the Megachef Electric Tea Kettle, including how to use the optional tea infuser for brewing loose leaf tea.

Megachef Tea Kettle Review

Your browser does not support the video tag.

A review video demonstrating the features and functionality of the Megachef Tea Kettle, including its ease of use and design.

The fastest tea brewing time!

Your browser does not support the video tag.

This video showcases the rapid boiling capability of the Megachef Electric Tea Kettle, highlighting its efficiency for quick tea preparation.

The Perfect electric kettle!

Your browser does not support the video tag.

A video demonstrating why the Megachef Electric Tea Kettle is considered a perfect choice, focusing on its features and user experience.

Automatic shut off after boiling!!! Say less

Your browser does not support the video tag.

This video highlights the automatic shut-off safety feature of the Megachef Electric Tea Kettle once water reaches boiling point.

MAINTENANCE

Cleaning

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- The removable and washable filter can be detached from the spout for cleaning. Rinse it under running water and reattach once clean.
- Do not immerse the kettle or its power base in water or any other liquid.

Descaling

Over time, mineral deposits (limescale) may build up inside your kettle, especially in areas with hard water. This can affect performance and taste. To descale:

1. Fill the kettle with a solution of one part white vinegar and two parts water.
2. Bring the solution to a boil and let it stand for at least 30 minutes, or longer if the scale is heavy.
3. Discard the solution and rinse the kettle thoroughly with fresh water several times.
4. For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	Not properly plugged in; kettle not correctly seated on base; no power at outlet.	Check power connection; ensure kettle is correctly placed on base; check household fuse/circuit breaker.
Kettle switches off before boiling.	Too much limescale buildup; boil-dry protection activated.	Descale the kettle; if boil-dry activated, allow to cool and refill.
Water has an unusual taste.	First use residues; limescale buildup.	Perform first use cleaning cycles; descale the kettle.

SPECIFICATIONS

- **Brand:** Megachef
- **Model Name:** Stainless Steel Light Up
- **Capacity:** 1.8 Liters (1.9 Quarts)
- **Material:** High Borosilicate Glass, Stainless Steel
- **Special Feature:** Automatic Shut-off, Boil-Dry Protection, 360° Cordless Base, LED Light
- **Product Dimensions:** 7.5 x 7.5 x 11 inches
- **Item Weight:** 2 Pounds
- **Manufacturer:** Mega Chef
- **Country/Region Of Origin:** China

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact Megachef customer service. Keep your purchase receipt as proof of purchase for any warranty claims.