



[Manuals.plus](#) /

› [Disney](#) /

› [Disney Princess Belle Time Teacher Watch WDS000146 User Manual](#)

## Disney WDS000146

# Disney Princess Belle Time Teacher Watch User Manual

Model: WDS000146

## 1. INTRODUCTION

---

This manual provides essential information for the Disney Princess Belle Time Teacher Watch, Model WDS000146. This watch is designed to assist children aged 3-7 in learning how to read analog time effectively, combining educational features with a durable and comfortable design.



Front view of the Disney Princess Belle Time Teacher Watch, showcasing its pink silicone strap and Belle character dial.

360-degree view of the Disney Princess Belle Time Teacher Watch, showcasing its design and features from all angles.

## 2. SETUP

---

The watch comes with a pre-installed battery. To activate the watch, ensure any plastic battery tab is removed from the crown (the small knob on the side). If the watch is not running, gently pull out the crown to set the time, then push it back in to start the watch.

## 3. OPERATING INSTRUCTIONS

---

The Disney Princess Belle Time Teacher Watch is designed to simplify learning how to tell time. Follow these steps:

1. **Step 1:** Look at the shorter hand (hour hand) to identify the current hour.
2. **Step 2:** Look at the longer hand (minute hand) and multiply the number it points to by 5 to determine the minutes.
3. **Step 3:** Combine the hour and minutes to read the time correctly.



Visual guide demonstrating the three steps to tell time using the watch.



Close-up of the watch dial, highlighting the clearly labeled 'HOUR' and 'MINUTE' hands and large numbers for easy reading.

Video demonstrating how to assemble a 'Time to Tell Time' craft kit, which helps children understand clock hands and time-telling concepts.

## 4. MAINTENANCE

---

To maintain your watch, follow these guidelines:

- **Cleaning:** Wipe the watch with a soft, dry cloth. Avoid harsh chemicals or abrasive materials.

- **Water Resistance:** This watch is water-resistant up to 30 meters (100ft). It is suitable for splashes, handwashing, or light rain. It is **not** designed for bathing, showering, or swimming. Prolonged exposure to water or submersion may cause damage.
- **Battery Replacement:** The watch uses 1 product-specific battery (included). When the watch stops or runs slowly, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure water resistance is maintained.

## 5. TROUBLESHOOTING

- **Watch Not Running:** Ensure the crown is fully pushed in. If it still doesn't run, the battery may need replacement.
- **Incorrect Time:** Pull out the crown, rotate it to set the correct time, then push it back in.
- **Fogging Under Crystal:** This may indicate a loss of water resistance. Avoid further water exposure and consult a technician.

## 6. SPECIFICATIONS



Overview of key features and specifications of the watch.

Feature	Detail
Product Dimensions	9.02 x 6.5 x 0.98 inches; 1.76 ounces
Item Model Number	WDS000146
Department	Girls
Batteries	1 Product Specific battery (included)
Material	Plastic (case), Silicone (band)
Display	Analog
Watch Movement Type	Quartz
Additional Features	Water Resistant
Water Resistance Depth	100 Feet (30 meters)
Clasp Type	Buckle
Case Diameter	32 Millimeters

Band Width	16 Millimeters
Case Thickness	8.9 Millimeters
Band Length	7 Inches
Crystal	Mineral



Rear view of the watch, highlighting the stainless steel caseback and Disney branding.

## 7. WARRANTY INFORMATION

---

This Disney Princess Belle Time Teacher Watch is backed by a **1-year manufacturer warranty**. For specific warranty claims or details, please refer to the warranty documentation included with your purchase or contact the manufacturer directly.

## 8. SUPPORT

---

For further assistance, product inquiries, or technical support, please contact **WatchFactory**, the manufacturer of this watch. Contact information can typically be found on the product packaging or their official website.