

[Manuals.plus](#) /

› [MCS](#) /

› MCS Puzzle Frame 14.25x19.25 Walnut Wall-Mounted Instruction Manual

MCS 65737

MCS Puzzle Frame 14.25x19.25 Walnut Wall-Mounted Instruction Manual

Model: 65737

1. PRODUCT OVERVIEW

The MCS Puzzle Frame is designed to preserve and display your completed puzzles. This specific model features a 14.25 x 19.25 inch opening, a walnut woodgrain finish, and is intended for wall mounting. It includes a clear front panel to protect your puzzle and a two-sided cover stock (black/white) for versatile background options.



Image 1.1: MCS 14.25x19.25 Walnut Puzzle Frame, front view.

Key Features:

- **Puzzle Preservation:** Specifically designed to protect and display finished puzzles.
- **Elegant Design:** Features a 1-inch wide transitional frame molding with a walnut woodgrain finish.
- **Easy Wall Mounting:** Equipped with hinged hangers for effortless vertical or horizontal display.
- **Protective Cover:** Clear front panel shields the puzzle from dust and damage.
- **Versatile Background:** Includes a two-sided cover stock (black on one side, white on the other) to complement your puzzle.

2. SETUP AND PUZZLE INSTALLATION

Follow these steps to properly install your puzzle into the frame and prepare it for display.

1. **Prepare the Frame:** Lay the frame face down on a clean, flat surface to prevent scratching the front panel.
2. **Release the Backing:** Locate the hinged clips on the back of the frame. Rotate these clips to release the frame's backing board.



Image 2.1: Detail of the hinged clips on the frame's backing.

3. **Remove Components:** Carefully remove the backing board and the two-sided cover stock sheet.
4. **Insert Puzzle:** Place your completed puzzle into the frame opening. Ensure it is centered and lies flat. If your puzzle is smaller than 14.25x19.25 inches, you can use the included cover stock as a mat.
5. **Add Background (Optional):** If using the cover stock as a background or mat, place it behind your puzzle with the desired color (black or white) facing forward.
6. **Replace Backing:** Carefully place the backing board back into the frame, ensuring all components are aligned.
7. **Secure the Backing:** Rotate the hinged clips back into position to firmly secure the backing board.

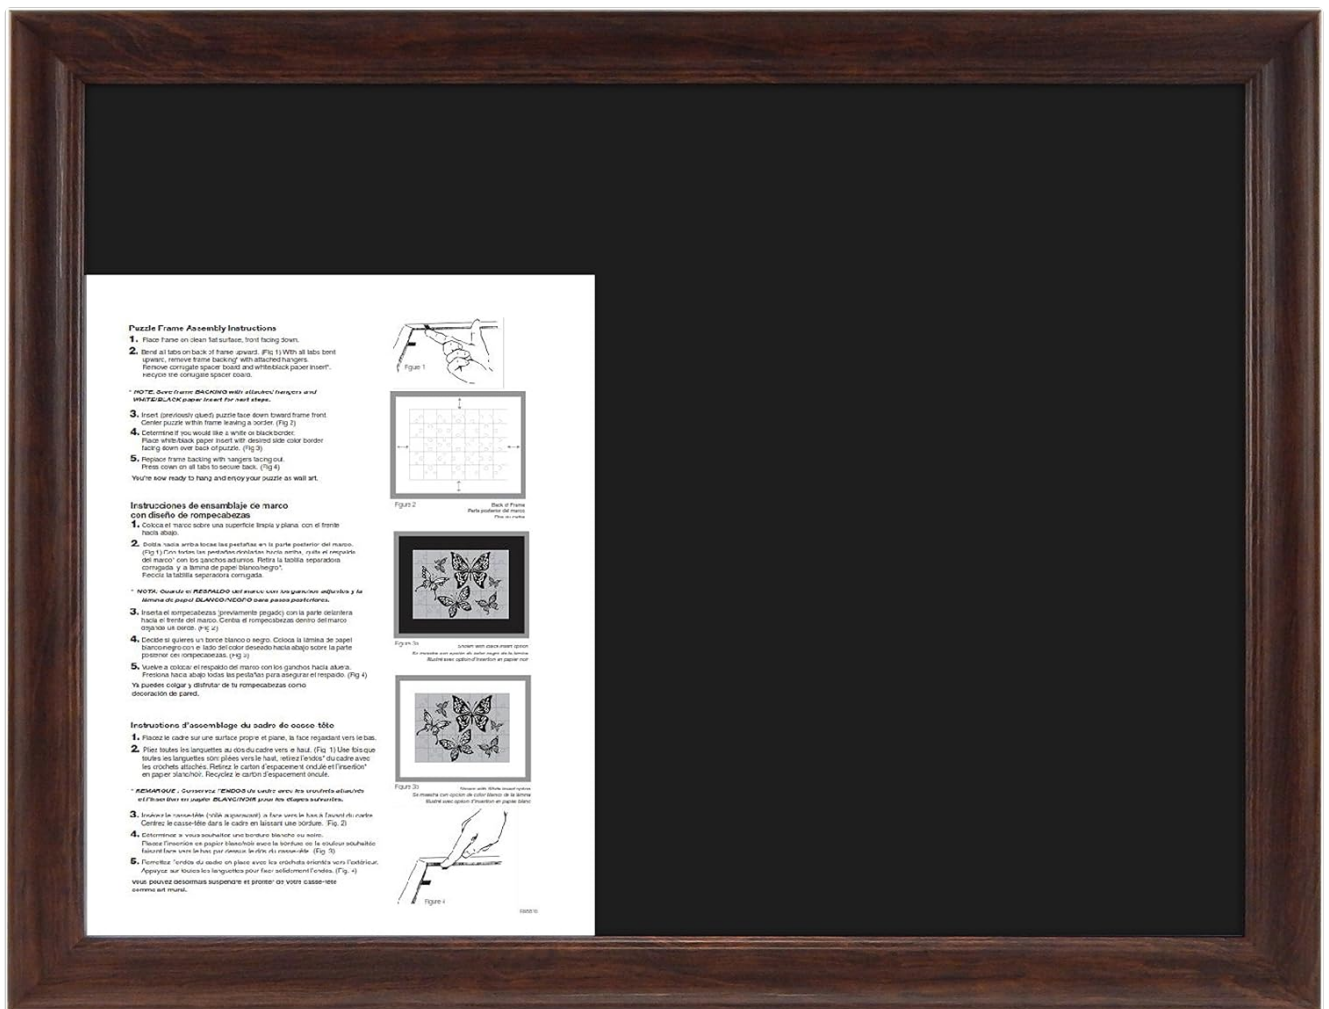


Image 2.2: Visual guide for puzzle frame assembly.

3. OPERATING AND DISPLAY

Once your puzzle is securely framed, you can display it on a wall.

- **Hanging Orientation:** The frame is equipped with hinged hangers that allow for both vertical and horizontal wall mounting. Choose the orientation that best suits your puzzle.



Image 3.1: Detail of the attached hinged hanger for wall mounting.

- **Secure Mounting:** Use appropriate wall anchors and hooks for the weight of the framed puzzle to ensure a secure display.



Image 3.2: Example of the MCS Puzzle Frame displayed on a wall.

4. MAINTENANCE

To maintain the appearance and longevity of your MCS Puzzle Frame:

- **Cleaning:** Wipe the frame and clear front panel with a dry, soft cloth. Avoid abrasive cleaners or harsh chemicals, as these may damage the finish or the clear panel.
- **Storage:** If storing the frame, ensure it is kept in a dry environment away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

This section addresses common questions or minor issues you might encounter.

- **Puzzle is slightly smaller than the frame:** Use the included two-sided cover stock as a mat to fill any gaps and provide a clean border around your puzzle.
- **Frame does not hang straight:** Ensure that the wall hanger is level and securely installed. Adjust the position of the frame on the hanger as needed.

6. SPECIFICATIONS

Brand	MCS
Model Number	65737
Product Dimensions (L x W)	19.25" x 14.25"
Color	Walnut
Frame Material	Polystyrene
Back Material Type	Medium Density Fiberboard
Mounting Type	Wall Mount
Item Weight	2.5 pounds
Included Components	One Frame, Two-sided Cover Stock



Image 6.1: Dimensions of the MCS Puzzle Frame.

7. WARRANTY AND SUPPORT

For warranty information or product support, please contact MCS Industries directly. Refer to the product packaging or the official MCS Industries website for contact details.

[Visit the MCS Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question