

[Manuals.plus](#) /

> [Xerox](#) /

> Xerox Phaser 6510/DN Color Printer User Manual

Xerox 6510/DN

Xerox Phaser 6510/DN Color Printer Instruction Manual

Model: 6510/DN

Brand: Xerox

INTRODUCTION

The Xerox Phaser 6510/DN Color Printer is designed for business environments, offering robust performance and high-quality color output. This device is built to handle high-demand printing tasks, including two-sided printing on various paper sizes. It features advanced color correction technology and a powerful processor to ensure efficient and accurate document production.

KEY FEATURES

- **Commanding Performance:** Color printer with up to 30 pages per minute speed, two-sided printing, 250-sheet paper capacity, and front Side USB Port allows for quicker prints and overall powerful performance your business needs to grow.
- **Convenience and Connectivity:** Ethernet and USB connectivity supports Apple AirPrint, Xerox Print Service Plug in allows users can print emails, photos and important documents from a wide range of mobile devices. WiFi optional with Wireless Connectivity Kit (Additional adapter is required).
- **Stay Secure:** Keep sensitive documents away from unintended recipients with the latest security features, including IPsec, SNMPv3, IP Filtering and Secure Print.
- **Spectacular Image Quality:** Xerox EA Toner has smaller toner particles giving finer details as fast as 8.8 seconds. The PANTONE Color-approved solid color simulations and Xerox color correction technology ensure results that match your expectations.
- **Amazon Dash Replenishment:** Save 10% on all ink/toner reorders with Dash Replenishment. Upon activation your printer measures ink levels and places smart reorders when you are running low. No subscription fees, Cancel anytime.
- **Product Dimensions:** (LxWxH) 10in x 16.5in x 13.7in ; Item Weight: 52.5lb/23.8Kg.

SETUP

Before operating your Xerox Phaser 6510/DN, ensure it is properly set up. Unpack the printer carefully, remove all packing materials, and place it on a stable, level surface. Connect the power cord and the necessary data cables (Ethernet or USB)

to your computer or network. Follow the on-screen prompts on the printer's display for initial configuration, including language and network settings. Install the toner cartridges as described in the Maintenance section.




Figure 1: Front view of the Xerox Phaser 6510/DN Color Printer.



Figure 2: Key dimensions of the Xerox Phaser 6510/DN printer.

OPERATING INSTRUCTIONS

The Xerox Phaser 6510/DN is designed for user-friendly operation. Load paper into the main tray or the bypass tray, ensuring the paper guides are adjusted correctly. Use the control panel to select print settings such as paper type, size, and duplex options. For network printing, ensure the printer is connected to your local network via Ethernet. Mobile printing is supported through Apple AirPrint and Xerox Print Service Plug-in for various mobile devices.

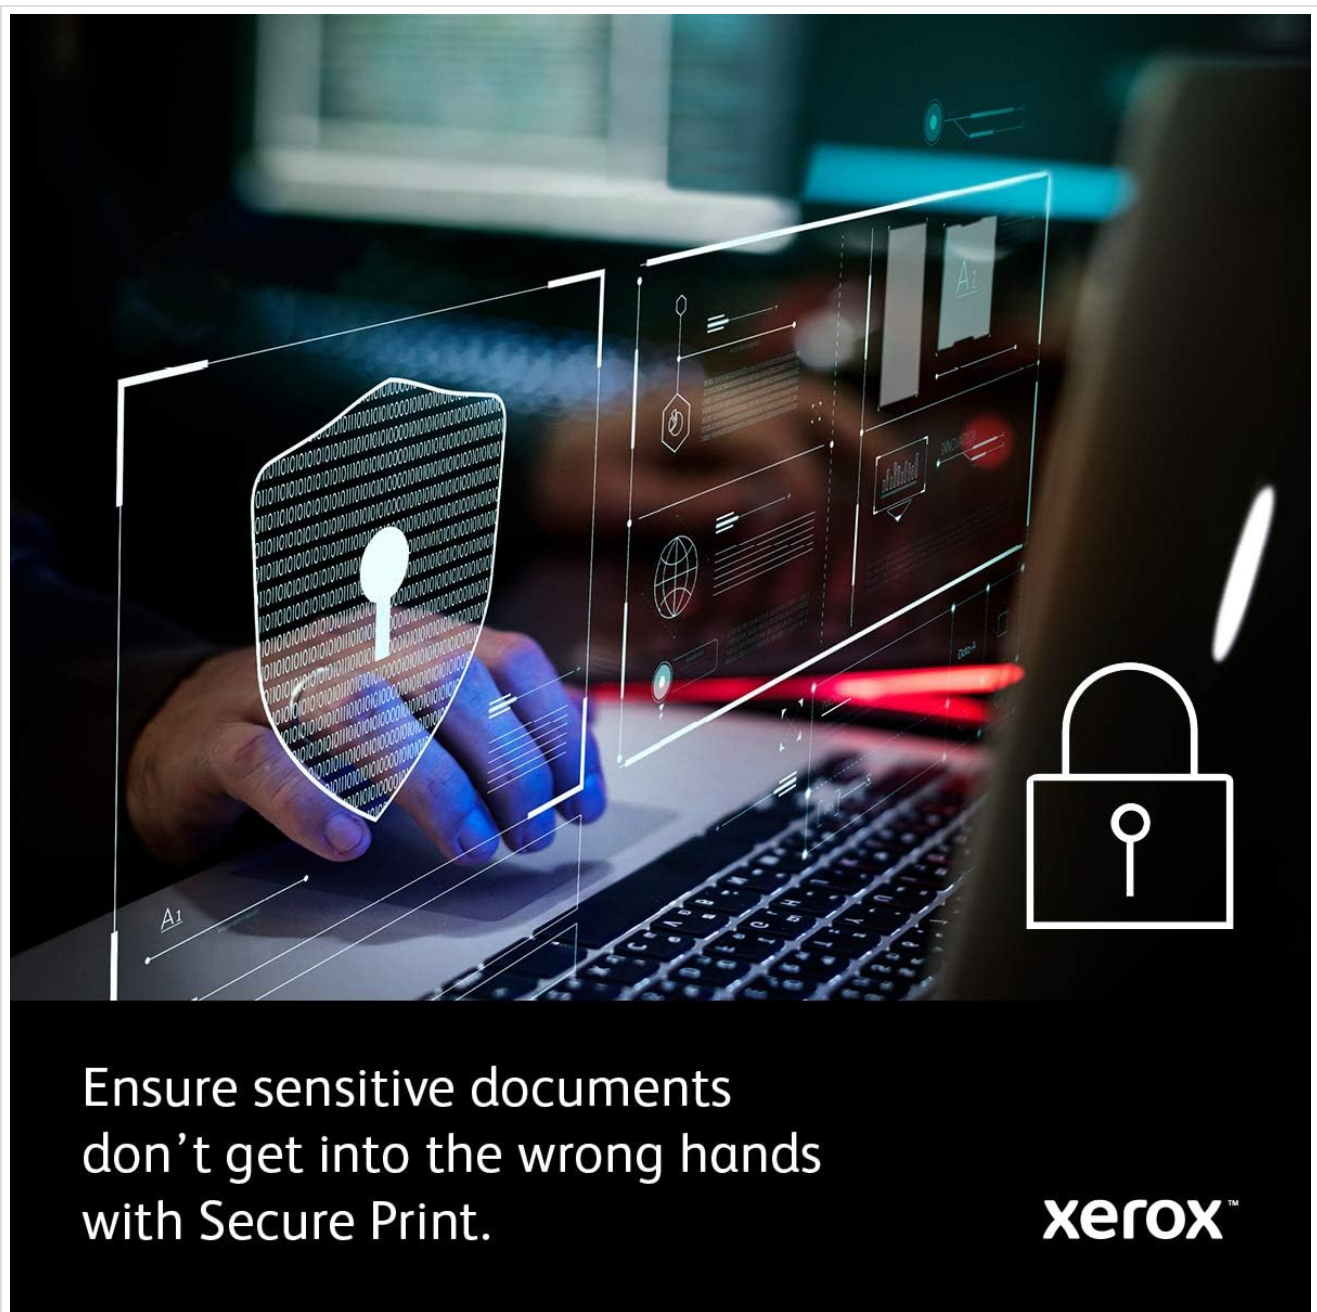

Ensure sensitive documents
don't get into the wrong hands
with Secure Print.

xerox™

Figure 3: The printer supports cloud printing from various devices.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your printer. This primarily involves replacing toner cartridges and keeping the printer clean. The Xerox Phaser 6510/DN uses individual toner cartridges for each color (Black, Cyan, Magenta, Yellow), which are easily accessible from the front of the unit.

Toner Cartridge Replacement:

1. Open the front access panel of the printer.
2. Identify the toner cartridge that needs replacement (indicated by the printer's display or print quality issues).
3. Grasp the handle of the old cartridge and pull it straight out.
4. Unpack the new toner cartridge and gently shake it to distribute the toner evenly.
5. Insert the new cartridge into its corresponding slot until it clicks into place.
6. Close the front access panel. The printer will automatically calibrate the new cartridge.



Figure 4: Easy access to toner cartridges for replacement.

TROUBLESHOOTING

If you encounter issues with your printer, refer to the official User Manual for detailed troubleshooting steps. Common issues include paper jams, connectivity problems, and print quality degradation. Ensure all cables are securely connected, paper is loaded correctly, and toner levels are sufficient. For more complex problems, consult the comprehensive [User Manual \(PDF\)](#).

SPECIFICATIONS

Feature	Detail
Product Dimensions	19"D x 16.5"W x 13.7"H
Item Weight	66.1 Pounds
Connectivity Technology	Ethernet

Feature	Detail
Printing Technology	Laser
Maximum Print Speed (Color)	28 ppm
Max Printspeed Monochrome	40 ppm
Maximum Color Print Resolution	1200 x 2400 dpi
Dual-sided printing	Yes (Automatic)
Max Input Sheet Capacity	250
Ink Color	Black, Cyan, Yellow, Magenta
Memory Storage Capacity	1024 MB
Number of Trays	2

WHAT'S IN THE BOX

The Xerox Phaser 6510/DN Color Printer package typically includes:

- Xerox Phaser 6510/DN Color Printer
- Starter Toner Cartridges (Black, Cyan, Magenta, Yellow)
- Power Cable
- Software and Documentation CD
- Installation Guide

WARRANTY AND SUPPORT

The Xerox Phaser 6510/DN Color Printer comes with a Limited Warranty. For specific warranty details and terms, please refer to the documentation included with your product. Most purchases are eligible for 30-day easy returns.

For additional support, resources, and product information, you can visit the official [Xerox Store](#) or consult the comprehensive [User Manual \(PDF\)](#).