

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Whirlpool](#) /

› [Whirlpool W10876537 Drain Pump Instruction Manual](#)

Whirlpool W10876537

Whirlpool W10876537 Drain Pump Instruction Manual

Genuine OEM Replacement Part

PRODUCT OVERVIEW

The Whirlpool W10876537 Drain Pump is a genuine OEM replacement part designed for various Whirlpool appliances. This component is crucial for the proper drainage function of your appliance, ensuring efficient operation.



Image: The Whirlpool W10876537 Drain Pump, a genuine OEM replacement part, shown from an angled perspective, highlighting its grey and white plastic housing and electrical connector.

Key Features

- **Genuine OEM Replacement Part:** Ensures compatibility and performance as per original manufacturer specifications.
- **Brand:** Whirlpool
- **Model Number:** W10876537
- **Country of Origin:** United States

SAFETY INFORMATION

Always prioritize safety when working with electrical appliances. Failure to follow these instructions could result in electric shock, fire, property damage, or personal injury.

- **Disconnect Power:** Always unplug the appliance or disconnect power at the circuit breaker before attempting any repairs or maintenance.
- **Wear Protective Gear:** Use appropriate personal protective equipment, such as gloves and eye protection, to prevent injury.
- **Consult Appliance Manual:** Refer to your specific appliance's service manual for detailed disassembly and reassembly instructions.
- **Professional Assistance:** If you are unsure about any step, seek assistance from a qualified service technician.
- **Secure Connections:** Ensure all electrical and hose connections are secure and leak-free before restoring power and water supply.

INSTALLATION INSTRUCTIONS

This section provides general guidance for replacing a drain pump. Specific steps may vary depending on your appliance model. Always refer to your appliance's service manual for precise instructions.

Before You Begin

- Verify that the W10876537 is the correct replacement part for your appliance model.
- Clear the work area around the appliance.
- Have towels and a bucket ready to catch any residual water.

Tools Required

- Screwdrivers (Phillips and flathead)
- Pliers
- Adjustable wrench (if needed for hose clamps)

Replacement Steps

1. **Disconnect Power:** Unplug the appliance from the electrical outlet or turn off the circuit breaker supplying power to the appliance.
2. **Shut Off Water Supply:** If replacing a dishwasher drain pump, turn off the water supply to the dishwasher.
3. **Access the Drain Pump:** Depending on your appliance, you may need to pull it out, tilt it, or remove access panels to reach the drain pump.
4. **Drain Residual Water:** Place a shallow pan or towels under the pump area to catch any water that may spill when hoses are disconnected.
5. **Disconnect Hoses:** Loosen any clamps and carefully disconnect the drain hoses from the old pump.
6. **Disconnect Electrical Connectors:** Unplug the electrical wiring harness from the old pump.
7. **Remove Old Pump:** Unmount the old drain pump from its housing. This may involve twisting, unclipping, or unscrewing it.
8. **Install New Pump:** Position the new W10876537 drain pump in place, ensuring it is correctly seated and secured.
9. **Reconnect Electrical Connectors:** Plug the electrical wiring harness back into the new pump.
10. **Reconnect Hoses:** Attach the drain hoses to the new pump and secure them with clamps. Ensure a tight, leak-free connection.
11. **Restore Access Panels:** Reattach any access panels or return the appliance to its original position.
12. **Restore Water and Power:** Turn the water supply back on (if applicable) and restore power to the appliance.
13. **Test Operation:** Run a short cycle on your appliance to check for proper drainage and ensure there are no leaks.


Video: An official Whirlpool video highlighting the importance of using genuine OEM parts for appliance repair and maintenance. It showcases the design, testing, and manufacturing process of Whirlpool parts, emphasizing their quality and perfect fit.

MAINTENANCE

Regular maintenance can extend the life of your drain pump and prevent future issues.

- **Inspect Hoses:** Periodically check drain hoses for kinks, cracks, or blockages that could impede water flow.
- **Listen for Unusual Noises:** Pay attention to any new or unusual noises during the drain cycle, which could indicate a foreign object in the pump or a failing motor.
- **Keep Area Clean:** Ensure the area around the drain pump is free of debris, lint, or food particles that could be drawn into the pump.

TROUBLESHOOTING

If your appliance is experiencing drainage issues, consult the table below for common problems and potential solutions.

Problem	Possible Cause	Solution
Appliance not draining	Clogged drain hose or pump impeller; faulty electrical connection to pump.	Inspect and clear drain hose and pump impeller. Verify electrical connections are secure.
Loud noises during drain cycle	Foreign object in the pump; worn pump motor.	Disconnect power and inspect the pump for foreign objects. If clear, the pump motor may need replacement.
Leaks around the pump	Loose hose clamps; cracked pump housing or seals.	Tighten hose clamps. Inspect pump housing and seals for damage and replace if necessary.

SPECIFICATIONS

Attribute	Detail
Brand	Whirlpool
Model Number	W10876537
Part Number	W10876537
Item Weight	12.8 ounces
Product Dimensions	1 x 1 x 1 inches
Material	Stainless Steel
Power Source	Electric
Country of Origin	United States
UPC / GTIN	883049537078, 640279814061

WARRANTY AND SUPPORT

Warranty Information

This Whirlpool W10876537 Drain Pump typically comes with a 30-day return policy and a 90-day warranty for defective parts. Please retain your proof of purchase for any warranty claims. For specific warranty details, refer to the documentation provided with your purchase or contact the seller.

Customer Support

For further assistance, technical support, or to purchase additional genuine Whirlpool parts, please visit the official Whirlpool website or contact their customer service department. You can also visit the [Whirlpool Store on Amazon](#).

