

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bissell](#) /
- › [Bissell Style 7 Vacuum Cleaner Bags \(Model 32120\) - Instruction Manual](#)

## Bissell 32120

# Bissell Style 7 Vacuum Cleaner Bags

Model Number: 32120

### INTRODUCTION

---

These genuine Bissell Style 7 vacuum cleaner bags are designed to provide optimal performance and filtration for compatible Bissell upright vacuum cleaner models. Each pack contains 3 replacement bags, featuring 100% filtration to capture fine dust and allergens, along with odor-eliminating properties to maintain a fresh scent in your home.



Image: Packaging for Bissell Style 7 Vacuum Cleaner Bags, highlighting compatibility with various Bissell models such as PowerForce 3522 Series, PowerGlide 3545 Series, Plus 3550 Series, and Lift-Off 3554 Series.

## SETUP: BAG INSTALLATION

---

Follow these steps to correctly install a new Bissell Style 7 vacuum cleaner bag:

1. **Power Off:** Ensure your vacuum cleaner is unplugged from the power outlet before beginning installation.
2. **Open Compartment:** Locate and open the vacuum cleaner's bag compartment. This is typically found on the front or side of the upright unit.
3. **Remove Old Bag:** Carefully remove the full or old vacuum bag. Most bags have a collar that slides off the intake port. Dispose of the old bag properly.
4. **Install New Bag:** Take a new Bissell Style 7 bag. Align the cardboard collar of the new bag with the vacuum's intake port. Slide the bag's collar firmly onto the port until it is securely seated. Ensure there are no gaps to prevent dust leakage.
5. **Position Bag:** Gently unfold and position the bag inside the compartment, ensuring it does not obstruct any closing mechanisms or filters.
6. **Close Compartment:** Close the bag compartment door securely until it latches.



Image: A single Bissell Style 7 vacuum cleaner bag, showing the cardboard collar for attachment to the vacuum's intake port.

## OPERATING: WHEN TO CHANGE THE BAG

---

For optimal vacuum performance and air quality, it is important to change the vacuum bag regularly. Replace the bag when:

- The bag appears full or nearly full. Many vacuum cleaners have an indicator to signal a full bag.
- You notice a decrease in suction power, even if the bag does not appear completely full.
- Unpleasant odors are emitted from the vacuum cleaner during operation. The odor-eliminating feature of these bags helps, but a full bag can still cause odors.
- For households with pets or allergy sufferers, more frequent bag changes may be necessary.

Do not attempt to reuse or empty a disposable bag. Always replace with a new, genuine Bissell Style 7 bag.

## MAINTENANCE

---

Maintaining your vacuum cleaner's bag system is straightforward:

- **Bag Disposal:** Always dispose of used vacuum bags in a sealed trash receptacle to contain dust and allergens.
- **Compartment Cleaning:** Periodically inspect the inside of the vacuum bag compartment for any accumulated dust or debris. Wipe clean with a dry cloth if necessary.
- **Filter Check:** While changing the bag, it is a good practice to check any other filters in your vacuum cleaner (e.g., pre-motor or post-motor filters) and clean or replace them according to your vacuum cleaner's instruction manual.

## TROUBLESHOOTING

---

If you encounter issues related to the vacuum bag, consider the following:

- **Low Suction:** If your vacuum has low suction, first check if the bag is full and needs replacement. Also, ensure the bag is correctly installed and sealed against the intake port.
- **Dust Leakage:** If dust is escaping the bag compartment, verify that the bag's collar is securely attached to the intake port and that the compartment door is fully closed and latched.
- **Unusual Odors:** Replace the bag if persistent odors are present, even if the bag is not completely full.

## SPECIFICATIONS

<b>Model Number</b>	32120
<b>Brand</b>	Bissell
<b>Quantity</b>	3 bags per pack
<b>Material</b>	Paper
<b>Filtration</b>	100% Allergen Filtration
<b>Features</b>	Odor Eliminating
<b>Compatible Devices</b>	Bissell Upright Vacuum Cleaners (Style 7) including PowerForce 3522 Series, PowerGlide 3545 Series, Plus 3550 Series, Lift-Off 3554 Series
<b>Item Package Weight</b>	3.5 lb
<b>Package Dimensions</b>	9.33 x 7.01 x 1.38 inches

## WARRANTY INFORMATION

---

As replacement consumable items, these vacuum cleaner bags typically do not come with a separate manufacturer's warranty. Any warranty coverage would generally apply to the vacuum cleaner itself. Please refer to your specific Bissell vacuum cleaner's instruction manual or the official Bissell website for detailed warranty information regarding your appliance.

## CUSTOMER SUPPORT

---

For further assistance, questions regarding product compatibility, or to purchase additional replacement bags, please visit the official Bissell website or contact Bissell customer support directly. Always use genuine Bissell replacement parts to ensure optimal performance and to maintain your vacuum cleaner's warranty.

Official Bissell Website: [www.bissell.com](http://www.bissell.com)