

Karlsson KA5620WD

Karlsson Flip Table Clock - Bamboo User Manual

Model: KA5620WD | Brand: Karlsson

[Information](#) [Setup](#) [Operation](#) [Introduction](#) [Safety](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Karlsson Flip Table Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Please read this manual thoroughly before use and retain it for future reference.

The Karlsson Flip Table Clock combines modern design with classic functionality, featuring a unique flip mechanism for displaying time. Its bamboo finish adds a natural and elegant touch to any space.

2. SAFETY INFORMATION

- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- Do not expose the clock to water or other liquids.
- Handle the clock with care. Avoid dropping or subjecting it to strong impacts.
- Do not attempt to disassemble or modify the clock. This may void the warranty and cause damage.
- Keep batteries out of reach of children and pets. Dispose of used batteries properly according to local regulations.
- Use only the specified type and number of batteries.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing:

- Karlsson Flip Table Clock (Bamboo)
- User Manual (this document)

Note: Batteries are not included and must be purchased separately.

4. SETUP

4.1 Unpacking

Carefully remove the clock from its packaging. Inspect the clock for any signs of damage during transit. If any damage is

found, do not proceed with setup and contact customer support.

4.2 Battery Installation

The Karlsson Flip Table Clock is battery-powered. It requires 1 x D battery (not included).

1. Locate the battery compartment cover on the back or bottom of the clock.
2. Remove the cover by sliding or gently prying it open.
3. Insert one D battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover securely.



Image: Rear view of the Karlsson Flip Table Clock, highlighting its compact design and potential location for battery access.

4.3 Placement

Place the clock on a stable, flat surface. Ensure it is not near strong magnetic fields or sources of vibration, which could affect its accuracy or mechanism. The clock is designed for indoor use, ideally in a bedroom or living area due to its silent operation.



5. OPERATING INSTRUCTIONS

5.1 Setting the Time

To set the time on your Karlsson Flip Table Clock:

1. Locate the time adjustment knob, usually found on the side or back of the clock.
2. Gently turn the knob clockwise to advance the time. The minute and hour flaps will flip accordingly.
3. Continue turning until the desired time is displayed. It is recommended to set the time a few minutes ahead and then let it catch up to the exact time for precise synchronization.



Image: Close-up front view of the Karlsson Flip Table Clock, showing the clear digital display formed by the flipping number panels.

5.2 Understanding the Flip Mechanism

The clock operates using a mechanical flip mechanism. Every minute, the minute display will audibly click as it flips to the next number. Every hour, the hour display will also flip. This is a normal part of the clock's operation and indicates its proper functioning.

5.3 Silent Operation Feature

While the flip mechanism produces a subtle click, the clock is designed to be generally silent in its continuous operation, making it suitable for quiet environments like bedrooms or offices.

6. MAINTENANCE

6.1 Cleaning

To clean the clock, gently wipe its surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the bamboo finish or the internal components. Avoid getting moisture into the clock's

mechanism.

6.2 Battery Replacement

When the clock starts to lose time or the flip mechanism becomes sluggish, it is an indication that the battery needs to be replaced. Follow the battery installation steps in Section 4.2. Always replace with a fresh D battery.

6.3 Storage

If you plan to store the clock for an extended period, remove the battery to prevent leakage and potential damage to the clock's internal components.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock is not running or stops frequently.	Dead or low battery. Battery inserted incorrectly.	Replace with a fresh D battery. Check battery polarity (+/-).
Time is inaccurate (running fast or slow).	Low battery. Environmental factors (extreme temperature).	Replace battery. Ensure clock is in a stable room temperature environment.
Flaps are stuck or not flipping correctly.	Obstruction in the mechanism. Low battery.	Gently check for any visible obstructions. Do not force the flaps. Replace battery. If issue persists, contact support.
Unusual noise from the clock.	Internal mechanism issue.	If the noise is not the normal minute click, discontinue use and contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Karlsson
Model Number	KA5620WD
Product Dimensions (L x W x H)	43 x 3.81 x 22.6 cm
Product Weight	1.03 kg
Color	Brown (Bamboo finish)
Display Type	Digital (Flip mechanism)
Power Source	1 x D Battery (not included)
Special Feature	Silent operation (minimal click per minute)
Style	Modern

Feature	Detail
Room Type	Bedroom, Living Room, Office
Shape	Rectangular

9. WARRANTY AND SUPPORT

Karlsson products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Karlsson website. Keep your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or inquiries about replacement parts, please contact Karlsson customer service. Contact information can typically be found on the product packaging or the official brand website.

Please note that damage caused by improper use, unauthorized repairs, or failure to follow the instructions in this manual may void your warranty.

