

## Tupperware UH-CJVH-63X5

# Tupperware Smart Chopper Instruction Manual

Model: UH-CJVH-63X5 | Brand: Tupperware

## INTRODUCTION

The Tupperware Smart Chopper (Model UH-CJVH-63X5) is a manual kitchen tool designed to simplify the chopping and mincing of various ingredients. Its efficient pull-cord mechanism and sharp stainless steel blades allow for quick preparation of vegetables, herbs, and more, without the need for electricity. This manual provides essential information for the safe and effective use of your Smart Chopper.



Figure 1: Assembled Tupperware Smart Chopper.

## SETUP AND ASSEMBLY

Before first use, wash all components with warm soapy water and rinse thoroughly. Ensure all parts are completely dry before assembly.

- 1. Place the Blade Assembly:** Carefully place the sharp stainless steel blade assembly onto the central pin inside the transparent container. Ensure it sits securely.
- 2. Add Ingredients:** Place your desired ingredients into the container around the blade assembly. For best results, cut larger ingredients into smaller, manageable pieces (approximately 1-2 inches) before placing them in the chopper. Do not overfill the container.
- 3. Secure the Lid:** Align the lid with the container and twist it clockwise until it locks securely into place. The pull-cord mechanism should be facing outwards.



Figure 2: Disassembled components of the Smart Chopper.

## OPERATING INSTRUCTIONS

Once assembled with ingredients, follow these steps to operate your Smart Chopper:

- 1. Stabilize the Chopper:** Place the assembled chopper on a flat, stable surface. Hold the top of the lid firmly with one hand.
- 2. Pull the Cord:** With your other hand, grasp the pull-cord handle. Pull the cord horizontally in short, quick motions. Each pull will rotate the blades, chopping the ingredients.
- 3. Control Chop Size:** The number of pulls determines the fineness of the chop. A few pulls will result in a

coarse chop, while more pulls will create a finer mince. Periodically check the consistency of the ingredients by removing the lid.

4. **Emptying:** Once the desired consistency is achieved, carefully remove the lid and then the blade assembly. Transfer the chopped ingredients from the container.



Figure 3: Demonstrating the pull-cord operation.

## Official Product Video: Tupperware SuperSonic Chopper Compact

Your browser does not support the video tag.

*Video 1: This video demonstrates the assembly and operation of the Tupperware SuperSonic Chopper Compact, showcasing its pull-cord mechanism for efficient chopping of various food items.*

## MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity of your Smart Chopper.

- **Hand Wash Only:** All components of the Tupperware Smart Chopper are recommended for hand washing. Use warm water and a mild dish soap.
- **Blade Care:** Exercise extreme caution when handling the sharp blades. Use a brush to clean any food residue from the blades.
- **Drying:** Ensure all parts are thoroughly dried before reassembling or storing to prevent rust on the blades and maintain hygiene.

- **Storage:** Store the chopper in a dry place. For safety, always store the blade assembly inside the container with the lid securely fastened.

## TROUBLESHOOTING

If you encounter issues with your Smart Chopper, consider the following:

- **Blades Not Rotating:**
  - Ensure the lid is securely locked onto the container.
  - Check if the container is overfilled. Remove some ingredients if necessary.
  - Verify that the blade assembly is correctly seated on the central pin.
  - Ensure ingredients are cut into small enough pieces to allow blade movement.
- **Food Not Chopping Evenly:**
  - Ingredients may be too large or too few. Adjust quantity and size.
  - Pull the cord more consistently and for a longer duration to achieve finer results.
  - Shake the chopper gently between pulls to redistribute ingredients.
- **Cord Getting Stuck:**
  - Ensure the cord is pulled straight out and not at an angle.
  - Check for any obstructions around the cord mechanism in the lid.

## SPECIFICATIONS

<b>Brand</b>	Tupperware
<b>Model Number</b>	UH-CJVH-63X5
<b>Material</b>	BPA Free Virgin Plastic (body), Stainless Steel (blades)
<b>Operation Mode</b>	Manual
<b>Product Dimensions</b>	3.15 x 1.97 x 3.15 inches
<b>Item Weight</b>	9.2 ounces (0.26 Kilograms)
<b>Blade Length</b>	2 Inches
<b>Special Feature</b>	Multipurpose
<b>Product Care Instructions</b>	Hand Wash Only

## WARRANTY INFORMATION

For specific warranty details regarding your Tupperware Smart Chopper, please refer to the documentation included with your purchase or contact Tupperware customer service directly. Warranty terms and conditions may vary by region and product.

## CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please visit the official

Tupperware website or contact their customer support line for your region. Keep your model number (UH-CJvh-63X5) handy for quicker service.

© 2024 Tupperware. All rights reserved.