

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Mitsubishi](#) /

› [Mitsubishi NR-MZ033-2 In-Dash Navigation System User Manual](#)

Mitsubishi NR-MZ033-2

Mitsubishi NR-MZ033-2 In-Dash Navigation System User Manual

Model: NR-MZ033-2

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Mitsubishi NR-MZ033-2 In-Dash Navigation System. Please read this manual thoroughly before using the product to ensure correct operation and to prevent damage.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent injury or damage to the device.

- Always operate the vehicle safely. Distraction from the navigation system can lead to accidents.
- Do not attempt to install or service the unit yourself. Professional installation is recommended.
- Ensure all wiring is correctly connected to prevent electrical hazards or malfunction.
- Keep the unit free from moisture and extreme temperatures.
- Do not block ventilation openings.

3. PRODUCT OVERVIEW

3.1 Key Features

- 7V type WVGA Monitor for clear display.
- Integrated DVD and CD mechanism for media playback.
- Built-in Bluetooth for connectivity.
- Features a multi-way scroll function for map screen navigation, similar to smartphone operation.
- Supports VICS WIDE for traffic and road information, utilizing FM multi-broadcast transmission.
- Provides a straight-line display from the current location to the destination for clear directional guidance.

- Navigation panel with incurve and outcurve buttons designed for ease of operation.
- Intuitive menu design for straightforward function selection.

3.2 Product Image



Image: Front view of the Mitsubishi NR-MZ033-2 In-Dash Navigation System, showing the 7V WVGA monitor and control buttons.

4. SETUP

4.1 Installation

The Mitsubishi NR-MZ033-2 is designed for in-dash installation. Due to the complexity of vehicle electrical systems, professional installation by a qualified technician is strongly recommended. The product dimensions are approximately 178 mm (W) x 100 mm (H) x 164 mm (D).

4.2 Initial Power-On

After installation, turn on your vehicle's ignition. The system should power on automatically. Follow any on-screen prompts for initial setup, such as language selection or time zone settings.

5. OPERATING INSTRUCTIONS

5.1 Navigation Functions

- **Map Screen Navigation:** Use the multi-way scroll function on the touch screen to pan and zoom the map.
- **Destination Entry:** Access the navigation menu to input destinations via address, points of interest, or recent history.
- **Route Guidance:** The system provides turn-by-turn directions and a straight-line display to your destination.
- **VICS WIDE:** Access real-time traffic and road information through the VICS WIDE feature to optimize your route.

5.2 Media Playback (DVD/CD)

- **Inserting Discs:** Gently insert a DVD or CD into the disc slot. The system will automatically detect and begin playback.
- **Controls:** Use the on-screen touch controls or physical buttons for play, pause, skip, and volume adjustment.

5.3 Bluetooth Connectivity

- **Pairing a Device:** Go to the Bluetooth settings menu on the navigation system and enable pairing mode. On your mobile device, search for available Bluetooth devices and select 'NR-MZ033-2'. Follow the on-screen prompts to complete pairing.
- **Audio Streaming:** Once paired, you can stream audio from your mobile device to the navigation system.

5.4 Display and Controls

- **Touch Screen:** The 7-inch WVGA monitor is a touch screen interface for most operations.
- **Physical Buttons:** Incurve and outcurve buttons provide tactile control for frequently used functions.
- **Menu Layout:** The menu system is designed for clarity, allowing quick access to navigation and AV functions.

5.5 Audio Settings

Access the audio settings menu to adjust sound parameters. This includes adjusting the sound image position relative to the listening position and fine-tuning sound quality to suit your preferences within the vehicle environment.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your navigation system.

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. For stubborn marks, slightly dampen the cloth with water or a screen-safe cleaner. Do not use abrasive cleaners.
- **Cleaning the Unit:** Wipe the exterior of the unit with a dry, soft cloth. Avoid using solvents or harsh chemicals.
- **Disc Slot:** Keep the disc slot free from dust and debris. Do not insert foreign objects.

7. TROUBLESHOOTING

Refer to the table below for common issues and their potential solutions.

Problem	Possible Cause	Solution
No power	Incorrect wiring; Blown fuse; Vehicle ignition off	Check wiring connections; Replace fuse; Turn vehicle ignition on
No GPS signal	GPS antenna obstructed; Poor satellite reception	Ensure clear view of sky for GPS antenna; Move to an open area
No sound	Volume too low; Mute activated; Incorrect audio source; Speaker wiring issue	Increase volume; Deactivate mute; Select correct audio source; Check speaker connections
Touch screen unresponsive	System freeze; Screen calibration needed	Restart the unit (refer to installation manual for reset procedure); Recalibrate touch screen via settings

8. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	Mitsubishi
Model Name	NR-MZ033-2
Vehicle Service Type	Car
Screen Size	7 Inches
Special Features	VICS/VICS WIDE
Connectivity Technology	Bluetooth
Map Type	Street
Resolution	WVGA
Human Interface Input	Buttons
Control Method	Touch
Product Dimensions (W x H x D)	Approx. 178 x 100 x 164 mm
Batteries Included	No

9. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support or service inquiries, please contact your authorized Mitsubishi dealer or the customer support provided in your warranty documentation.