

Philips BT9297/15

Philips BT9297/15 Series 9000 Beard Trimmer User Manual

Model: BT9297/15

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Philips BT9297/15 Series 9000 Beard Trimmer. Please read these instructions carefully before first use and retain them for future reference. This device is designed for trimming and styling facial hair.

2. SAFETY INFORMATION

- Always check the appliance before use. Do not use if damaged.
- Keep the appliance dry. Do not immerse in water while charging.
- This appliance is 100% washable. Ensure the appliance is unplugged from the power outlet before cleaning with water.
- Do not use the appliance with a damaged comb or blade, as this may cause injury.
- Keep the appliance out of reach of children.
- The laser guide is safe for eyes under normal use conditions. Avoid direct eye exposure to the laser beam.
- Only use the charger supplied with the product.

3. PRODUCT OVERVIEW

The Philips BT9297/15 Series 9000 Beard Trimmer is engineered for precise beard styling with advanced features.



Figure 1: Philips BT9297/15 Series 9000 Beard Trimmer. This image shows the overall design of the trimmer, highlighting its sleek appearance and digital display.

Key Features:

- **Laser Guide Technology:** Projects a red line to indicate the exact cutting path for symmetrical and precise trimming.
- **17 Adjustable Length Settings:** From 0.4 mm to 7 mm, controlled via the Philips ZoomWheel.
- **Dynamic Cutting System:** Features an integrated HairLift comb that lifts hairs to the optimal cutting position for an even trim.
- **Precision Trimming:** Equipped with a 32 mm main blade and a 10 mm detail trimmer for fine styling.
- **Cordless Operation:** Provides up to 80 minutes of cordless use after a 1-hour charge.
- **100% Washable:** Designed for easy cleaning under running water.



Figure 2: Close-up of the trimmer head, showing the laser guide emitter. The laser projects a visible line to assist with precise trimming.

Included Components:

- Philips BT9297/15 Beard Trimmer
- 1 Lift and Trim Comb
- Detail Trimmer Attachment
- Storage Pouch
- Charging Cable



Figure 3: Product packaging for the Philips BT9297/15. This image illustrates the contents typically included in the box.

4. SETUP

4.1 Charging the Appliance

1. Ensure the appliance is switched off.
2. Insert the small plug of the charging cable into the socket at the bottom of the trimmer.
3. Plug the adapter into a wall outlet.
4. The battery indicator on the display will show charging progress. A full charge takes approximately 1 hour and provides up to 80 minutes of cordless use.

4.2 Attaching/Detaching the Comb

- To attach the lift and trim comb, slide it onto the trimmer head until it clicks into place.
- To detach, gently pull the comb away from the trimmer head.



Figure 4: The Philips BT9297/15 trimmer with the lift and trim comb attached. This comb helps guide hairs for an even cut.

5. OPERATING INSTRUCTIONS

5.1 Turning On/Off

Press the power button once to turn the trimmer on. Press it again to turn it off.

5.2 Adjusting Length Settings

1. Ensure the lift and trim comb is attached.
2. Rotate the ZoomWheel to select your desired trimming length. The selected length (0.4 mm to 7 mm) will be displayed on the digital screen.



Figure 5: A hand adjusting the ZoomWheel on the trimmer. The digital display shows the selected length setting.

5.3 Using the Laser Guide

1. Activate the laser guide by pressing the dedicated laser button (if available, otherwise it activates automatically with the trimmer).
2. A red laser line will project onto your skin, indicating the precise cutting line.
3. Align the trimmer head with the desired line and move the trimmer against the direction of hair growth for an even trim.



Figure 6: A man using the Philips BT9297/15, demonstrating the laser guide projecting a red line on his cheek for precise beard shaping.



Figure 7: The trimmer in use, with the laser guide assisting in defining the beard line along the chin area.

5.4 Trimming Techniques

- For an even trim, move the trimmer slowly and steadily against the direction of hair growth.
- Use light pressure. Do not press the trimmer too hard against your skin.
- For best results, ensure your beard is dry before trimming.



Figure 8: A man trimming his beard with the Philips BT9297/15, demonstrating a typical trimming motion.

5.5 Using the Detail Trimmer

The 10 mm detail trimmer is ideal for precise lines, edges, and small areas. To use it, remove the main comb and attach the detail trimmer head (if it's a separate attachment) or flip the head to expose the detail trimmer.



Figure 9: Close-up view of the detail trimmer head. This smaller blade is designed for intricate styling and sharp lines.



Figure 10: A man using the detail trimmer to refine the edges of his beard, showcasing its precision capabilities.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your trimmer.

6.1 Cleaning the Trimmer

1. Turn off the appliance and unplug it from the power outlet.
2. Remove the comb attachment.
3. Rinse the trimmer head and comb under running tap water. The appliance is 100% washable.
4. Shake off excess water and allow all parts to air dry completely before reassembling or storing.
5. Do not use abrasive cleaning agents or harsh chemicals.

6.2 Blade Care

- The blades are self-sharpening and do not require oiling.
- Handle the blades with care. If the blades become damaged, they should be replaced.

7. TROUBLESHOOTING

7.1 Trimmer Does Not Turn On

- Ensure the battery is charged. Connect the trimmer to the charger and allow it to charge for at least 15 minutes before attempting to turn it on again.
- Check if the power button is pressed firmly.

7.2 Poor Trimming Performance

- Clean the trimmer head and comb thoroughly. Hair buildup can affect performance.
- Ensure the comb attachment is correctly secured.
- The battery might be low. Charge the trimmer fully.
- If the blades are dull or damaged, they may need replacement.

7.3 Laser Guide Not Visible

- Ensure the trimmer is turned on.
- Check for any obstructions on the laser emitter. Clean if necessary.
- The laser may be less visible in brightly lit environments. Try using it in a moderately lit area.

8. SPECIFICATIONS

Model Number	BT9297/15
Power Source	Battery Powered
Battery Type	1 A battery (included)
Charging Time	Approx. 1 hour
Cordless Run Time	Up to 80 minutes
Length Settings	17 (0.4 mm - 7 mm)
Main Blade Width	32 mm
Detail Trimmer Width	10 mm
Washable	Yes, 100% washable
Product Dimensions	22.9 x 39.4 x 26 cm
Product Weight	0.28 Kilogram
Material	Aluminum

9. WARRANTY AND SUPPORT

Philips offers a manufacturer's warranty for this product. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details. For product support, spare parts, or further assistance, please visit the official Philips website or contact Philips customer service in your region. Contact information can typically be found in the product packaging or on the Philips website.