

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [auna](#) /

> [auna Connect 90 Internet Radio User Manual](#)

auna Connect 90

auna Connect 90 Internet Radio User Manual

INTRODUCTION

Thank you for choosing the auna Connect 90 Internet Radio. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and keep it for future reference. The auna Connect 90 offers versatile audio entertainment with Internet Radio, FM radio, and USB MP3 playback capabilities, all accessible via WiFi connectivity.

SAFETY INSTRUCTIONS

- Read all instructions carefully before operating the device.
- Keep the device away from water, moisture, and high humidity.
- Do not expose the device to direct sunlight or extreme temperatures.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the provided power adapter.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep the device out of reach of children.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

- auna Connect 90 Internet Radio Unit
- Power Adapter
- Remote Control
- User Manual (this document)

PRODUCT OVERVIEW

Front Panel and Display

The front panel features the main display, control buttons, and the navigation dial for easy interaction.



Image: Front view of the auna Connect 90, showing the color display, control buttons (Standby, Mode, Preset, Menu, Sleep, Alarm, Back, Forward), and the Navigate/Volume dial.

- **Display:** Color screen showing time, station information, and menu options.
- **Standby:** Powers the unit on or off.
- **Mode:** Switches between Internet Radio, FM, and USB modes.
- **Preset:** Accesses saved radio station presets.
- **Menu:** Enters the main menu for settings and options.
- **Sleep:** Sets a sleep timer.
- **Alarm:** Configures alarm settings.
- **Back/Forward:** Navigates through menus or tracks.
- **Navigate/Volume Dial:** Rotates to scroll through options or adjust volume; press to confirm (OK).

Rear Panel and Connections

The rear panel provides essential connection ports for power and external devices.



Image: Rear view of the auna Connect 90, showing the power input, USB port, and Aux-out port.

- **DC IN 5V:** Power input for the included adapter.
- **USB:** Port for connecting a USB drive for MP3 playback.
- **AUX OUT:** 3.5mm audio output for connecting to external speakers or headphones.

SETUP

1. Power Connection

1. Connect the power adapter to the **DC IN 5V** port on the rear of the radio.
2. Plug the power adapter into a wall outlet.
3. The radio will power on to standby mode. Press the **Standby** button to turn it on.

2. Initial Setup and Network Connection

Upon first power-on, the radio will guide you through the initial setup wizard.

1. **Language Selection:** Use the **Navigate** dial to select your preferred language and press **OK** to confirm.
2. **Network Wizard:** The radio will prompt you to connect to a network. Select 'Yes' and press **OK**.
3. **Scan for Networks:** The radio will scan for available WiFi networks. Select your network from the list.
4. **Enter Password:** Use the **Navigate** dial to enter your WiFi password (WPA/WPA2). Rotate to select characters, press **Forward** to move to the next character, and press **OK** to confirm the password.
5. **Connection:** The radio will attempt to connect to your WiFi network. Once successful, it will display a confirmation message.

If the connection fails, double-check your password and try again. Ensure your WiFi router is within range.

OPERATING

1. Switching Modes

Press the **Mode** button repeatedly to cycle through available modes:

- **Internet Radio:** Access thousands of online radio stations.
- **FM Radio:** Tune into local FM broadcasts.
- **USB:** Play MP3 files from a connected USB drive.

2. Internet Radio

1. Select **Internet Radio** mode.
2. Use the **Navigate** dial to browse categories (e.g., Location, Genre, Popular Stations).
3. Press **OK** to select a category or station.
4. To save a station as a preset, press and hold the **Preset** button, then select a preset number and press **OK**.
5. To recall a preset, press the **Preset** button briefly, then select the desired preset and press **OK**.

3. USB MP3 Playback

1. Insert a USB drive containing MP3 files into the **USB** port on the rear panel.
2. Select **USB** mode using the **Mode** button.
3. The radio will scan the USB drive. Use the **Navigate** dial to browse folders and tracks.
4. Press **OK** to play a selected track.
5. Use **Back** and **Forward** buttons to skip tracks.

4. Volume Control

Rotate the **Navigate/Volume** dial clockwise to increase volume and counter-clockwise to decrease volume.

5. Alarm and Sleep Timer

- **Alarm:** Press the **Alarm** button to set up one or two alarms. Follow the on-screen prompts to set time, source (buzzer, internet radio), and frequency.
- **Sleep:** Press the **Sleep** button repeatedly to set a sleep timer (e.g., 15, 30, 60 minutes). The radio will automatically turn off after the set time.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the radio. Do not use liquid cleaners or abrasive materials.
- **Storage:** If not in use for an extended period, unplug the power adapter and store the radio in a cool, dry place.
- **Ventilation:** Ensure the ventilation slots are not blocked to prevent overheating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power adapter not connected; outlet not working.	Check power connections; try a different outlet.
No internet connection	Incorrect WiFi password; router out of range; router issue.	Re-enter WiFi password; move radio closer to router; restart router.
Poor sound quality / Static	Weak internet signal; FM interference.	Improve WiFi signal strength; adjust radio position for FM.
USB playback not working	USB drive not formatted correctly; unsupported file format; drive faulty.	Ensure USB is FAT32 formatted; use MP3 files; try another USB drive.
Remote control not working	Batteries depleted; obstruction.	Replace batteries; ensure clear line of sight to radio.

SPECIFICATIONS

- **Brand:** auna
- **Model:** KC6-Connect 90 WD
- **Connectivity:** WiFi, USB, 3.5mm Audio Out
- **Tuner Technology:** FM (87.5-108 MHz)
- **Power Source:** 5V DC (via power adapter)
- **Compatible Devices:** Smartphone, Laptop, MP3 Player, Tablet (for audio output)
- **Product Dimensions:** 13.5 x 18 x 12 cm
- **Product Weight:** 794 g

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support or service inquiries, please contact your retailer or the auna customer service department.