

[Manuals.plus](#) /

› [Accutime](#) /

› Super Mario Kids LCD Digital Watch with Flashing Lights in Dial Featuring Mario Design and Molded Silicone Strap – Easy-Read Time Display – Durable Build – Fits Wrists 5.5" to 8"

Accutime GMA3002

Super Mario Kids LCD Digital Watch Instruction Manual

BRAND: ACCUTIME

Product Overview

The Super Mario Kids LCD Digital Watch is designed for young fans of the Mushroom Kingdom, offering an easy-to-read time display and interactive flashing lights. Its durable construction and comfortable silicone strap make it suitable for daily wear and active play.



Figure 1: Front view of the Super Mario Kids LCD Digital Watch.

Key Features

- Features Mario on the dial with built-in flashing lights that activate during button press.
- LCD digital display makes it easy for kids to check the time independently.
- Molded blue silicone strap provides flexibility and all-day comfort for active kids.
- Lights flash through the transparent dial and case when activated, adding interactive fun.
- Fits wrist sizes from 5.5" to 8", ideal for everyday use by young Mario fans aged 4+.





Figure 2: Visual representation of the watch's key features including LED light show, soft silicone strap, and kid-tough design.

Initial Setup

Setting Time and Date

To set the time and date on your Super Mario Digital Watch, locate the buttons on the side of the watch case. Typically, one button is used to cycle through display modes (time, date, seconds) and another button is used to adjust the values.

1. Press the **Mode** button (usually the middle button on the right side) repeatedly until the desired setting (e.g., hours, minutes, month, day) begins to flash.
2. While the setting is flashing, press the **Set** button (usually the bottom button on the right side) to adjust the value.
3. Repeat steps 1 and 2 for all desired time and date settings.
4. Once all settings are complete, press the **Mode** button again to exit the setting mode.

Your browser does not support the video tag.

Video 1: Demonstration of the Super Mario watch's digital display and light-up function, showing how the watch appears and operates.

Operating Your Watch

Activating Flashing Lights

The Super Mario watch features built-in flashing lights that illuminate the dial. To activate these lights:

- Press the **Light** button (usually the top button on the right side). The red and green LEDs will flash for a few seconds, lighting up the Mario design.

Changing Display Modes

To cycle through the different display modes (time, date, seconds):

- Press the **Mode** button (usually the middle button on the right side) to switch between displaying the time, date, and seconds.





Figure 3: Close-up view of the watch face, highlighting the digital time display and Mario character.

Care and Maintenance

Cleaning

To keep your watch in optimal condition:

- Wipe the watch regularly with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the watch's finish or internal components.

Battery Replacement

The watch requires 3 batteries for operation. When the display dims or lights stop flashing, it may be time to replace the batteries. Battery types are specified on the back of the watch case.

- Battery 1: 2xLR1130 (1.5V)
- Battery 2: 1xLR41 (1.5V)

Battery replacement should ideally be performed by a qualified technician to ensure proper sealing and functionality.



Figure 4: Rear view of the watch, displaying the battery information and model number.

Troubleshooting

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Watch display is dim or blank.	Batteries may be low or depleted. Replace batteries as per Maintenance section.
Flashing lights are not working.	Ensure the Light button is pressed firmly. Check battery levels.
Time or date is incorrect.	Refer to the "Setting Time and Date" instructions in the Initial Setup section to re-adjust.

Product Specifications

Model Number: GMA3002

Brand: Accutime

Material: Plastic (Caseback), Silicone (Strap)

Display Type: LCD Digital

Power Source: 3 Product Specific batteries (2xLR1130 1.5V, 1xLR41 1.5V)

Wrist Fit: 5.5" to 8"

Manufacturer: Accutime Watch Corp.

Country of Origin: China

Date First Available: January 10, 2017

Warranty and Support

This Super Mario Kids LCD Digital Watch is manufactured by Accutime Watch Corp. For specific warranty information and support inquiries, please refer to the product packaging or contact Accutime Watch Corp. directly through their official website or customer service channels.

Please retain your proof of purchase for any warranty claims.

© 2024 Accutime Watch Corp. All rights reserved. Super Mario ™ & © 2024 Nintendo.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01MROZRZW>

More documents and user manuals: <https://manuals.plus/>