

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [SIMBA](#) /

> [Simba My Music World Keyboard \(Model 106834018, 23 Keys, 24 cm\) Instruction Manual](#)

SIMBA 106834018

Simba My Music World Keyboard Instruction Manual

Model: 106834018

1. PRODUCT OVERVIEW

The Simba My Music World Keyboard (Model 106834018) is a musical toy designed for children aged 3 years and older. This compact keyboard features 23 keys, allowing young musicians to explore melodies and create their own music. Its durable plastic construction ensures long-lasting play.



Figure 1: Child playing the Simba My Music World Keyboard.

2. SAFETY INFORMATION

WARNING: Not suitable for children under 3 years of age due to small parts that may present a choking hazard.

- Adult supervision is recommended during play.

- Keep the product away from water and moisture.
- Do not attempt to disassemble or modify the keyboard.
- Ensure batteries are inserted correctly and disposed of responsibly.

3. SETUP AND BATTERY INSTALLATION

The Simba My Music World Keyboard requires 2 AA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the underside of the keyboard.
2. Using a screwdriver (not included), carefully open the battery compartment cover.
3. Insert 2 new AA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Note: For optimal performance, use new, high-quality alkaline batteries. Do not mix old and new batteries, or different types of batteries.



Figure 2: Simba My Music World Keyboard in its packaging, highlighting age suitability.

4. OPERATING INSTRUCTIONS

Once the batteries are installed, the keyboard is ready for use.

4.1 Power On/Off

Locate the power switch, usually on the front or side of the keyboard. Slide it to the "ON" position to power on the device. Slide it to "OFF" when not in use to conserve battery life.

4.2 Playing Music

- Press any of the 23 keys to produce musical notes.
- Experiment with different key combinations to create melodies.
- The keyboard is designed for basic musical exploration and creative play.



Figure 3: Close-up of the keyboard keys and design.

5. CARE AND MAINTENANCE

- **Cleaning:** Wipe the keyboard with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Removal:** If the keyboard will not be used for an extended period, remove the batteries to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard does not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with new AA batteries.
No sound or low sound.	Low batteries.	Replace batteries.
Keys are unresponsive.	Internal malfunction or dirt under keys.	Ensure the keyboard is clean. If problem persists, contact customer support.

7. PRODUCT SPECIFICATIONS

Model Number: 106834018

Brand: SIMBA

Number of Keys: 23

Product Dimensions (L x W x H): 4.5 x 30 x 16 cm

Weight: 240 g

Material: Plastic

Recommended Age: 36 months - 8 years

Batteries Required: 2 x AA (not included)

Color: Blue

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Warranty terms and conditions for the Simba My Music World Keyboard are typically provided at the point of purchase or can be found on the official SIMBA website. Please retain your proof of purchase for any warranty claims.

8.2 Customer Support

For further assistance, technical support, or inquiries regarding your product, please contact SIMBA customer service. Refer to the packaging or the official SIMBA website for current contact information.