

[manuals.plus](#) /

› [TELEVES](#) /

› [TELEVES TVMOTION Terrestrial Tri-motion Receiver User Manual](#)

TELEVES 512501

TELEVES TVMOTION Terrestrial Tri-motion Receiver User Manual

Model: 512501

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your TELEVES TVMOTION Terrestrial Tri-motion Receiver, Model 512501. This device is designed to process advanced video signals, ensuring high-quality reception of terrestrial television broadcasts. Please read this manual thoroughly before using the product to ensure optimal performance and safety.

2. SETUP

2.1 Unpacking

Carefully remove all components from the packaging. Ensure all items listed below are present:

- TELEVES TVMOTION Receiver (Model 512501)
- Remote Control
- Power Adapter
- User Manual (this document)

2.2 Connections

Follow these steps to connect your receiver to your television and antenna:

1. **Antenna Connection:** Connect your terrestrial antenna cable to the 'ANT IN' port on the back of the receiver.
2. **HDMI Connection:** Connect an HDMI cable from the 'HDMI OUT' port on the receiver to an available HDMI input on your television. This receiver has a total of 1 HDMI port.
3. **Power Connection:** Connect the power adapter to the 'DC IN' port on the receiver, then plug the adapter into a wall outlet.
4. **USB Connection (Optional):** For multimedia playback or software updates, connect a USB device to the USB port.



This image shows the front panel of the TELEVES TVMOTION Terrestrial Tri-motion Receiver, highlighting its compact design and user interface elements.

3. OPERATING INSTRUCTIONS

3.1 First Time Use

After connecting all cables and powering on the receiver, your television should display the initial setup wizard. Follow the on-screen prompts to select your language, country, and perform an automatic channel scan. This process will detect and store all available terrestrial channels.

3.2 Basic Operation

The receiver is primarily controlled using the provided remote control. Ensure the remote control has batteries installed and is pointed towards the front panel of the receiver.

- **Power Button:** Turns the receiver on or off (standby mode).
- **Channel Up/Down:** Navigates through television channels.
- **Volume Up/Down:** Adjusts the audio volume.
- **Menu Button:** Accesses the main menu for settings, channel management, and other features.
- **OK/Enter Button:** Confirms selections in menus.

- **Navigation Buttons (Arrows):** Moves through menu options.
- **EPG (Electronic Program Guide):** Displays program information.
- **Audio Settings:** This receiver supports 5.1 surround sound channel configuration. Adjust audio settings as needed through the menu.

4. MAINTENANCE

To ensure the longevity and optimal performance of your TELEVES TVMOTION receiver, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the receiver. Do not use liquid cleaners, aerosols, or abrasive materials, as these can damage the finish or internal components.
- **Ventilation:** Ensure the receiver has adequate ventilation. Do not block any ventilation openings. Avoid placing the unit in enclosed spaces or on soft surfaces that may obstruct airflow.
- **Power Off:** If the receiver will not be used for an extended period, disconnect it from the power outlet.
- **Environmental Conditions:** Avoid exposing the receiver to extreme temperatures, humidity, or direct sunlight.

5. TROUBLESHOOTING

If you encounter issues with your receiver, consult the table below for common problems and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
No picture or sound	Loose cable connections; Incorrect input selected on TV; Receiver not powered on.	Check all cable connections (HDMI, antenna, power). Ensure the TV is on the correct HDMI input. Power on the receiver.
Poor picture quality	Weak antenna signal; Antenna not properly aligned.	Check antenna connection. Adjust antenna position for better signal reception. Perform a channel rescan.
Remote control not working	Dead batteries; Obstruction between remote and receiver; Remote not pointed correctly.	Replace remote control batteries. Remove any obstructions. Point the remote directly at the receiver's front panel.
No channels found during scan	Antenna not connected; No terrestrial signal in the area; Incorrect country selected.	Verify antenna connection. Check for terrestrial broadcast availability in your location. Re-run setup and ensure correct country selection.

6. SPECIFICATIONS

Below are the technical specifications for the TELEVES TVMOTION Terrestrial Tri-motion Receiver, Model 512501:

Feature	Value

Feature	Value
Manufacturer	Televes
Manufacturer Product ID	512501
Product Model Number	512501
Number of Products	1
Special Features	Advanced video signal processing
ASIN	B01MRU7CSM
First Available Date	December 5, 2016
Brand	TELEVES
Connectivity Technology	USB
Compatible Devices	Television
Total HDMI Ports	1
Surround Sound Channel Configuration	5.1
Output Power	5 Watts
Number of Channels	6
Control Method	Remote Control

7. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card included in the product packaging or visit the official TELEVES website. In case of technical issues or for further assistance, please contact TELEVES customer support. Keep your purchase receipt as proof of purchase for warranty claims.