



Manuals.plus /

› Philips /

› Philips 34153 7W Wall Light User Manual

## Philips 34153

# Philips 34153 7W Wall Light User Manual

Model: 34153 | Brand: Philips

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient use of your Philips 34153 7W Wall Light. Please read these instructions carefully before installation and operation, and retain them for future reference.

The Philips 34153 is a 7W LED wall light designed for indoor use, providing warm white illumination. Its modern design with soft, rounded corners and white color accentuates the gentle throw of light in both directions, making it suitable for various interior settings.



Figure 1: Philips 34153 7W Wall Light in a contemporary setting.

## 2. SAFETY INFORMATION

---

**WARNING:** To avoid electric shock, fire, or injury, always turn off the power at the main circuit breaker or fuse box before installation, servicing, or cleaning.

- Ensure the power supply voltage matches the product's requirements (220-240V, 50Hz).
- Installation should be performed by a qualified electrician in accordance with local electrical codes.
- Do not modify the product in any way.
- Keep away from water and moisture. This product is designed for indoor use only.
- Do not look directly into the LED light source when it is illuminated.
- Dispose of packaging materials responsibly.

## 3. PACKAGE CONTENTS

---

Carefully unpack the box and ensure all items are present and undamaged.

- 1 x Philips 34153 7W LED Wall Light
- Installation hardware (screws, wall plugs)
- Instruction Manual (This document)

## 4. SPECIFICATIONS

---

Feature	Detail
Brand	Philips
Model Number	34153
Light Type	LED
Wattage	7 Watts
Light Colour	Warm White
Colour Temperature	3000 Kelvin
Material	Plastic
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Accepted Voltage Frequency	220 to 240 Volts and 50 Hertz
Control Method	Push Button
Item Weight	598.74 Grams

## 5. INSTALLATION

This wall light is designed for surface mounting. Professional installation by a qualified electrician is recommended.

1. **Prepare the Installation Area:** Choose a suitable indoor location on a wall. Ensure the power supply is turned off at the circuit breaker.
2. **Mark Drilling Points:** Hold the light fixture against the wall at the desired mounting location. Use a pencil to mark the positions for drilling holes.
3. **Drill Holes:** Drill holes at the marked positions. Insert appropriate wall plugs (if required for your wall type).
4. **Connect Wiring:** Carefully connect the household electrical wires to the fixture's wires according to local electrical codes (typically Live to Live, Neutral to Neutral, Earth to Earth). Ensure all connections are secure.
5. **Mount the Fixture:** Align the fixture with the drilled holes and secure it to the wall using the provided screws. Do not overtighten.
6. **Restore Power:** Once the fixture is securely mounted and wired, restore power at the circuit breaker.



Figure 2: Example of the wall light providing ambient illumination above a workspace.

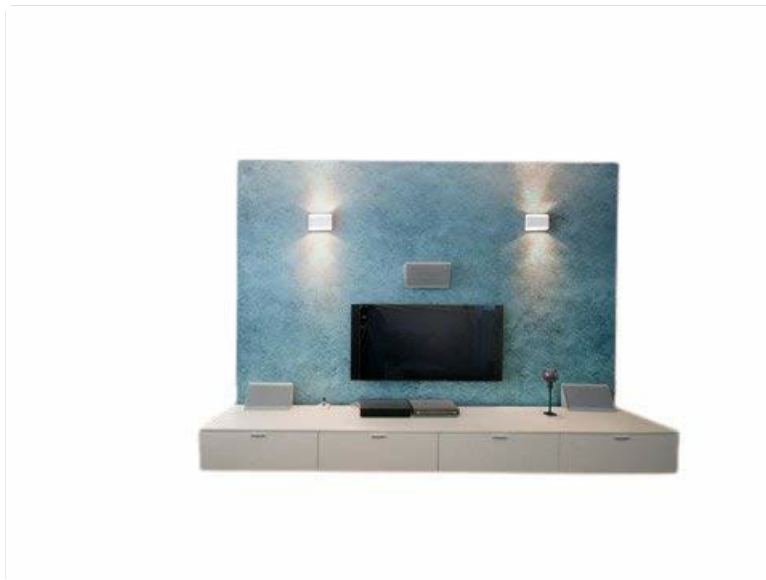


Figure 3: Multiple wall lights used to create a balanced lighting effect in a living area.



Figure 4: The wall light's "wall washer" effect, casting light both upwards and downwards. Note: This product is specified for indoor use.

## 6. OPERATION

The Philips 34153 7W Wall Light is operated via a standard wall switch (push button control) connected to its power supply. Once installed and power is restored, simply use the wall switch to turn the light on or off.



Figure 5: The EyeComfort feature indicates the light is designed for visual comfort.

## 7. MAINTENANCE

---

To ensure the longevity and optimal performance of your wall light, follow these maintenance guidelines:

- **Cleaning:** Ensure the power is off before cleaning. Wipe the fixture with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electrical components.
- **Bulb Replacement:** This fixture uses integrated LED technology. The LED light source is not user-replaceable. If the light source fails, the entire fixture may need to be replaced.

## 8. TROUBLESHOOTING

---

If you encounter issues with your Philips 34153 7W Wall Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	<ul style="list-style-type: none"><li>◦ No power to the fixture.</li><li>◦ Loose wiring connection.</li><li>◦ Faulty wall switch.</li></ul>	<ul style="list-style-type: none"><li>◦ Check the circuit breaker or fuse.</li><li>◦ Ensure all wiring connections are secure (<i>consult a qualified electrician</i>).</li><li>◦ Test or replace the wall switch.</li></ul>
Light flickers	<ul style="list-style-type: none"><li>◦ Loose wiring.</li><li>◦ Incompatible dimmer switch (if applicable, though this model uses push button).</li></ul>	<ul style="list-style-type: none"><li>◦ Check wiring connections (<i>consult a qualified electrician</i>).</li><li>◦ Ensure no dimmer switch is used unless explicitly stated as compatible.</li></ul>

If the problem persists after trying these solutions, contact Philips customer support or a qualified electrician.

## 9. PRODUCT OVERVIEW VIDEO

---

Your browser does not support the video tag.

Video 1: A brief overview of the Philips 34153 7W Wall Light, highlighting its wattage, warranty, and surface mount type.

## 10. WARRANTY AND SUPPORT

---

**Warranty:** This Philips 34153 7W Wall Light comes with a 1-year warranty on the product from the date of invoice. Please retain your purchase receipt as proof of purchase for warranty claims.

**Customer Support:** For technical assistance, warranty claims, or further information, please visit the official Philips website or contact their customer service department. You can find more details on the Philips Store on Amazon.