

[manuals.plus](#) /

- › [Charter](#) /
- › [Charter 4-Device Universal Remote Control 1060BC1-0582-003-R Instruction Manual](#)

Charter 1060BC1-0582-003-R

Charter 4-Device Universal Remote Control Instruction Manual

Model: 1060BC1-0582-003-R

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Charter 4-Device Universal Remote Control, model 1060BC1-0582-003-R. This remote is designed to control up to four different entertainment devices, including your television (TV), cable box (CBL), DVD player (DVD), and an auxiliary device (AUX).

2. REMOTE CONTROL LAYOUT

Familiarize yourself with the buttons and their functions on your Charter Universal Remote Control.



Image: The Charter 4-Device Universal Remote Control, model 1060BC1-0582-003-R. The remote is silver-grey with various buttons in different colors (red, blue, green, grey, black). Key sections include: **Top Section** with SYSTEM ON/OFF, SET UP, POWER, TV, DVD, AUX, CBL buttons. **Middle Section** features MENU, GUIDE, INFO, PAGE, OK/SELECT navigation cluster, EXIT, A, B, C, D colored buttons, LAST, DAY, VOL, CH, ON DEMAND, MUTE, FAV, MY DVR, LIVE, FFWD, REC, REW, PLAY, PAUSE, STOP buttons. **Bottom Section** contains numeric keypad (0-9), TV/VCR, INPUT, ASPECT, PICTURE-IN-PICTURE, ON-OFF, VIDEO, SWAP, MOVE, SOURCE, and CH +/- buttons. The Charter Communications logo is visible at the bottom right.

- **POWER:** Turns the selected device on or off.
- **SYSTEM ON/OFF:** Turns all programmed devices on or off simultaneously.
- **TV, DVD, AUX, CBL:** Device selection buttons. Press to select the device you wish to control.
- **MENU:** Accesses the menu of the selected device.
- **GUIDE:** Displays the program guide (typically for CBL).
- **INFO:** Displays program information.
- **PAGE +/-:** Navigates through pages in menus or guides.
- **OK/SELECT & Arrow Buttons:** Used for navigation and selection within menus.
- **VOL +/-:** Adjusts the volume.
- **CH +/-:** Changes channels.
- **MUTE:** Silences the audio.
- **MY DVR:** Accesses your Digital Video Recorder functions.

- **PLAY, PAUSE, STOP, REW, FFWD, REC:** Standard media playback controls.
- **Numeric Keypad (0-9):** For direct channel entry or menu selections.
- **INPUT:** Changes the input source on your TV.
- **ASPECT:** Adjusts the screen aspect ratio.
- **ON DEMAND:** Accesses On Demand services.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover down and lift it off.
3. Insert two fresh Lithium batteries (not included), matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

3.2 Device Programming

To control your devices, the remote must be programmed with the correct codes. The programming method typically involves entering a specific code for each device type (TV, DVD, AUX, CBL).

General Programming Steps (Consult Charter Support for specific codes):

1. Turn on the device you wish to program (e.g., your TV).
2. Press and hold the **SET UP** button until the selected device button (e.g., TV) blinks twice.
3. Press the device button you want to program (e.g., **TV**). The button will remain lit.
4. Enter the 3, 4, or 5-digit programming code for your device brand. Refer to the code list provided by Charter Communications or their online support.
5. If the code is accepted, the device button will blink twice. If it blinks once, the code was not accepted, and you should try another code.
6. Test the remote by pressing the **POWER** button. If the device turns off, the programming was successful. If not, repeat the steps with a different code.
7. Repeat this process for your DVD player, cable box, and any auxiliary device.

For a comprehensive list of device codes and detailed programming instructions, please refer to the official Charter Communications website or contact their technical support.

4. OPERATING THE REMOTE CONTROL

Once programmed, select the desired device by pressing its corresponding button (TV, DVD, AUX, CBL) before performing any function.

- **Power On/Off:** Press the **POWER** button to turn the selected device on or off. Use **SYSTEM ON/OFF** to control all programmed devices.
- **Volume Control:** Use **VOL +** to increase volume and **VOL -** to decrease volume. Press **MUTE** to silence the audio.
- **Channel Navigation:** Use **CH +** or **CH -** to change channels. Enter channel numbers directly using the numeric keypad.
- **Menu and Guide:** Press **MENU** to access device menus or **GUIDE** for program listings. Use the arrow buttons and **OK/SELECT** to navigate and confirm selections.
- **DVR/Playback Functions:** Use **MY DVR** to access DVR content. Use **PLAY, PAUSE, STOP, REW**

(Rewind), FFWD (Fast Forward), and REC (Record) for media playback control.

- **Input Selection:** Press INPUT to cycle through available input sources on your TV.
- **On Demand:** Press the ON DEMAND button to access video on demand services provided by your cable provider.

5. MAINTENANCE

- **Cleaning:** To clean the remote, wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or when the device buttons no longer light up consistently. Always replace both batteries with new ones of the same type (Lithium).
- **Storage:** Store the remote in a dry place away from extreme temperatures and direct sunlight.

6. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly and are not depleted. Replace if necessary.
- Ensure there are no obstructions between the remote and the device.
- Verify that the correct device button (TV, DVD, AUX, CBL) is selected before pressing a function button.

- **Device not programming:**

- Ensure you are using the correct programming code for your device's brand and model.
- Try alternative codes for your device brand.
- Contact Charter technical support for assistance with programming codes.

- **Some functions not working:**

- Not all functions on a universal remote may be compatible with every device. Some advanced features might require the original remote.
- Ensure the remote is pointed directly at the device's infrared sensor.

If issues persist, consult the Charter Communications technical support or their online resources for further assistance.

7. SPECIFICATIONS

Brand	Charter
Model Number	1060BC1-0582-003-R
Max Number of Supported Devices	4
Compatible Devices	Charter Devices (TV, DVD, CBL, AUX)
Battery Type	Lithium (2x AAA, not included)
Color	Grey

Special Feature

Universal Remote

8. WARRANTY INFORMATION

This product does not come with an expressed warranty. For details regarding returns or replacements, please refer to your purchase agreement or contact the seller directly.

9. SUPPORT AND FURTHER INFORMATION

For additional assistance, device programming codes, or troubleshooting not covered in this manual, please contact Charter Communications technical support or visit their official website. Online resources often provide updated code lists and detailed guides.

Charter Technical Support: Please refer to your service provider's contact information.

Online Resources: Search for "Charter Universal Remote 1060BC1-0582-003-R programming" on the official Charter Communications website.