

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TOTO](#) /

› [TOTO THU9852 WASHLET A200 Remote Control Assembly User Manual](#)

## TOTO THU9852

# TOTO THU9852 WASHLET A200 Remote Control Assembly User Manual

Model: THU9852

## INTRODUCTION

---

This manual provides instructions for the installation, operation, and maintenance of the TOTO THU9852 Remote Control Assembly for the WASHLET A200. Please read this manual thoroughly before using the product to ensure proper function and longevity.

## PRODUCT OVERVIEW


---

The TOTO THU9852 remote control is designed for easy and convenient operation of your WASHLET A200. Below is an illustration of the remote control with its primary functions labeled.

# REMOTE

EASY AND CONVENIENT TO USE

WASHLET® A200

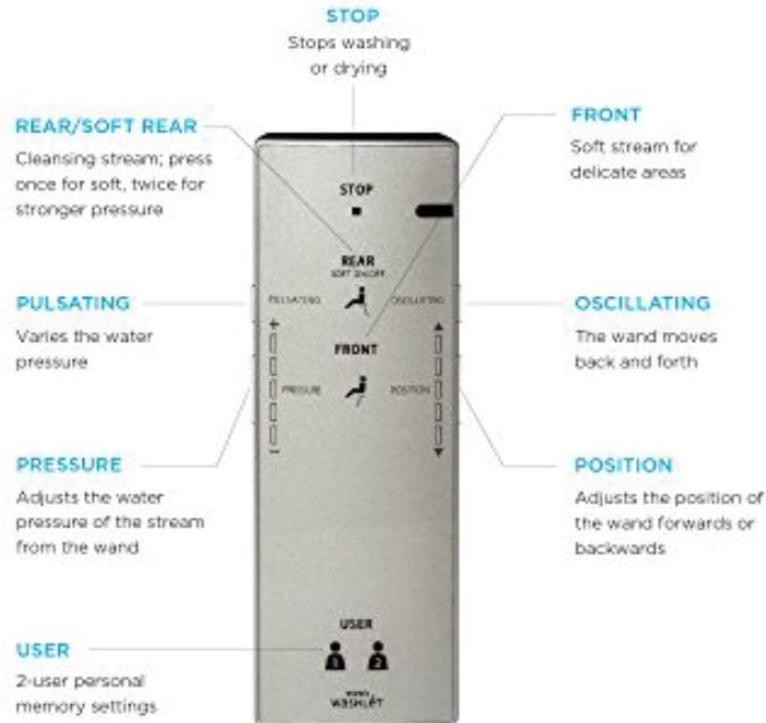

Interface of the remote control is subject to change.  
Bracket for wall-mounting included.

**Image:** TOTO WASHLET A200 Remote Control. This image displays the front face of the remote control, highlighting various buttons and their corresponding functions. The remote is rectangular, light gray, with black buttons and text. Key functions include STOP, REAR/SOFT REAR, FRONT, PULSATING, OSCILLATING, PRESSURE, POSITION, and USER settings.

## Remote Control Functions:

- **STOP:** Stops the washing or drying cycle.
- **REAR/SOFT REAR:** Activates the cleansing stream. Press once for a soft stream, press twice for stronger pressure.
- **FRONT:** Provides a soft stream specifically for delicate areas.
- **PULSATING:** Varies the water pressure during the wash cycle.
- **OSCILLATING:** Moves the wand back and forth for a wider cleansing area.
- **PRESSURE:** Adjusts the water pressure of the stream from the wand. Typically indicated by '+' and '-' buttons.
- **POSITION:** Adjusts the position of the wand forwards or backwards. Typically indicated by arrow buttons.
- **USER:** Allows for 2-user personal memory settings, enabling quick recall of preferred wash settings.

*Note: The interface of the remote control is subject to change. A bracket for wall-mounting is included with the assembly.*

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert two (2) AA alkaline batteries, ensuring correct polarity (+/-). Two AA batteries are included with the product.
4. Close the battery compartment cover securely.

### 2. Wall Mounting (Optional)

A wall-mounting bracket is included for convenient storage and access to your remote control.

1. Choose a suitable location near your WASHLET A200, ensuring easy reach.
2. Use appropriate fasteners (not always included, check packaging) to secure the wall-mounting bracket to the wall.
3. Slide the remote control into the mounted bracket.

## OPERATING INSTRUCTIONS

---

Ensure the remote control has fresh batteries and is within range of the WASHLET A200 unit.

- **To Start a Wash Cycle:** Press the **REAR/SOFT REAR** button for a standard wash or the **FRONT** button for a delicate wash.
- **To Adjust Water Pressure:** Use the **PRESSURE '+'** and **'-'** buttons to increase or decrease the water pressure.
- **To Adjust Wand Position:** Use the **POSITION** arrow buttons to move the wand forwards or backwards.
- **To Activate Pulsating Wash:** Press the **PULSATING** button during a wash cycle.
- **To Activate Oscillating Wash:** Press the **OSCILLATING** button during a wash cycle.
- **To Stop a Cycle:** Press the **STOP** button at any time to end the washing or drying process.
- **Using User Memory Settings:** The **USER** buttons (1 and 2) allow you to save and recall personalized settings for two different users. Refer to your WASHLET A200 main unit manual for detailed instructions on programming these settings.

## MAINTENANCE

---

- **Cleaning:** Wipe the remote control with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the surface.
- **Battery Replacement:** Replace batteries when the remote control's performance diminishes or if the indicator light (if present) signals low battery. Always use new AA alkaline batteries.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and damage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote control is unresponsive.	Dead or incorrectly installed batteries.	Check battery polarity. Replace with new AA alkaline batteries.
Remote control range is reduced.	Low batteries or obstruction between remote and WASHLET unit.	Replace batteries. Ensure a clear line of sight to the WASHLET A200 unit.
Specific WASHLET function not working.	Issue with the WASHLET A200 unit itself.	Refer to the WASHLET A200 main unit's instruction manual for troubleshooting specific functions.

## SPECIFICATIONS

Feature	Detail
Model Number	THU9852
Brand	TOTO
Material	Plastic
Color	White
Item Weight	6.4 ounces
Product Dimensions	10 x 10 x 10 inches
Batteries Required	2 AA batteries (included)
Battery Type	Alkaline
Included Components	Remote Control Assembly A200
UPC	739268283138

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your complete TOTO WASHLET A200 unit or visit the official TOTO website. You may also contact TOTO customer service directly for assistance with your THU9852 Remote Control Assembly.

**TOTO Customer Service:** Please refer to your WASHLET A200 main unit manual or the TOTO official website for contact details.